

CRL Adjustable Height Standoff Cap Installation Steps

STEP1

Set Fastener to Surface



STEP2

Thread Base onto Fastener and Internal Screw on Top of Base



STEP3

Place Adjustable Collar onto Base




STEP4

Align Glass on Standoff Base with Collar



STEP5

Turn Screw Counter Clockwise to Raise or Clockwise to Lower Collar for Leveling

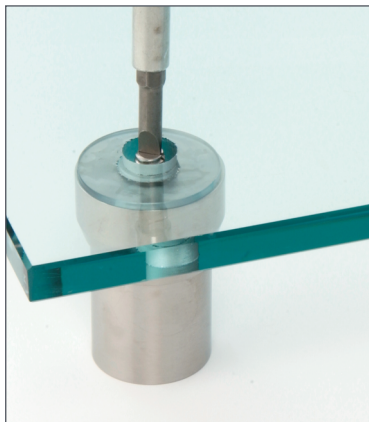

STEP6

Tighten Cap with Cat. No. SSW12 Wrench



NOTE: Due to the diversity of applications, weight limitations for Standoff Systems are dependent upon wall or substrate anchoring and material strengths.