



VERTICAL HANDLE AND ANGLE-GRIP INSTRUCTIONS



OPERATION

To Attach
1) Position the hand cup on the contact surface so the red line will be visible if it should appear while lifting the load.

Caution: Some rubber compounds may stain light surfaces or deform soft coatings. When in doubt, test a sample of such materials for permanent effects.

2) Press the rubber pad against the load as needed to form a continuous seal.

Caution: Make sure the load is supported as needed to prevent breakage.

3) Pump the plunger until the cup attaches completely. When the red line is hidden, vacuum is sufficient for lifting.

4) Check the plunger frequently to make sure the cup remains securely attached. If the red line appears while lifting, set down the load immediately and pump the plunger until the red line is hidden again (see WARNINGS).

To Release

1) Set the load on a secure support.
2) Pull a release tab until the cup disengages completely.

Caution: Remove the cup when not in use.

WARNINGS

Failure to observe WARNINGS could damage the hand cup or the load, or cause injury to the user.

- Do not use the cup to lift loads that exceed the Maximum Load Capacity (see SPECIFICATIONS).
- Do not use the cup to support a person.
- Do not leave a cup unattended which could injure people if it disengages unexpectedly.
- Do not place the rubber pad against surfaces which could damage a sealing edge.
- Avoid conditions that could cause the cup to slip or to disengage prematurely, such as: contaminants, cuts or scratches in the pad face or load surface; attaching the cup to porous materials; or applying pressure against the pad edge.
- Do not use the cup to lift when the red line is visible. If the red line reappears frequently, discontinue use and see Service.
- Do not allow anything to interfere with free movement of the plunger while the cup is attached.
- Do not touch any release tab while lifting.
- Do not use harsh chemicals (such as solvents or gasoline) or rubber cleaners and conditioners to clean the pad.

SPECIFICATIONS

Product Description
These tools use vacuum to support loads for manual handling, as follows:

- Environmental Conditions**
- Temperatures: 10° to 120° F (-12° to 49° C)
 - Elevation: up to 5,000' (1,524 m).

Note: Maximum Load Capacity includes a 3:1 design factor and requires:
• Attachment on clean, dry, relatively smooth, flat, nonporous surfaces¹
• Minimum vacuum level of 17½" Hg (-59 kPa)
• Friction coefficient of 1



Model	Rubber Pad	Nominal Diameter	Max. Load Capacity ²	Load Surface
W6100 W6100WBP ³	LJ6	6" (15 cm)	70 lbs (32 kg)	flat or curved
TL6AG	TL6			

¹ Moisture or contaminants can reduce the slip resistance of the rubber pad.
² The Maximum Load Capacity is based on lifting under controlled conditions with new hand cups attached to horizontal load surfaces. Many factors can reduce the capacity, such as lifting a load when the cup is attached to a vertical or inclined surface, or lifting a load that applies leverage to the cup. Contact an authorized dealer or visit crlaurence.com for more information.
³ See separate instructions about the Low Vacuum Audio Alarm.

MAINTENANCE

Service
If the hand cup does not function normally, first clean the rubber pad according to the directions to follow. If the condition persists, see Inspection and TROUBLESHOOTING.
Note: Replace the rubber pad at least once every 2 years or whenever damage is discovered (see Inspection).

- Cleaning**
- 1) Remove the felt filter from the rubber pad.
 - 2) Use a clean sponge or lint-free cloth to apply soapy water or another mild cleanser to the pad face (see WARNINGS).
Caution: To prevent liquid from contaminating the pump, hold the cup face-down or cover the suction hole in the filter recess.
 - 3) Wipe all residue from the pad face.
 - 4) Allow the pad to dry and reinstall the felt filter.



SCAN OR CLICK TO WATCH INSTRUCTIONAL VIDEO

- Inspection**
Inspect the cup regularly for the following faults:
- cuts or damage to sealing edges of rubber pad.
 - cracks or dents in handle or pump.
 - reappearance of red line soon after attaching cup.
 - sluggishness or dramatic changes in pump action.
 - slick surface or stiffness of rubber pad.
 - felt filter missing from pad face.
- Correct any faults before using the cup.

TROUBLESHOOTING

Scan or click the following code for:



Troubleshooting Guide & Replacement Parts

Storage

Store the cup in a clean, dry location out of direct sunlight. Use the cover to protect the pad face from damage.

LIMITED WARRANTY

Wood's Powr-Grip vacuum cups are guaranteed to be free of any defects in manufacturing or materials **for 3 years from the date of purchase.**

- Warranty does **NOT** cover:
- ✓ Cut or scratched rubber parts.
 - ✓ Parts damaged by customer.
 - ✓ Abnormal wear and tear.
 - ✓ Abuse, misuse or neglect.
 - ✓ Modified products.



KEEP FOR YOUR RECORDS

Record this information, in case you need to claim Warranty service.

Date of Purchase:

Purchased From:

Model Number:

Stock Number:

C.R. LAURENCE CO., INC.
 PHONE TOLL FREE (800) 421-6144
 FAX TOLL FREE (800) 262-3299
crlaurence.com