

Installation and Adjustment of Door Stop/ Strike Door Stop with MANUAL STRIKE

INSTALLATION

Install strike in header using provided socket head cap screws. Apply thread locker to bolt threads prior to tightening with Allen wrench.


After door installation, when the door closes and comes to rest on the rubber stop pad(s) the retractable bolt should automatically move upward engaging the strike as illustrated. Distance from the Face of the Glass (F.O.G) to the center of the handle should be 2”.

If retractable bolt is not engaging with the strike, door stops should be moved in, or if retractable bolt is lose inside the strike (doors are rattling), stops should be moved out.


ADJUSTMENT

To adjust the stop, remove the rubber end piece which uncovers a socket for a 1/4” Allen wrench, insert wrench and rotate in or out as needed. One full turn is equal to approximately 1/16” of adjustment.

DOOR STOP / STRIKE APPLICATIONS

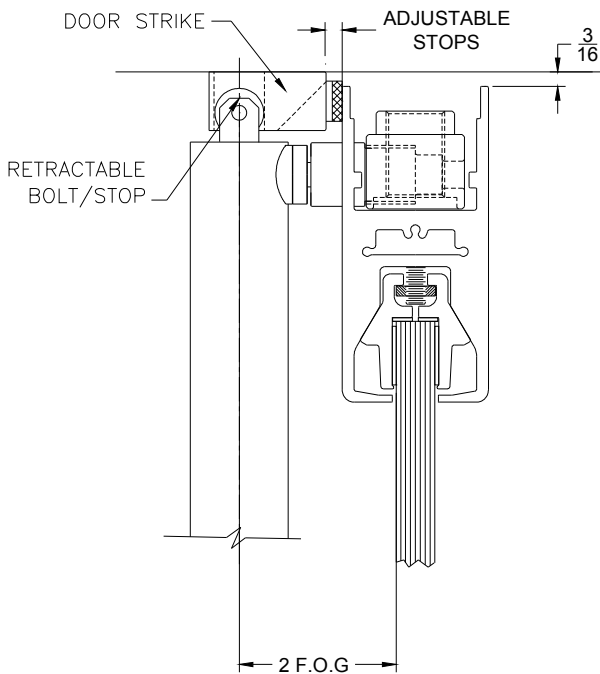

DOOR RAIL MOUNTING

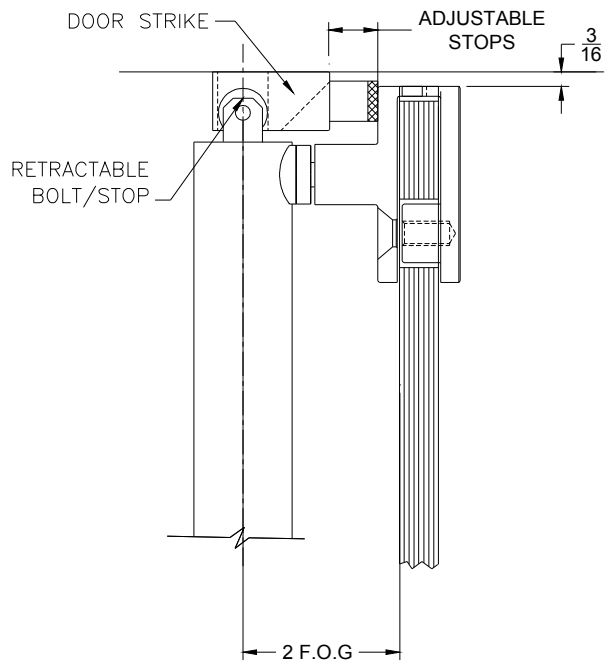

DIRECT TO GLASS MOUNTING

Bolt Adjustment for Proper Engaging With the Strike

1. The retractable bolt can be adjusted up and down. The centerline of the roller at the top of the retractable bolt should penetrate the strike for a minimum 1/8". The maximum upward adjust is 3/4" measured from the top of the handle tubing to the top of the bolt that retains the roller.
2. To make this adjustment, with an Allen wrench, remove the flat head screw at the top of Panic Handle. DO NOT Remove the Slotted Head Screw.
3. Rotate the bolt in either direction full 360° turn to obtain desired height adjustment.
4. Rotate bolt to align interior threaded hole with countersunk hole in tubing.
5. Replace flat head screw.

FAILURE TO REPLACE THIS SCREW WILL ALLOW RETRACTABLE BOLT TO RANDOMLY ROTATE CAUSING THE BOLT TO IMPROPERLY ENGAGE THE STRIKE.

