

FOUR COMMONLY REQUIRED REPAIRS - OPPORTUNITY KNOCKING

For over 20 years C.R. Laurence Co., Inc. has provided Frameless Shower Door Hardware for millions of residential and hotel shower door units. Due to improper cleaning or hard water, hardware and seals can deteriorate. Some of these early units are now ready for service or replacement. This is another opportunity to service your customer and secure future business. In this catalog we show a variety of the most commonly asked for Replacement Hardware. If you don't see what you want please call our Frameless Shower Technical Department.

DOOR ALIGNMENT

After years of use the shower door has a tendency to get out of alignment and start making contact with other surfaces. If not corrected door glass breakage is the most common result.



Loosen the cover plate and align the door.



After alignment, tighten the cover plate screws by hand. Do not use a power tool, or you risk damaging the screw heads.

CORRODED COVER PLATE OR SCREWS

Because of hard water or improper cleaning, interior cover plates and screws have a tendency to become dull or corroded over a period of time. Replacement will bring back the original luster.



Block the door to maintain alignment and remove the cover plate. Clean glass in gasket area.



Install a new gasket and interior cover plate, replace screws, then secure in place.

INSTALLATION TIP:

From the inside of the shower, wedge the glass door to prevent movement. Then remove the existing cover plate. Clean the area around the existing cover plate and make sure the gasket is aligned. Now install the new Cover Plate. Tighten the Cover Plate screws by hand so you won't damage the screw heads. Allow gaskets to settle 10 minutes or so and re-tighten. Do a third time, in another 10 minutes if time allows.



DOOR HANDLES OR KNOBS

Alkaline, rings, and wear and tear will take away the newness and luster of the handle or knob over a period of time. A simple replacement of the handle or knob brings the shower back to life.




Remove existing handle or knob and discard.



Install the new handle or knob and secure washers and set screws.

SEALS AND WIPES

As good as seal technology has become, over time the water seal or wipe will deteriorate or become brittle and allow leakage. Removing and replacing these seals will minimize water leaks and bring the shower back to it's original condition.

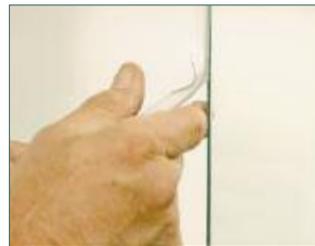

Remove the damaged or brittle water seal or wipe.



Cut the new and matching water seals to the same length as the originals and install.



C.R. LAURENCE COMPANY

852 | crlaurence.ca crlaurence.com.au crlaurence.co.uk crlaurence.de crlaurence.eu

crlaurence.com