

INSTRUCTIONS FOR ESC SERIES ESCUTCHEON LEVER TRIM Series Rim and Vertical Rod Exit Device

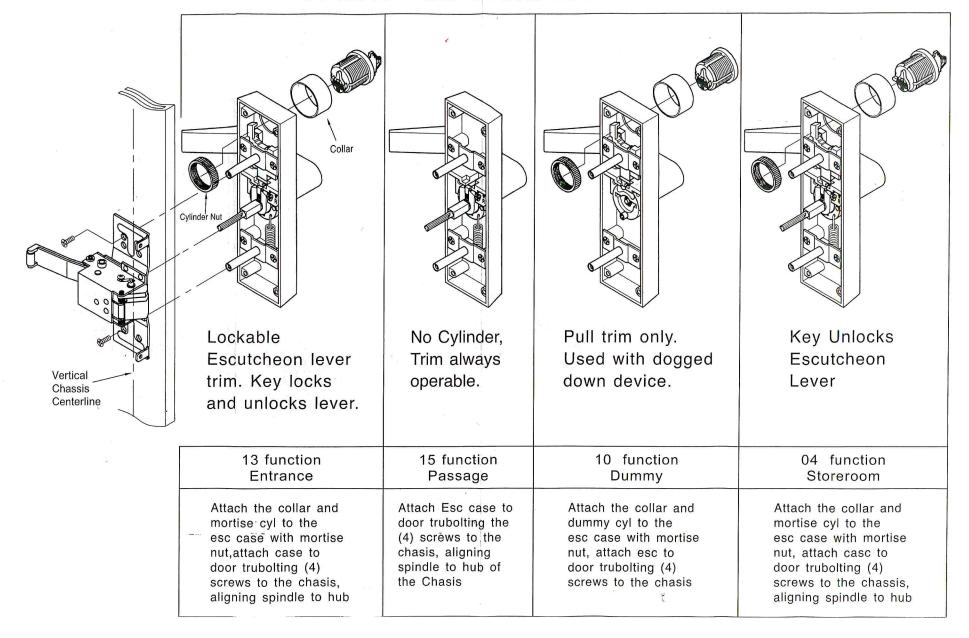


ESCUTCHEON Lever Trim

Instructions for changing hand of lever RHR(Reverse Steps for LHR)

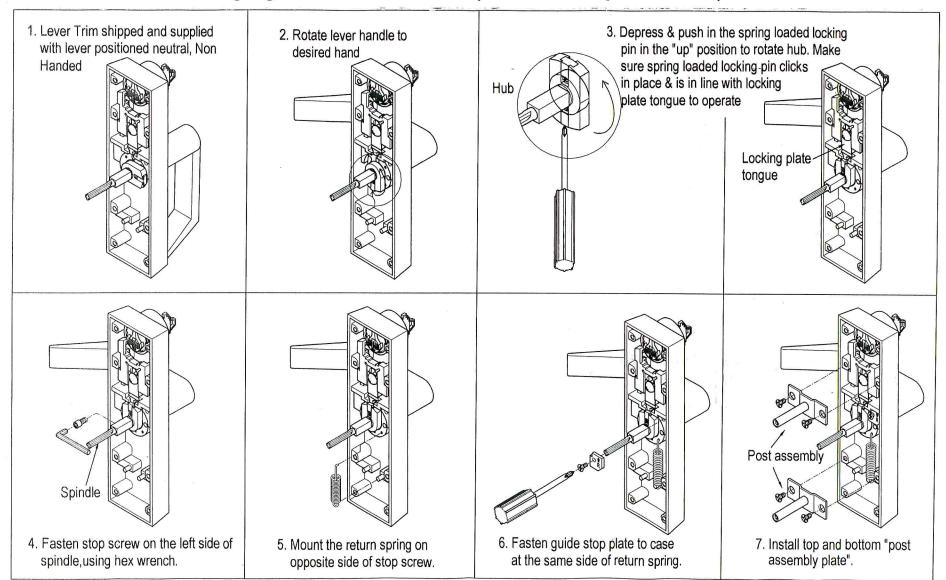

Instructions for replacing cylinder

- 1. With locking plate in down position, unscrew cyl nut and remove the cyl and ring
- 2. Replace cyl by reversing above procedure. Make sure that cyl cam points up and correct length of ring is used

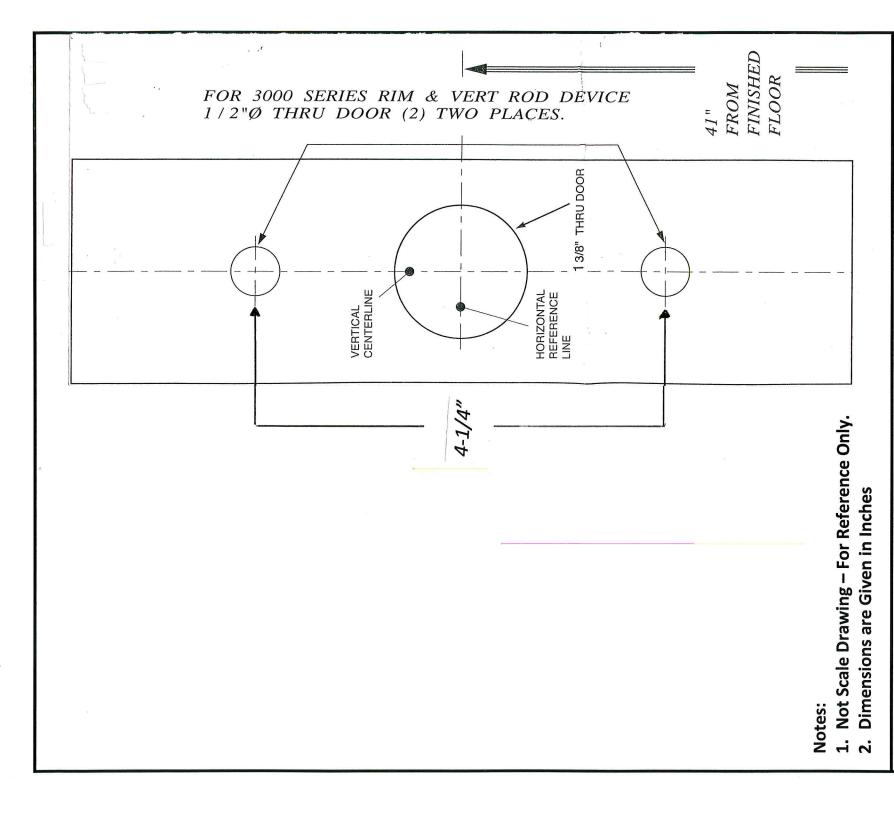

DL51ES

LEVER ENTRY TRIM

C.R. Laurence Co.

IISALUMINUM