crlaurence.com

SENIOR SERENITY SERIES SRSER78 SLIDING DOOR KIT



NOTE: Glass and U-Channels not included.




ORDER OF ASSEMBLY AND INSTALLATION

PARTS LIST	3
SPECIFICATIONS	3
GLASS FABRICATION	4
SLIDING DOOR PREPARATION	5
Unpack Rollers	5
Install Top Rollers	5
SITE PREPARATION	6
Determine Panel Orientation	6
Mark Location for Header Support Bar	6
FRAME FABRICATION	7
Prepare Header Support Bar for Fixed Panel Fittings	7
Prepare for Door Stopper	7
FRAME INSTALLATION 8 - 1	10
Mount Track Holder Fittings	8
Install Door Stopper	8
Install Header	8
Install Fixed Panel Curb Mounts	9
Install Fixed Panel	9
Unpack and Prepare Bottom Door Guide	10
Install Bottom Door Guide	10
SLIDING DOOR INSTALLATION	11
Hang Sliding Door	11
Install Bottom Rollers	11
FINISHING 1	12
Unpack and Install Thru-Glass Pull	12
Install L-Seal	12

IMPORTANT: READ THIS MANUAL THOROUGHLY BEFORE BEGINNING INSTALLATION.




PARTS LIST

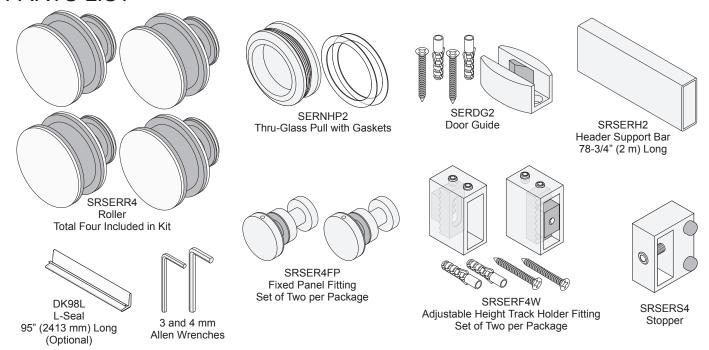

SPECIFICATIONS


Drawing not to scale. Shown from exterior.

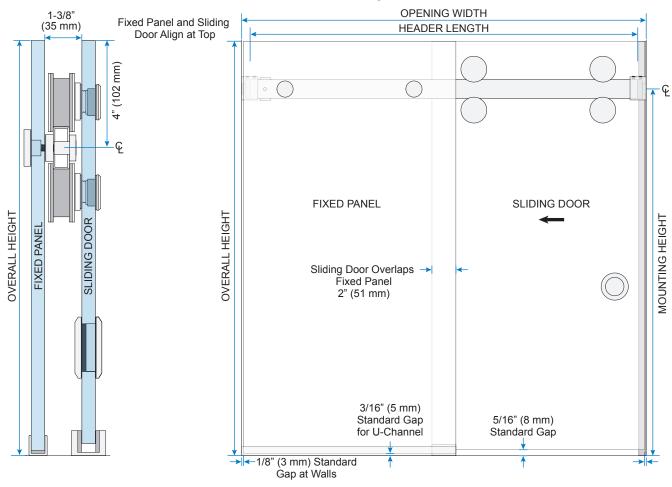



GLASS FABRICATION

Use 1/2" (12 mm) Tempered Glass only. Do not use Laminated Glass.

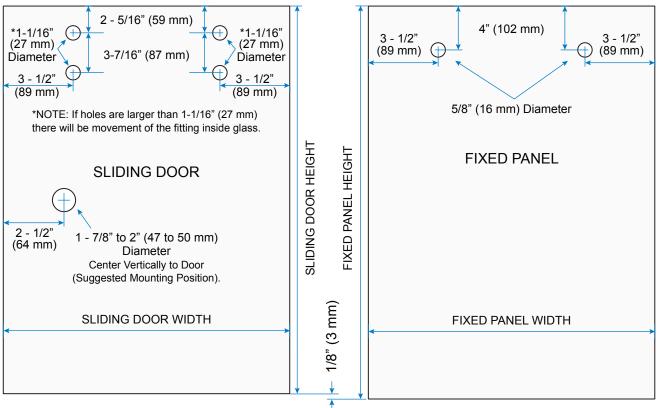


FIXED PANEL AND SLIDING DOOR HEIGHTS

FIXED PANEL: Overall Height minus 3/16" (5 mm)
SLIDING DOOR: Overall Height minus 5/16" (8 mm)


FIXED PANEL AND SLIDING DOOR WIDTHS

2 EVEN PANELS: Overall Width divided by 2, plus 7/8" (22 mm).

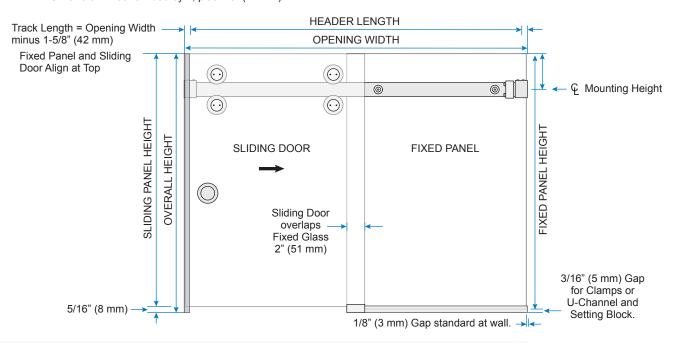

 NOTE: Drawings not shown to scale. Track is cut 1-5/8" (42 mm) less than Opening Width and centered in opening. Overall Height is height from curb/floor to top of glass. Drawings shown from interior.






(1) Unpack and partially disassemble two sets of Rollers.


NOTE: Rollers shipped assembled. Spanner Wrench not included.

Install Top Rollers


- (2) Adjust wheel height.
- 3 Install Top Rollers on Sliding Door.

NOTE: Lower Rollers are installed after door is hung. See Page 10.

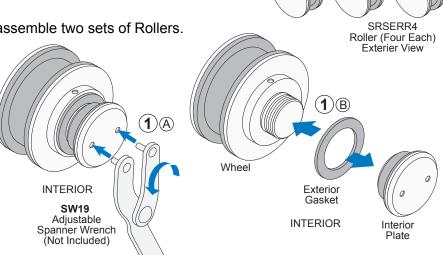

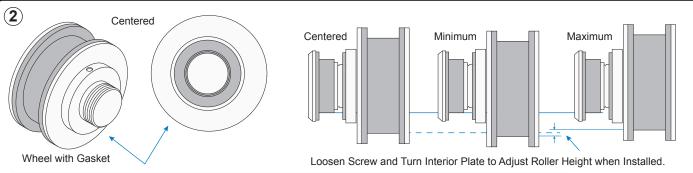

NOTE: Install Rollers with Wheel aligned at center of out-of-round position. This makes it easier to adjust door height.

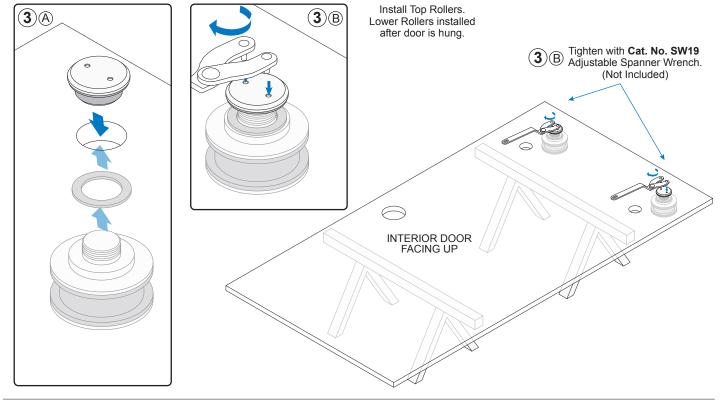



SITE PREPARATION **Determine Panel Orientation**

Determine Fixed Panel placement.

NOTE: Fixed Panel at exterior shown in this manual. Mirror instructions to mount Fixed Panel to interior. CRL SW19 Adjustable Spanner Wrench shown for installation, not included.

FIXED PANEL AT EXTERIOR (TRADITIONAL) FIXED PANEL SLIDING DOOR **EXTERIOR VIEW**

 \bigcirc \bigcirc (\bigcirc) (\bigcirc) SLIDING DOOR **FIXED PANEL EXTERIOR** CURB

FIXED PANEL AT INTERIOR


NOTE: Traditional placement is Fixed Panel on curb side, with mounting plate at interior.


EXTERIOR VIEW

NOTE: Header Support Bar is not centered between Sliding Door and Fixed Panel. When installing Fixed Panel to exterior (traditional placement) allow at least 1-3/16" (30 mm) from edge to install Bottom Guide. When installing Sliding Door to exterior, allow at least 1-5/8" (41 mm) from edge.

Mark Location for Header Support Bar

Mark and drill holes for Header Support Bar.

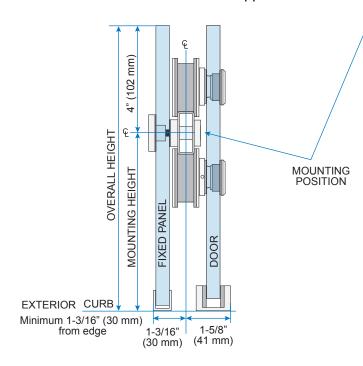

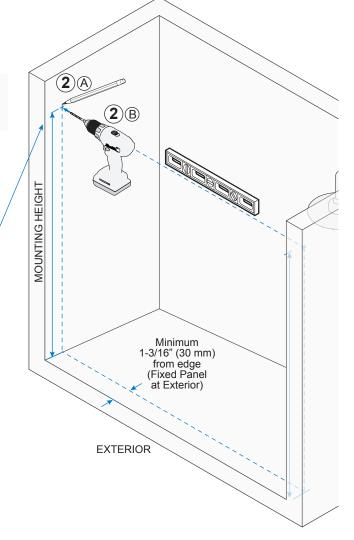





FRAME FABRICATION Prepare Header Support Bar for Fixed Panel Fittings


- (1) Measure opening width at mounting points.
- (2) Cut SRSERH78 Header Support Bar.
- (3) Drill holes for Fixed Panel Fittings.

 
NOTE: Header Support Bar is cut 1-5/8" (42 mm) short from tight dimension and centered in opening, leaving 13/16" (21 mm) gap on each end to mount. Refer to Fixed Panel Glass fabrication and gap allowance between Fixed Panel and wall to determine mounting hole placement.

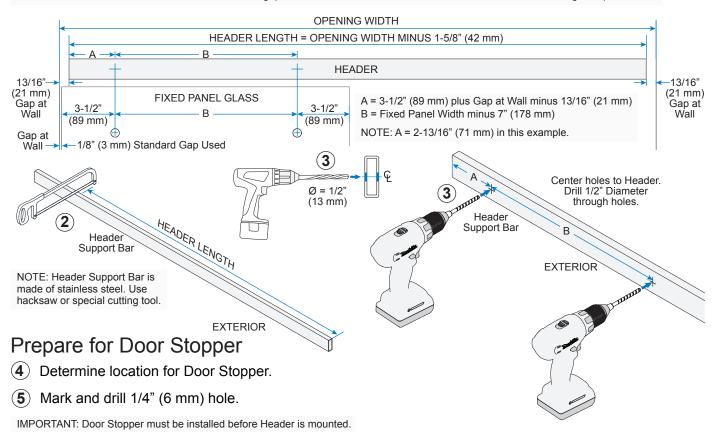

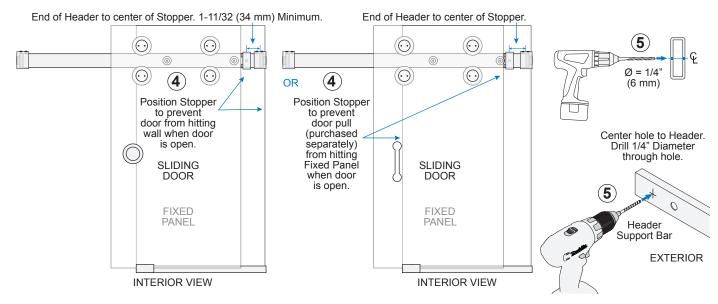





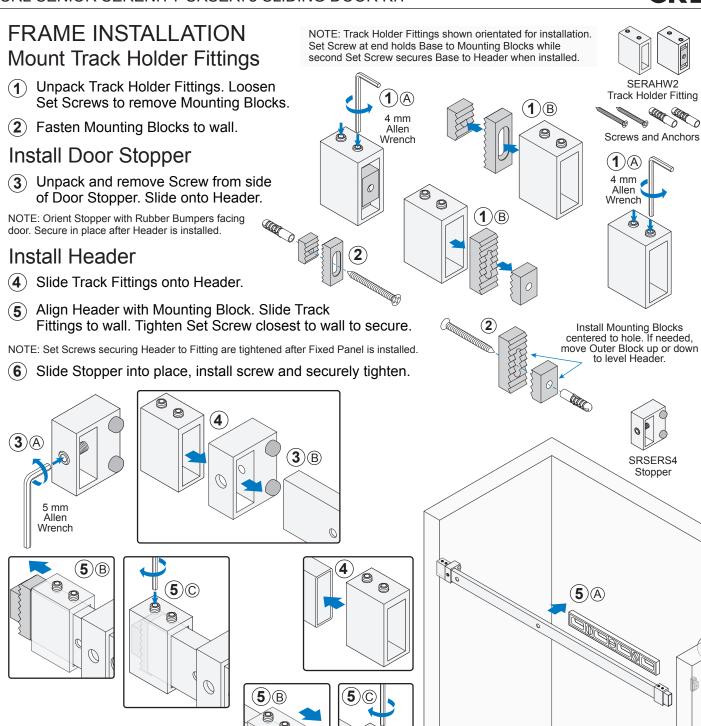




C.R. Laurence Co., Inc.

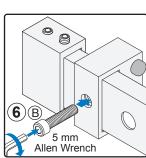

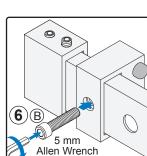

 



EXTERIOR




FRAME INSTALLATION (CONTINUED) Install Fixed Panel Curb Mounts


1 Mount Clamps or U-Channel on curb.

NOTE: U-Channel shown. Not Included.


Install Fixed Panel

- (2) Unpack and disassemble Fixed Panel Fittings.
- (3) Fit Interior and Mid Plates in Header Mounting Holes.
- Align holes in Fixed Panel with Header Mounting Holes. Install Exterior Plate and tighten Fittings.
- (5) Tighten Track Fitting Set Screws to secure Header.

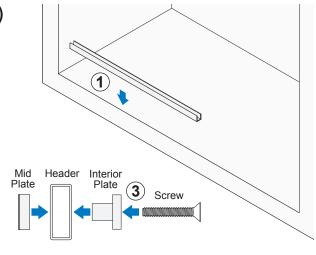


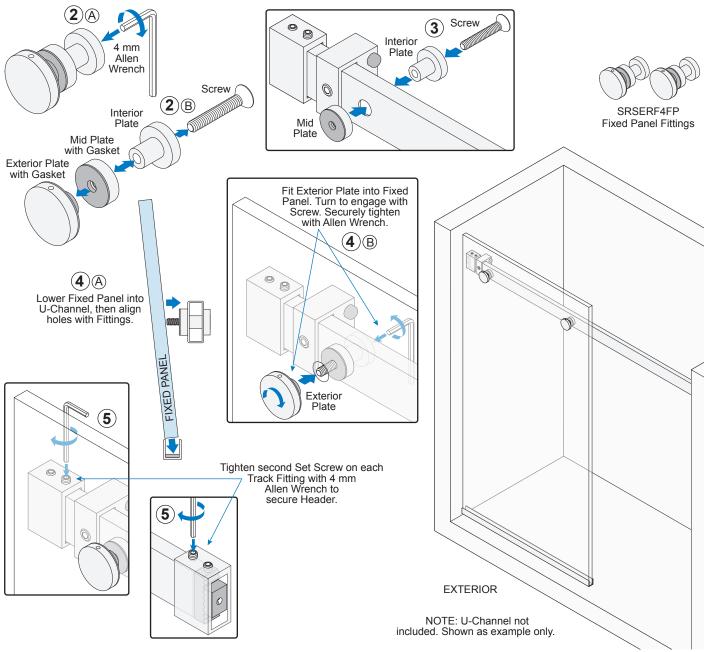



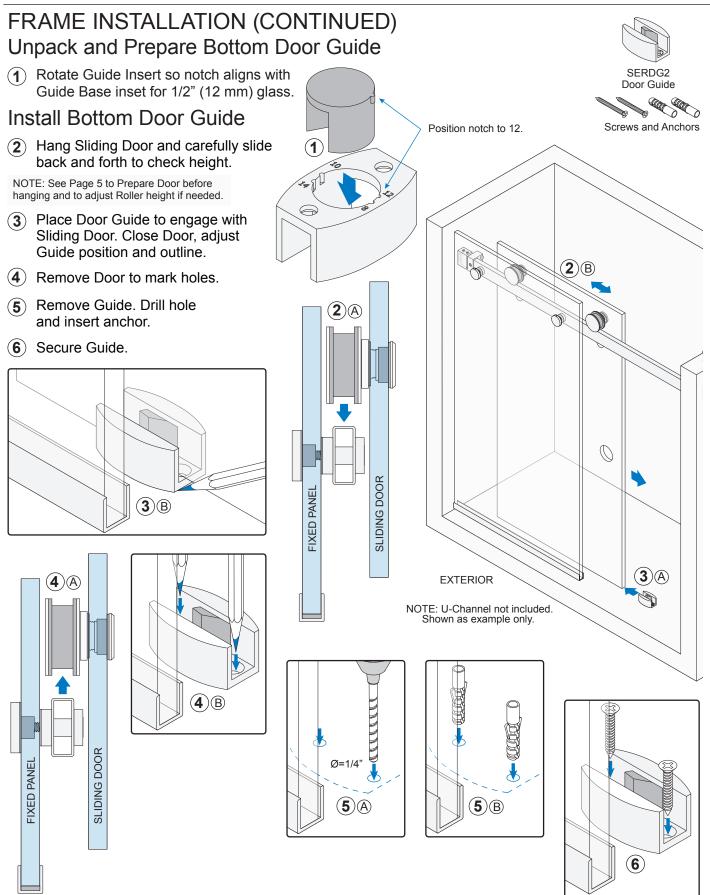



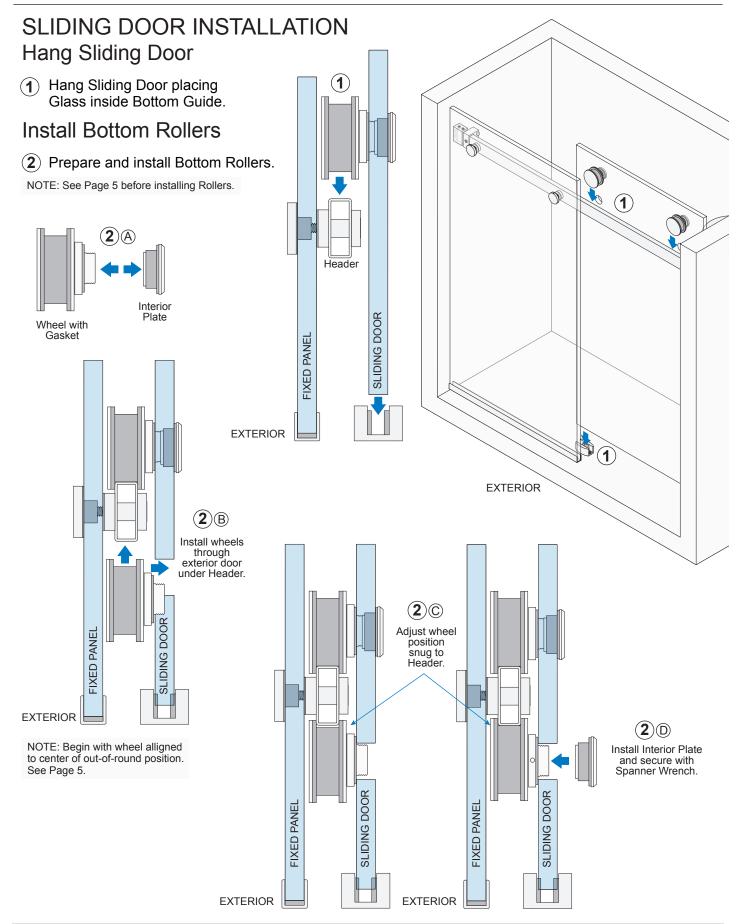

P. 11



