4' - 0"
max spacing, typ

8' - 0"
7' - 0"

① METROPOLIS - (84" tall)
1/2" = 1'-0"

4' - 0"
max spacing, typ

7' - 0"
6' - 0"
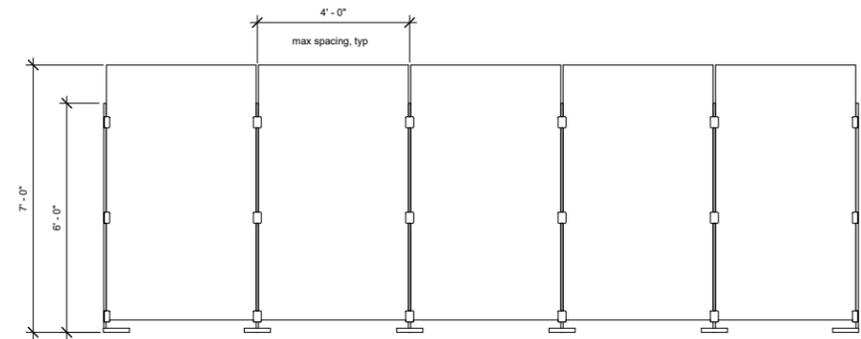
② METROPOLIS - (72" tall)
1/2" = 1'-0"

4' - 0"
max spacing, typ

6' - 0"
5' - 0"
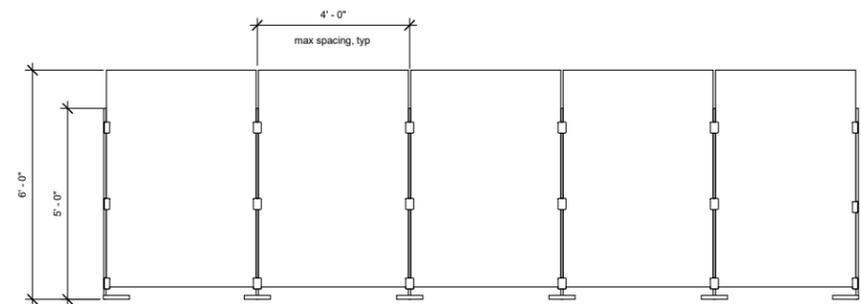
③ METROPOLIS - (60" tall)
1/2" = 1'-0"

NOTE:
When drawing a new partition from the
curtain wall command you will need to
unpin the panels at the end and select the
corresponding one from the properties
panel. Do this as your last step. If you
need to resize the partition re-pin the last
panel before resizing and then un pin
again and select the corresponding one
under properties.

In properties panel you can also turn on
and off posts to replace it with a corner.
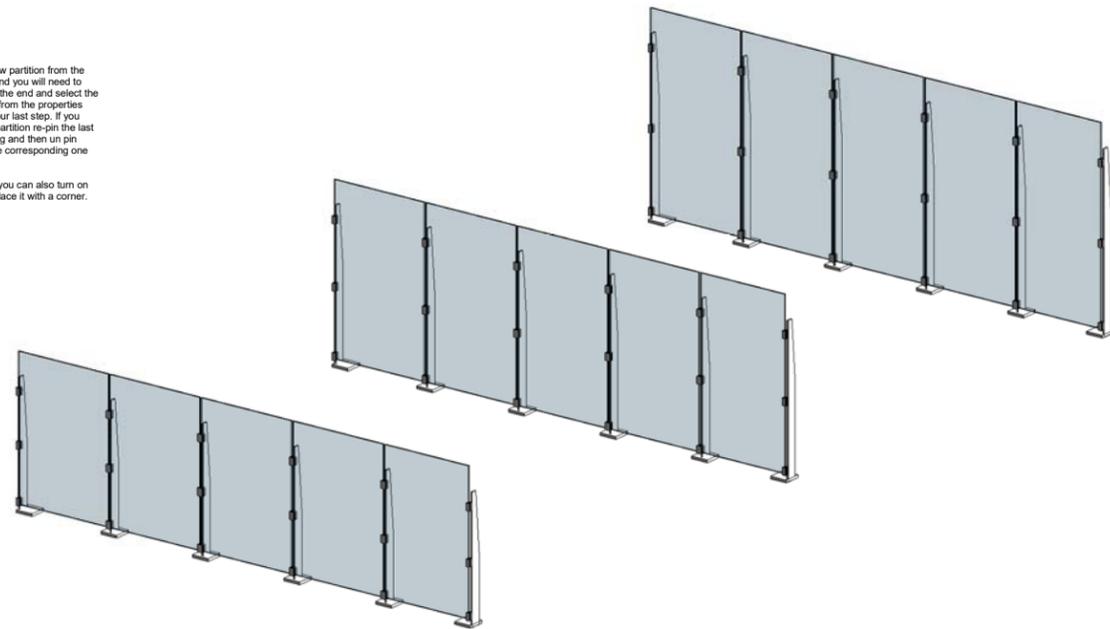
④ Metropolis Post System - 3D View

corner post

corner post
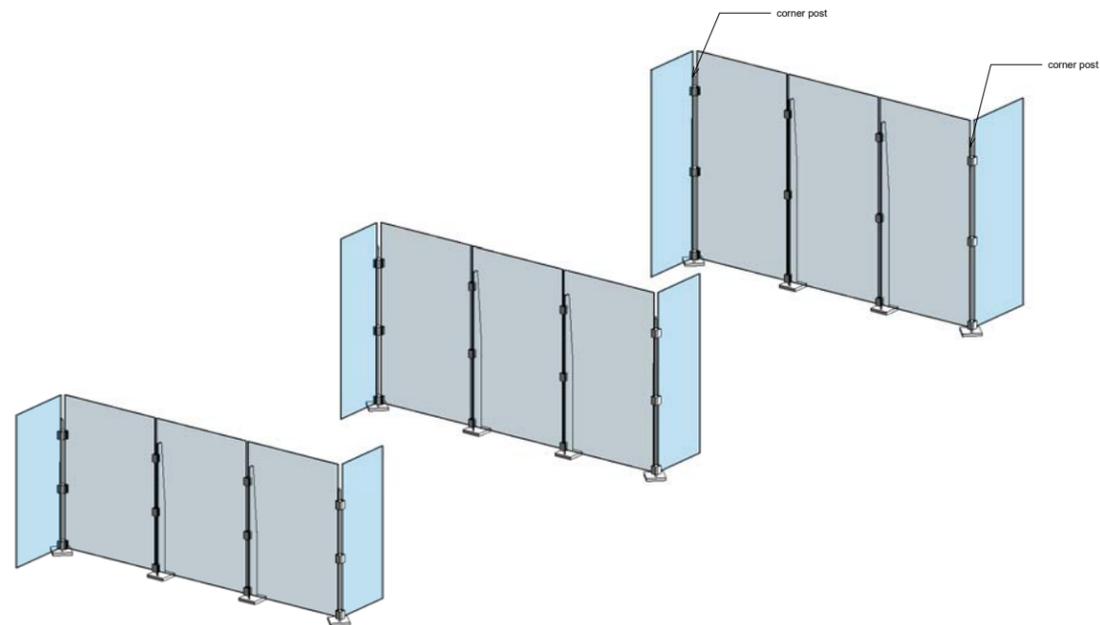
⑤ Metropolis Post System - corners

Description
SYS0128A Metropolis
Post Systems

Revisions By:

Drawn by:
Date:
Scale:
File name:

Sheet