
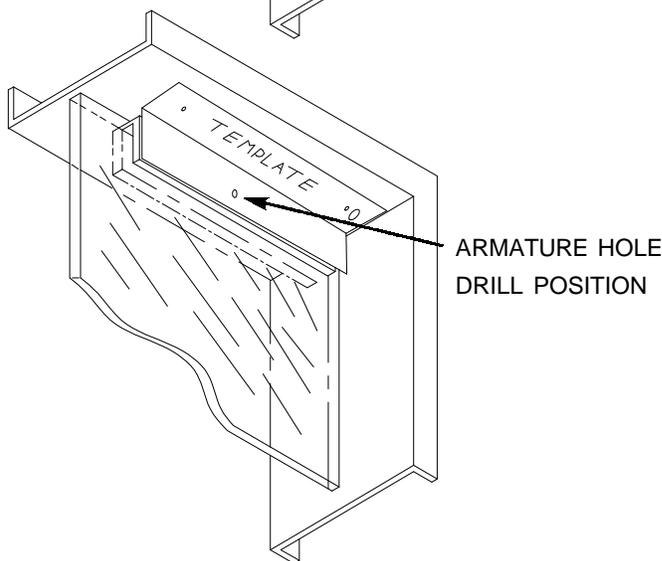
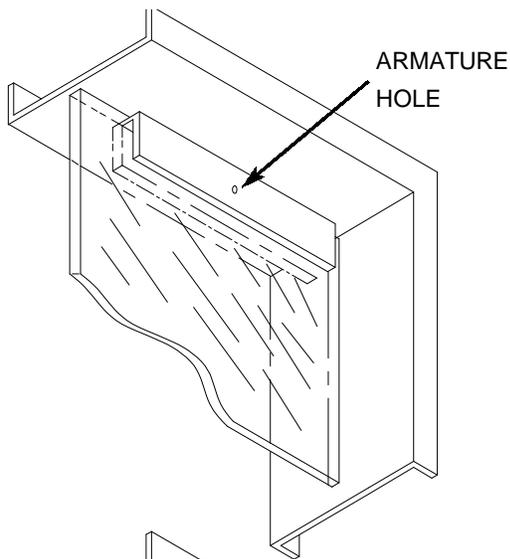


The HDB kits are intended to be installed with the 320+, 350+, and 390+ series outswinging single and double magnetic locks.

Select the appropriate shim for the thickness of glass. Use the compression pad, installed between the glass and the shim (with the padded side toward the glass). Install in desired position on glass (on top of glass opposite the hinge side with the hole for the armature facing toward the "push" side of the opening). Tighten set screws to trap compression pad and shim into place.

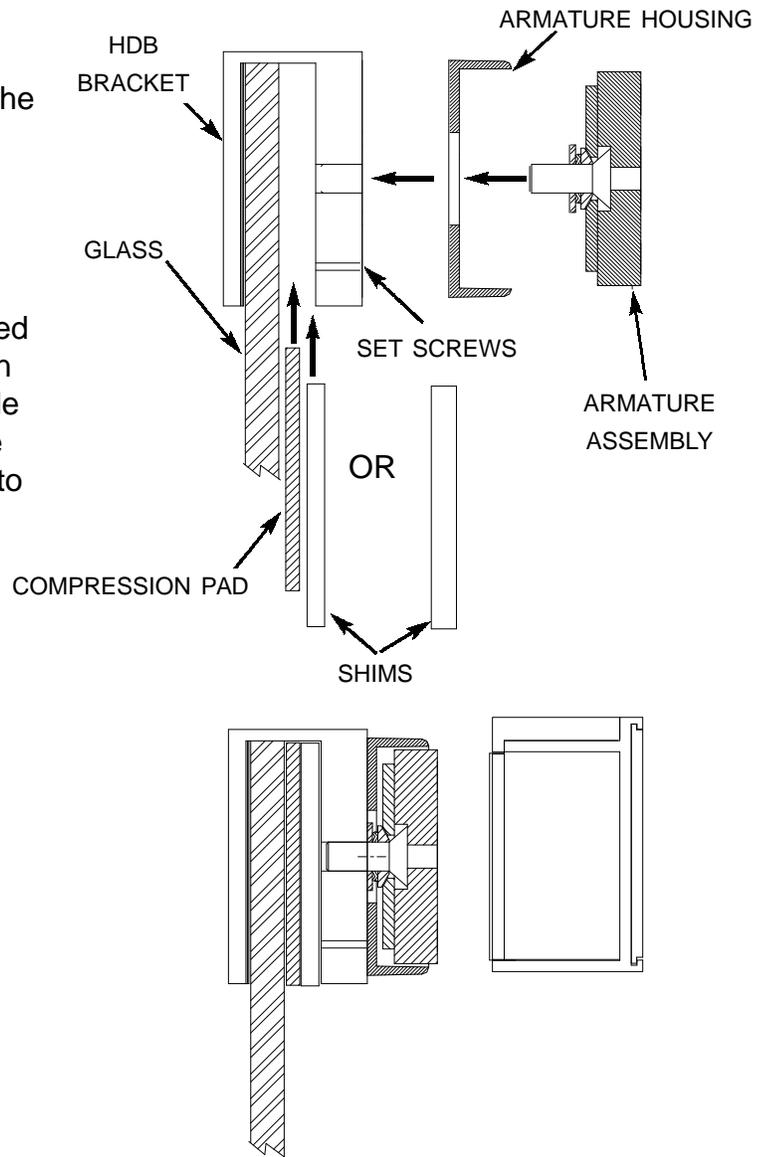

Place standard template on HDB bracket with the armature hole drill position (on template) over the armature hole in the HDB bracket. Tape the template in place. Mark and drill required holes in frame. Follow installation instructions for the model being installed.

Double Units: Use the standard template to mark the vertical centerlines of the armature holes on the glass with a wax crayon. Position the HDB brackets on these lines with the armature holes lining up with the marked vertical centerlines.