


CRL Square Standoff Installation Steps

STEP1




Set Fastener to Surface

STEP2

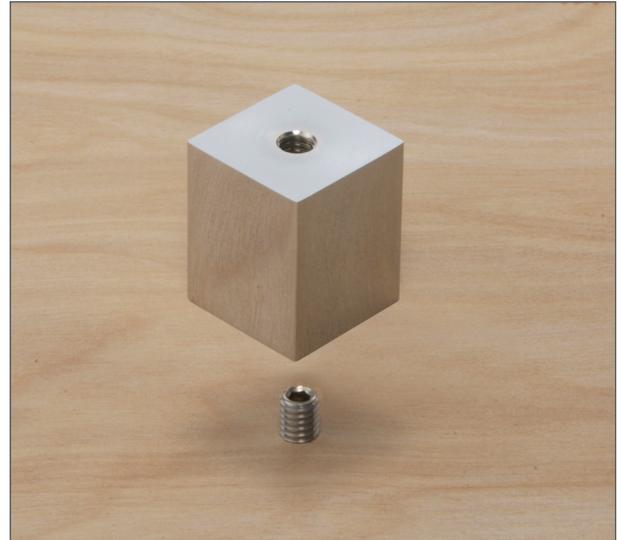


Thread Base Onto Fastener

STEP3

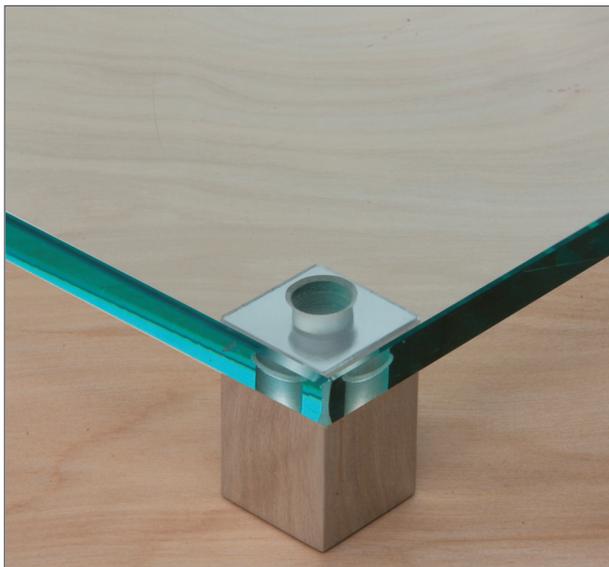

Align Glass on Standoff

STEP4

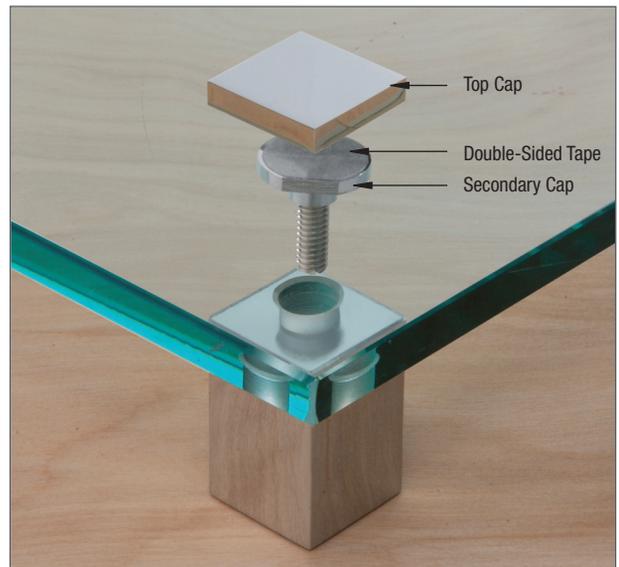

Tighten Secondary Cap, Remove Backing on Double-Sided Tape, Align and Install Top Cap

NOTE: Due to the diversity of applications, weight limitations for Standoff Systems are dependent upon wall or substrate anchoring and material strengths.