

CRL Tempered Glass Display Assembly Steps

CRL Tempered Glass is easy to assemble into any configuration using the Metal Z-Line or Clear Plastic Connectors which are designed for 3/16" (5 mm) Tempered Glass. Just follow these simple steps to quickly build your Tempered Glass Display.



Die Cast Metal Z-Line Connectors

2-Way



3-Way



4-Way



Clear Plastic Display Connectors


2-Way




3-Way




4-Way

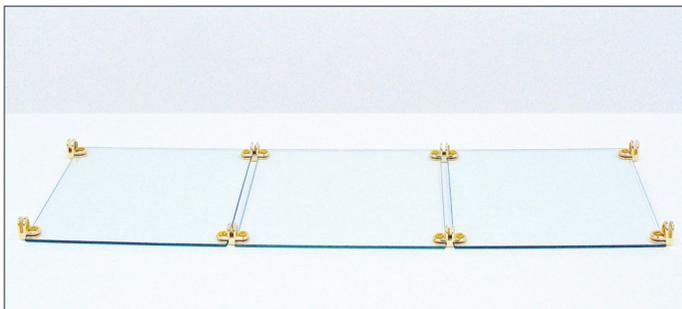


Step 1: Arrange the glass lites on the base surface which represent the number of cubes wide. Clean the bottom surface of the glass. As illustrated, attach 2-Way Connectors on the end lites and 3-Way Connectors between the lites. Use a wide blade screwdriver for Z-Line Connectors or a soft face rubber mallet for Clear Plastic Connectors.

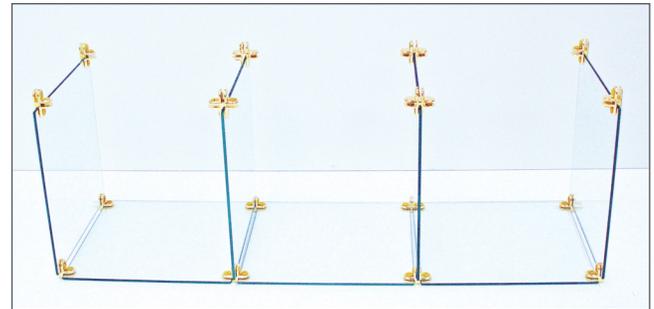

Step 2: Install the first row of vertical lites, this time attaching 3-Way Connectors at the top on the end lites and 4-Way Connectors at the top of the middle lites as shown in the illustration.

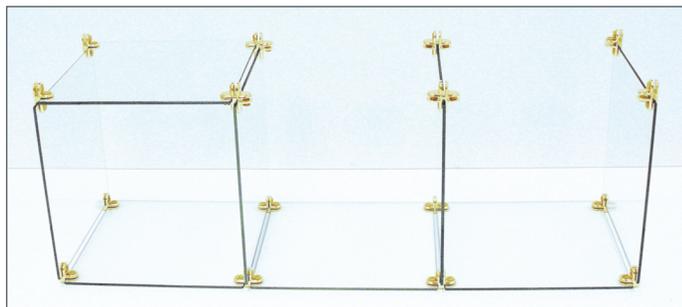

Step 3: Install the first tier of horizontal lites, which now completes your bottom row of cubes.

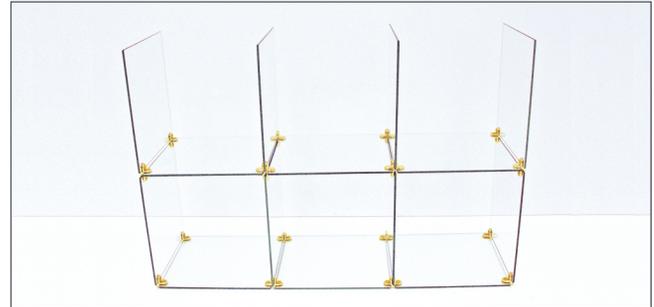

Step 4: Working from the base up, follow Step 2 and Step 3 instructions until the Tempered Glass Display is completed. Clean the glass and you're done.

Recommended Tools for Glass Cube Assembly



CAT. NO. BX15
Lint Free Glass Wipes



CAT. NO. ES432
Protective Goggles



CAT. NO. 6N1
Screwdriver



CAT. NO. 1M
Rubber Mallet



CAT. NO. 1973
Glass Cleaner