




Edge Scalloping Tool

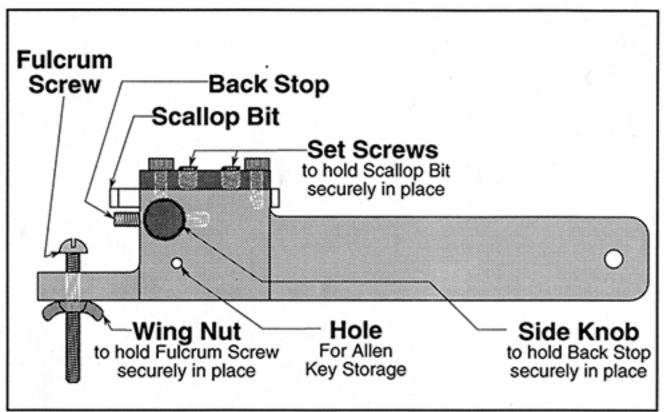

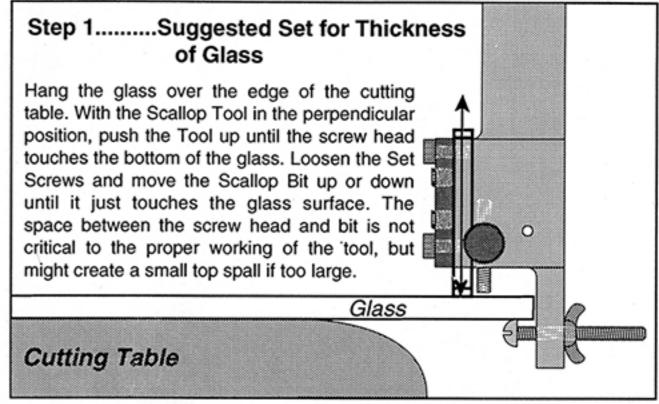

Step 3.....Suggested Set for Attack Angle

With the Scallop Tool in the horizontal position, adjust the Fulcrum Screw until the handle of the tool is slightly *above* horizontal. We suggest between 5 to 10 degrees. Tighten the Wing Nut to lock in this position. Raising or lowering this attack angle changes "bite" of the scallop bit and therefore the size of the scallop. Adjust on a scrap of glass until you achieve the desired result. Press straight down on the handle and a scallop will be produced on the bottom side of the glass.

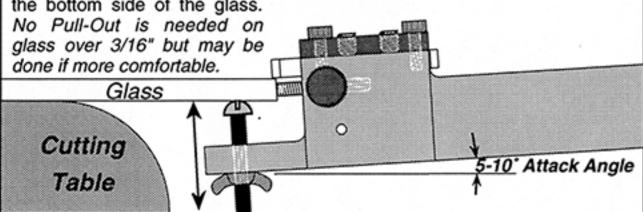

Step 2.....Suggested Set for Back Stop

The Back Stop controls the "Bite" of the Scallop Tool Bit into the Glass. The normal setting should be between 1/64" and 1/16". In general, the thicker the glass, the higher this setting. Start by setting this distance between 0 and 1/64". Setting the Attack Angle (next) will automatically increase this dimension. You will have to experiment with this setting to determine the best result.

