


C.R. LAURENCE CO. INC

CRL No Draft Mail Slot Instructions

CAT. NO. NDMS13A and NDMS13BL

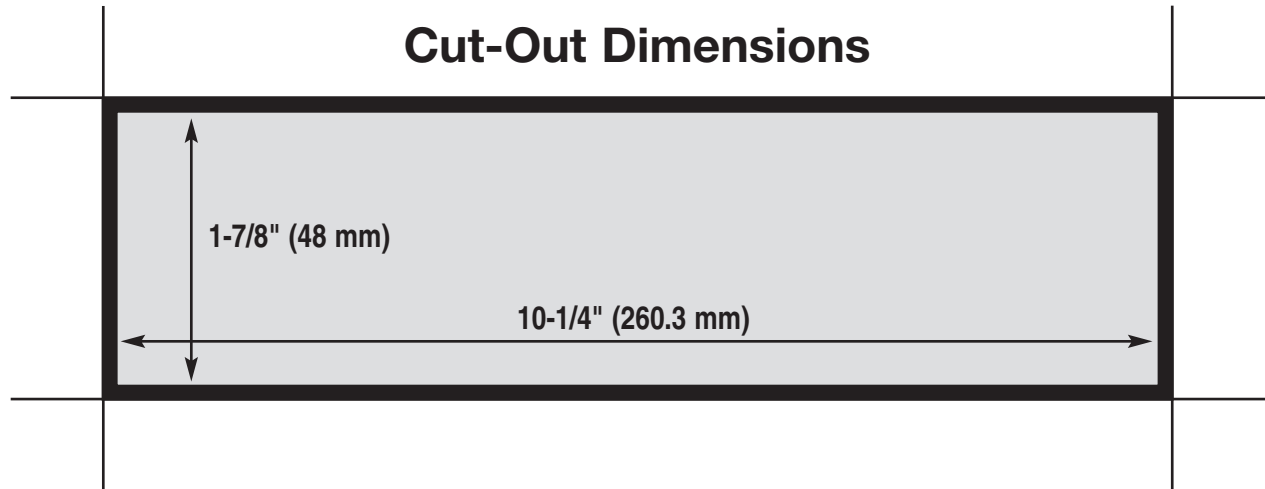

Installation Instructions:

Fabricate opening into glass using the dimensions above. Dry fit one side to the inside of the door, and the exterior side to the outside, making sure that the opening in the mail slot is centered on the glass cut out. Affix with CRL Cat. No. RTV408C Clear Silicone on both halves between the ABS plastic and glass door. When running each bead of silicone, stay within the groove on the ABS plastic frame. Use tape to hold halves in place until silicone cures.

Material Content:

FRAME - High quality ABS assembly combining black brush strip and draft excluding flap seals.

FLAPS - Anodized aluminum in satin or black anodized finish.

