### **INSTALLATION INSTRUCTIONS**

# CRL BRISTOL SERIES BR178 SLIDING DOOR KIT





2503 E. Vernon Avenue, Los Angeles, CA 90058-1826 (800) 421-6144 Fax (800) 262-3299 crlaurence.com


#### ORDER OF ASSEMBLY AND INSTALLATION

PARTS LIST	2
SPECIFICATIONS	3
GLASS FABRICATION	4
SLIDING DOOR PREPARATION	5
Unpack Rollers	5
Install Top Rollers	5
SITE PREPARATION	6
Mark Location for Header Support Bar	6
FRAME FABRICATION	6
Prepare Header Support Bar	6
FRAME INSTALLATION	10
Mount Track Holder Fittings	7
Install Header	7
Bottom Guide Mounting Options and U-Channel Preparation (Optional)	8
Unpack and Prepare Bottom Door Guide	8
Install Fixed Panel Curb Mounts	8
Install Fixed Panel	9
Place Bottom Door Guide	
Install Bottom Door Guide	10
SLIDING DOOR INSTALLATION	10
Hang Sliding Door	10
Install Bottom Rollers	10
FINISHING	11
Unpack and Install Thru-Glass Pull	11
Position and Tighten Stopper	11
Install L-Seal	11

IMPORTANT: READ THIS MANUAL THOROUGHLY BEFORE BEGINNING INSTALLATION.


GIL.

#### PARTS LIST

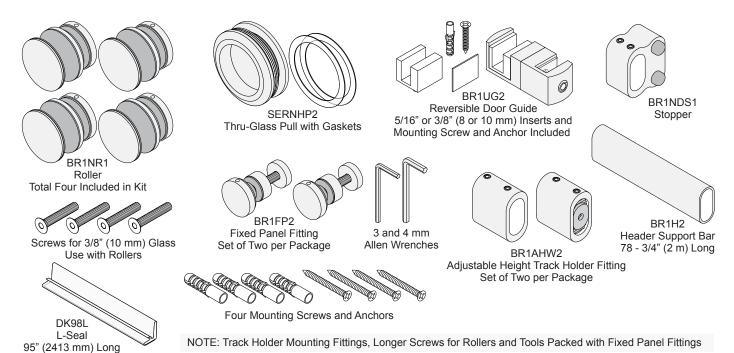


#### **SPECIFICATIONS**

Drawing not to scale. Shown from exterior.

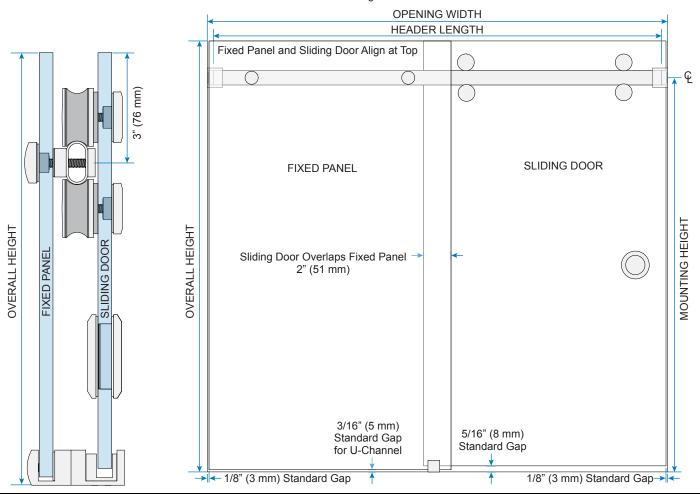


#### GLASS FABRICATION

NOTE: For use with 5/16" to 3/8" (8 - 10 mm) Tempered Glass only. Do Not use Laminated Glass.

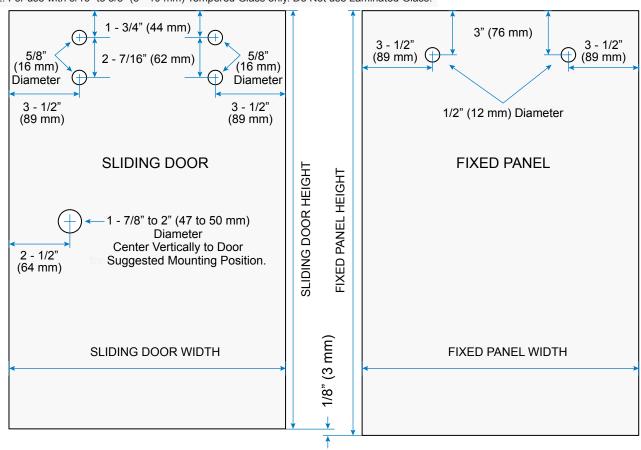

SLIDING DOOR AND FIXED PANEL WIDTH : Overall Width Divided by 2, plus 7/8" (22 mm)

FIXED PANEL HEIGHT: Overall Height minus 3/16" (5 mm) SLIDING DOOR HEIGHT: Overall Height minus 5/16" (8 mm)

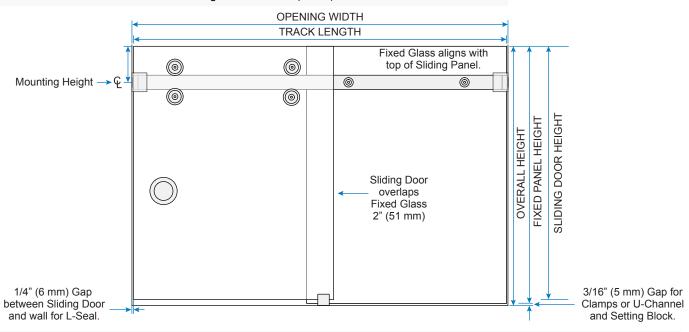

NOTE: Drawings not shown to scale. Track is cut 1" (25 mm) less than Opening Width and centered in opening. Overall Height is height from curb/floor to top of glass. Drawings shown from interior with Bottom Door Guide cupping Fixed panel. See Page 8 for Guide mounting options.



## SLIDING DOOR PREPARATION Unpack Rollers

1 Unpack and disassemble two sets of Rollers.


NOTE: Rollers shipped assembled with screws for 5/16" (8 mm) Glass. Screws for 3/8" (10 mm) Glass and Allen Wrench packaged with Fixed Panel Fittings.


(2) Adjust wheel height.


#### **Install Top Rollers**


3 Install Top Rollers on Sliding Door.

NOTE: Lower Rollers are installed after door is hung. See Page 10.

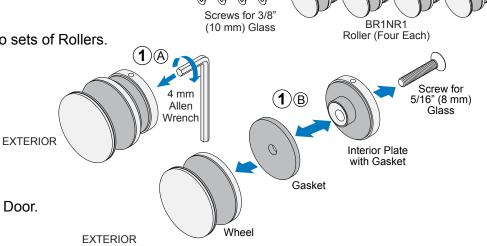

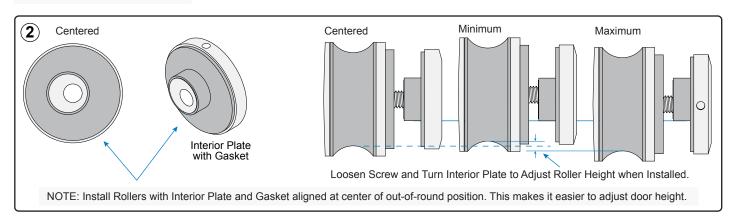


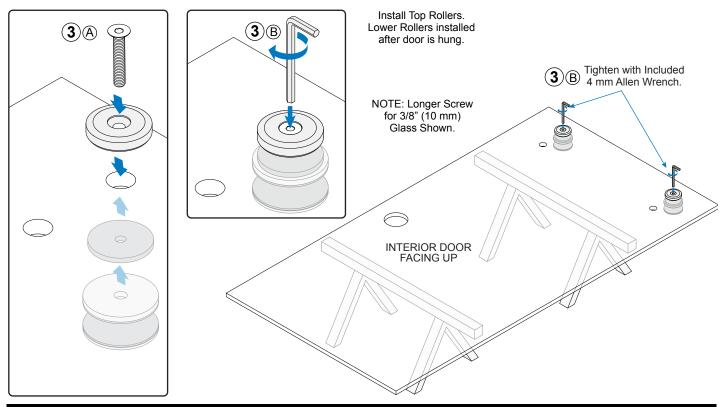

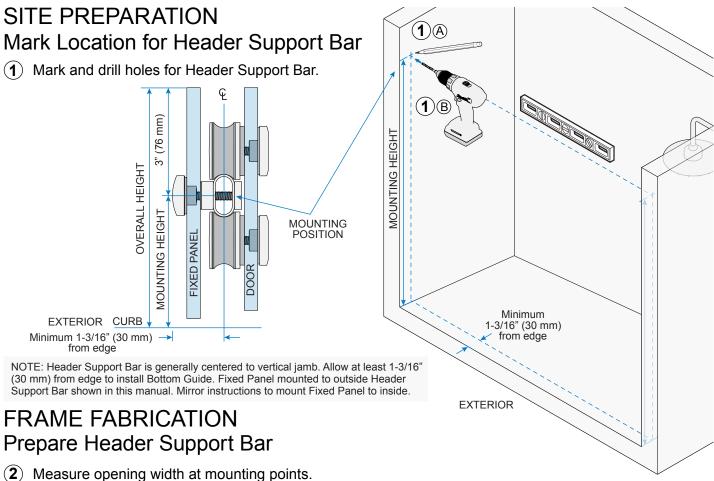

- (2) Measure opening width at mounting points.
- (3) Cut BR1H2 Header Support Bar.
- Drill holes for Fixed Panel Fittings.

NOTE: Header Support Bar is cut 1" (25 mm) short from tight dimension and centered in opening, leaving 1/2" (13 mm) gap on each end to mount. Refer to Fixed Panel Glass fabrication and gap allowance between Fixed Panel and wall to determine mounting hole placement.

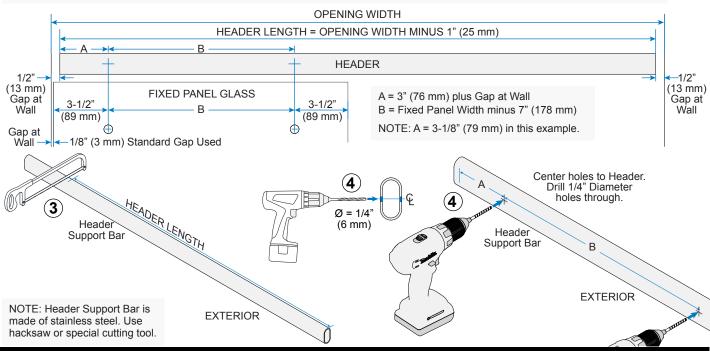

#### FRAME INSTALLATION Mount Track Holder Fittings

(1) Unpack Track Holder Fittings. Loosen Set Screws and remove Mounting Blocks.

NOTE: Screws, Anchors and 3 mm Allen Wrench packaged with Fixed Panel Fittings.


Pasten Mounting Blocks to wall.

#### Install Header


- (3) Unpack and loosen Set Screws on top and bottom of Stopper.
- (4) Slide Stopper and Track Holder Fittings onto Header.

NOTE: Orient Stopper with Rubber Bumpers facing Sliding Door and Track Holder Fittings with closer Set Screw next to ends of Header.


(5) Align Header with Mounting Block. Slide Track Holder Fittings to wall and tighten Set Screws to secure.

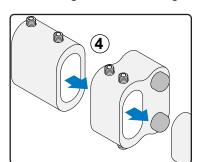




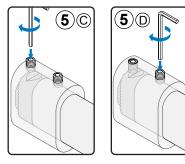


NOTE: Ensure Header is level. If not, loosen screws holding Mounting Blocks to adjust height.




Base





Set Screw at End




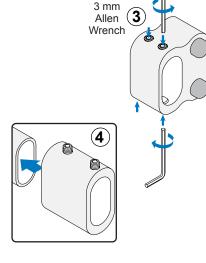







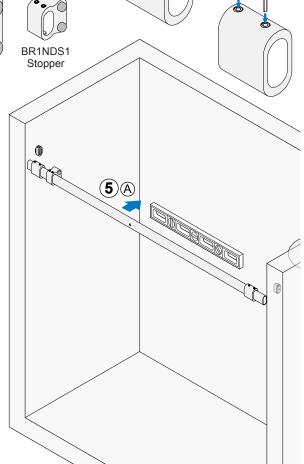


crlaurence.com | usalum.com


**EXTERIOR** 

### FRAME INSTALLATION (CONTINUED) Bottom Guide Mounting Options and U-Channel Preparation (Optional)


NOTE: Fixed Panel may be fastened to curb with clamps. Use dimensions shown below to calculate length of U-Channel for each mounting option.

1 Determine Bottom Door Guide mounting option.

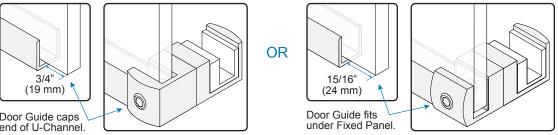

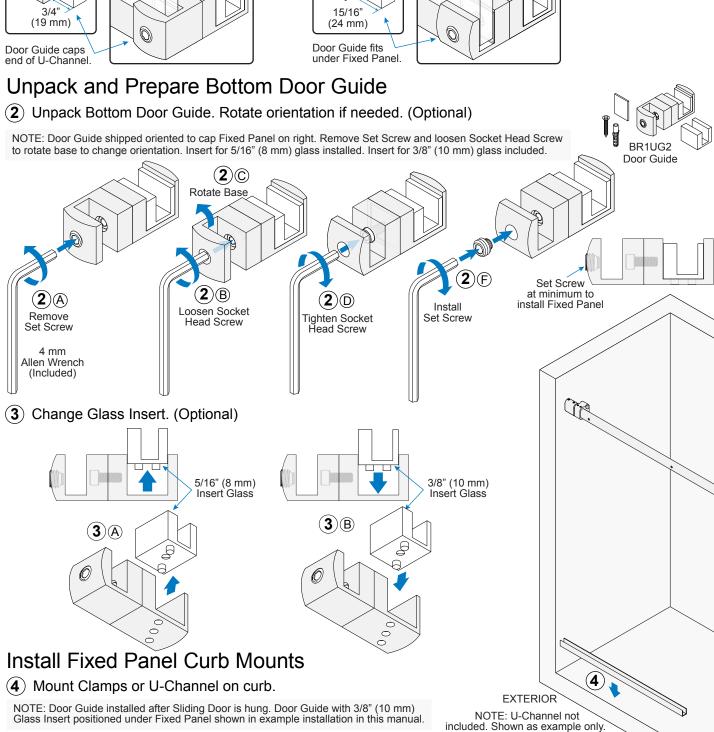

#### FRAME INSTALLATION (CONTINUED) **Install Fixed Panel** BR1FP2 Allen **Fixed Panel Fittings** (1) Unpack and disassemble Fixed Panel Fittings. Wrench (2) Fit Interior and Mid Plates in Header Mounting Holes. (3) Align holes in Fixed Panel with Header Mounting **(1**)B Holes. Install Exterior Plate and tighten Fittings. Interior Plate Mid Plate Fit Exterior Plate into Fixed Panel. **(2**) Screw Turn to engage with Screw. Use Allen Wrench to Gasket Interior 0 securely tighten. Exterior Plate (with Gasket) (3)B Mid Plate Gasket (3)A Lower Fixed Panel Exterior into U-Channel, then Plate align holes with Fittings. Header Interior Gasket Plate Plate Screw (4)A Place Bottom Door Guide (4) Hang Sliding Door and carefully slide back and forth to check height. NOTE: See Page 5 to Prepare Door before hanging and to adjust Roller height if needed. SLIDING DOOR Place Door Guide to engage with Sliding Door. Close Door, adjust Guide position and outline. **(6)**(A) 0 **(5**)© (6) Remove Door to mark hole. (**5**)(B) Remove Guide. Drill hole and SLIDING DOOR insert anchor. **5** A **EXTERIOR (6**)B NOTE: U-Channel not included. Shown as example only. **(7**)B

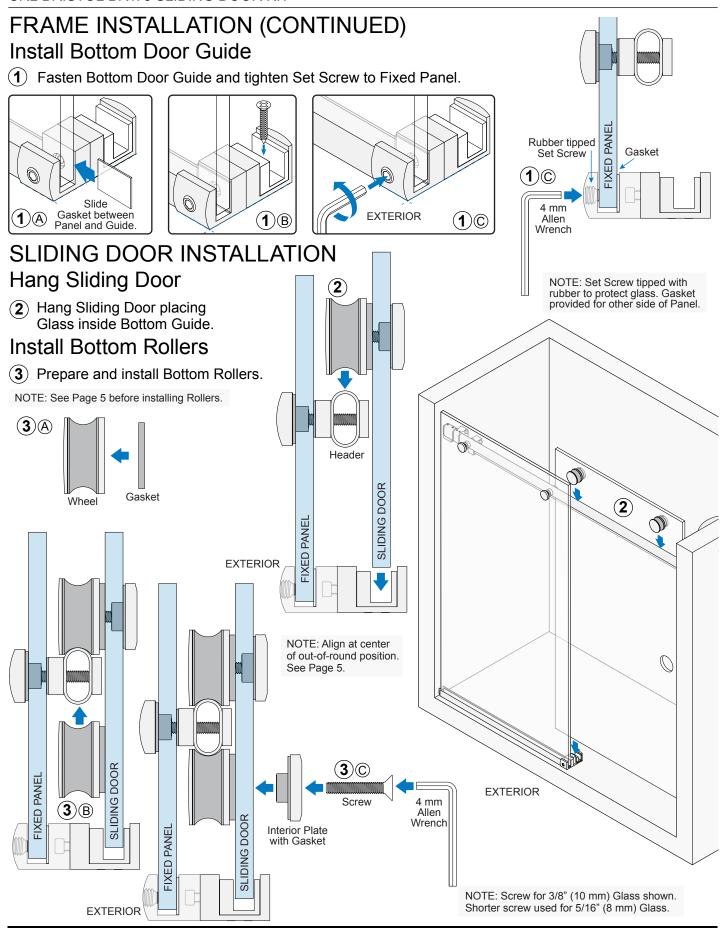


#### **FINISHING**


Unpack and Install Thru-Glass Pull

(1) Unscrew Thru-Glass Pull. Separate Cover from Base, select combination of gaskets, and reassemble on Sliding Glass Door.

NOTE: Three pairs of Gaskets in various widths included. Select one gasket or combine several to obtain desired thickness. Place on each side of glass so Pull is snug.

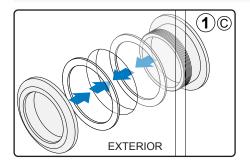

Hold Base while turning Cover counter-clockwise to loosen and



clockwise to tighten.



**(2**)B


#### Position and Tighten Stopper

(2) Move Door to desired maximum open position. Slide Stopper so Rubber Bumpers contact Door Panel. Tighten securely.

> (**3**)(B) Align L-Seal to top of glass.

Temporarily attach to Door


with painter's tape.

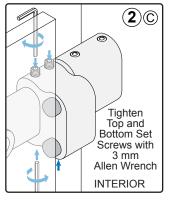





3 Cut and install L-Seal.


NOTE: Temporarily attach L-Seal to Sliding Door and use as guide for final position.

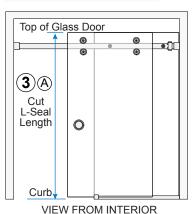

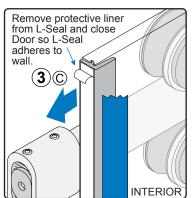



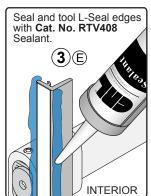

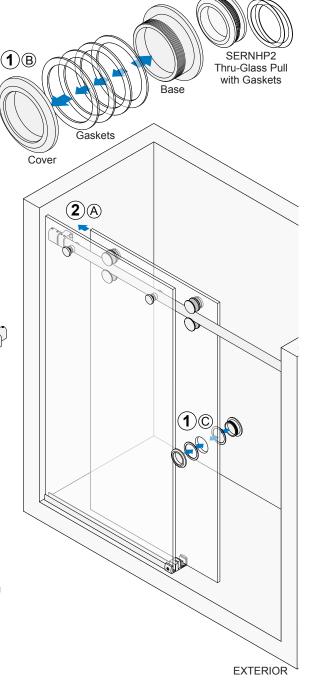

crlaurence.com usalum.com

**INTERIOR**