

Substrate and Mirror Preparation

- 1** Read instructions **completely** before applying SuperSet Mirro-Mastic®.

- 2** Make sure mirror and substrate are free of dust, clean and dry. Do not use on a painted surface, wall covering or treated wood.

- 3** For best adhesion, the mirror, substrate and mastic should be at room temperature (72°F, 22°C). Do not apply at a temperature below 59°F (15°C) or above 95°F (35°C).

- 4** It is the user's responsibility to determine the mastic's suitability to different types of mirror backing and substrates.

- 5** **PERMANENT MECHANICAL FASTENERS MUST BE USED FOR ALL MIRROR APPLICATIONS.**

Directions for use of Palmer SuperSet Mirro-Mastic®


- 1** Apply SuperSet Mirro-Mastic® to the mirror in vertical beads the length of the mirror six inches apart. Do not apply mastic too close to the edge to prevent "squeeze out". Do not spread mastic before pressing into place.

- 2** Press mirror firmly in place making good contact between mirror, mastic and substrate. Each vertical bead should spread to approximately 2 inches (5 cm) in width. Curing time will depend on temperature, humidity, type of substrate and amount of air that can reach the mastic.

- 3** With minimum coverage, one cartridge will install approximately 20 square feet (1.9 square meters) of mirror.

- 4** Cleanup can be done with methylethylketone (MEK).

- 5** For ceiling applications and technical questions, please contact Palmer Products at 800.431.6151 or palmer@mirro-mastic.com. The SDS and directions in French and Spanish are available at mirro-mastic.com.

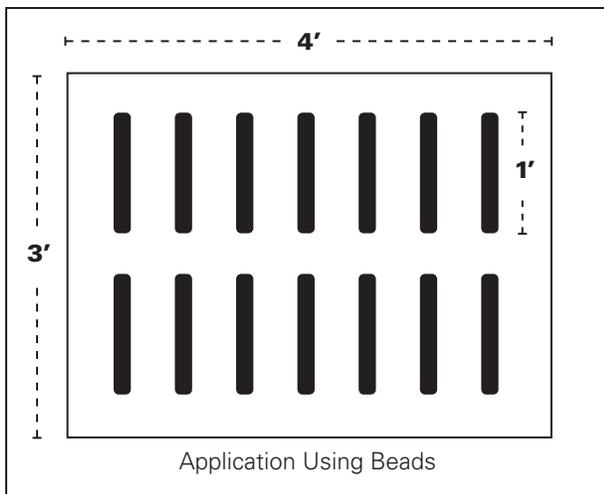

NOTE: Palmer Products makes no warranties, express or implied, with respect to SuperSet Mirro-Mastic® or otherwise, and hereby disclaims any and all warranties, including, without limitation, any implied warranty of merchantability or fitness for a particular purpose. Palmer Products' sole liability and the customer's sole and exclusive remedy with respect to any claim arising out of or relating to either SuperSet Mirro-Mastic® or the use of SuperSet Mirro-Mastic®, shall be the replacement of the SuperSet Mirro-Mastic®. Palmer Products assumes no responsibility if this product is misused. Refer to the SDS for further information.