


To bring everything to your project: *Select all walls inside the drawn rectangle *Ctrl-V to paste onto yoru project.


Now you have these options embeded

(Note you might need to cut out your solid wall and modify the face to insert the "revit curtain wall" in order to bring these in. Check Sample)

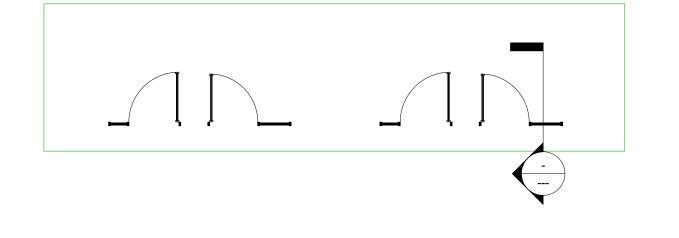

Entice Doors 4" Bottom Rail

2 Level 1 3/16" = 1'-0" Entice Doors 10" Bottom ADA Rail

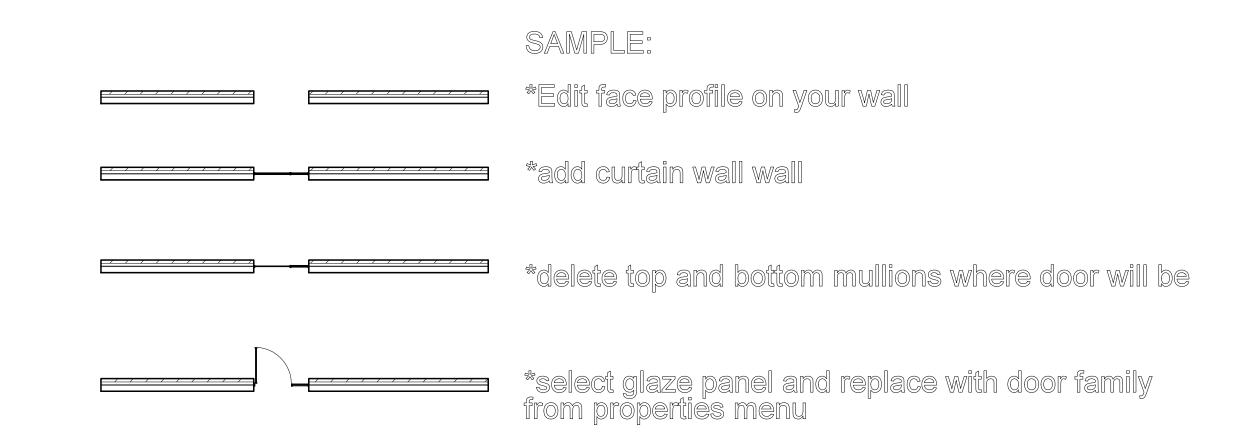

DOORS

Revisions By:

Drawn by:
Date:
Scale:
File name:

Sheet

Entice Double Doors 4" Bottom Rail

Entice Double Doors 10" Bottom ADA Rail

> 3 Directions 1/8" = 1'-0"