



INSTALLATION INSTRUCTIONS


CRL SLEEVE OVER LOCK

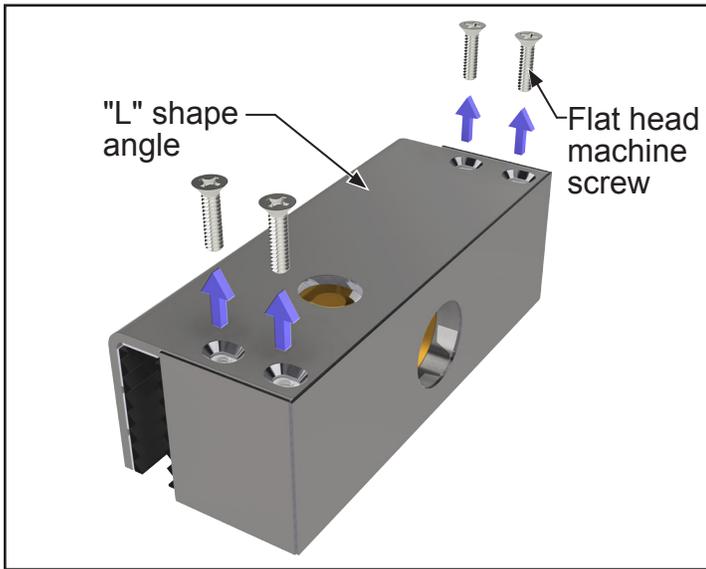

1. Remove (4) flat head machine screws and "L" shape angle.

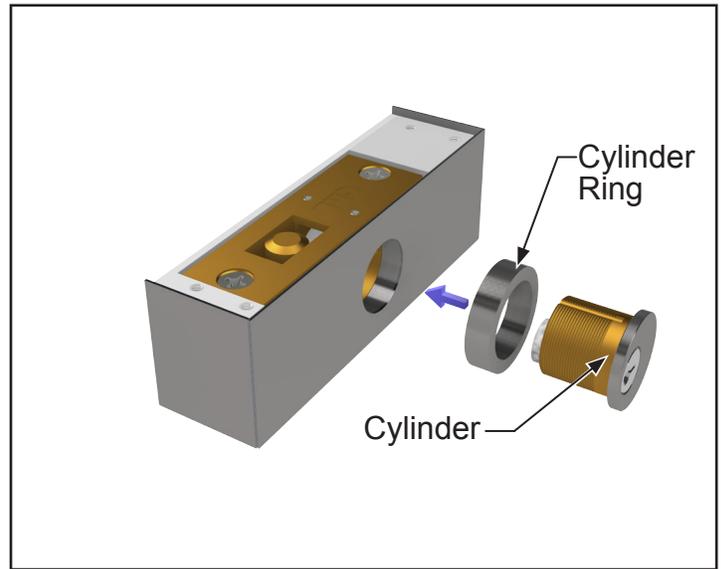

2. Install cylinder ring and cylinder (Cylinder lock **MUST** be in the horizontal position).

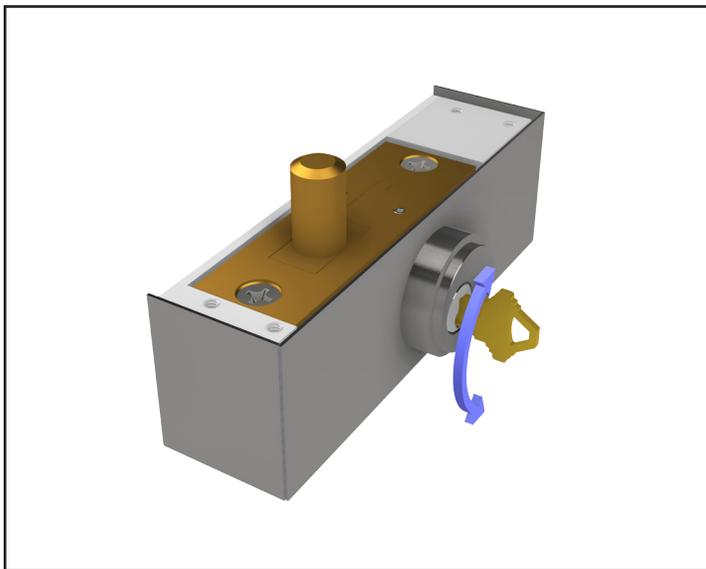

3. Insert key and make sure deadbolt is operational and functioning properly.




4. Secure cylinder in place by tightening the set screw.




Phone: (800) 421-6144 • Fax: (800) 587-7501
crlaurence.com • usalum.com • crl-arch.com


CRL SLEEVE OVER LOCK

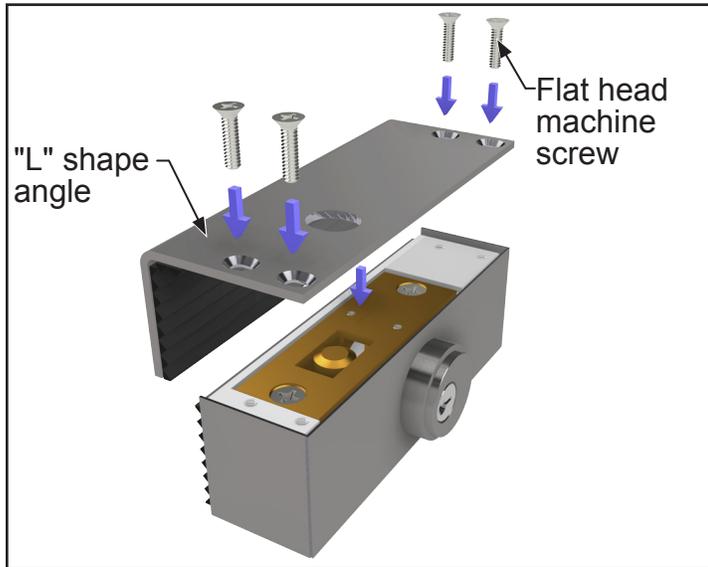


5. Re-install "L" shape angle and loosely secure with (4) flat head machine screws.

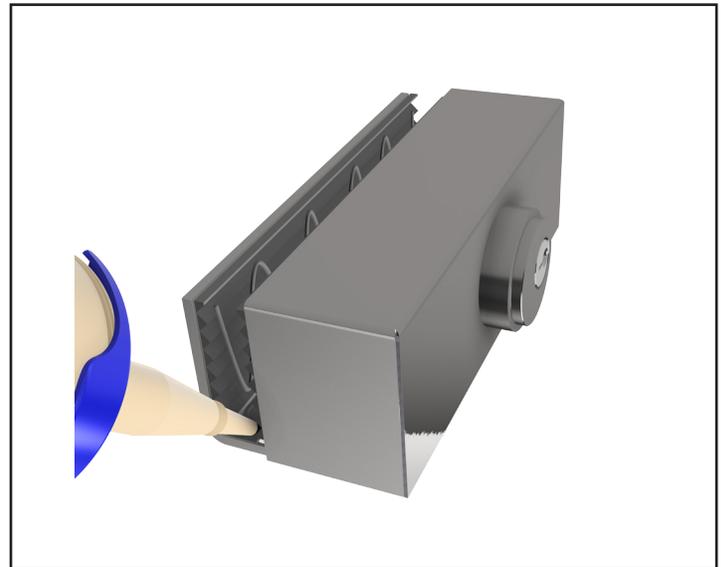

6. Apply **CRL 95CBL** silicone to lock body gaskets (Sides and Bottom).

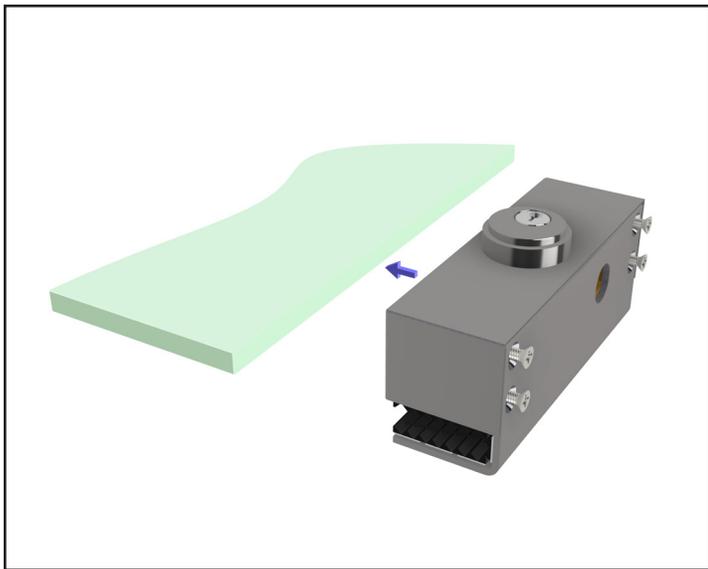

7. Slide the Sleeve Over Lock onto the glass panel.

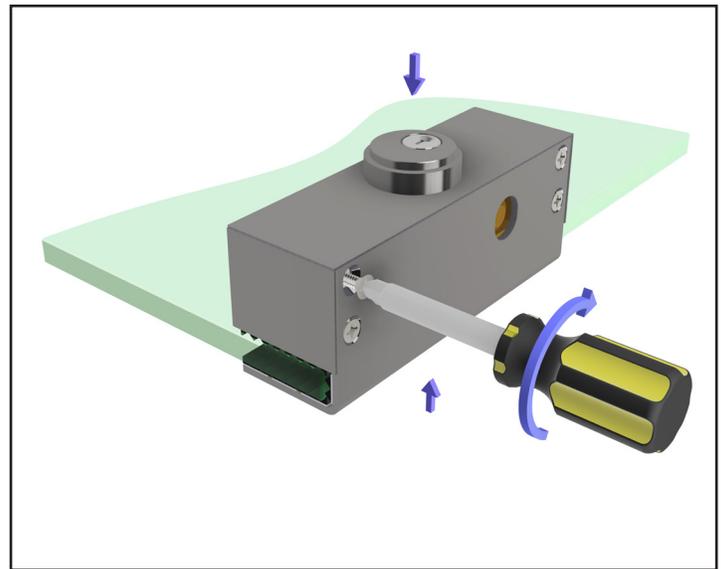

8. Compress the "L" shape angle to the glass panel and tighten (4) flat head machine screws.

NOTE: Let the Sleeve Over Lock cure for 24 hours before installing the door.