

C.R. LAURENCE CO. INC

Installation Instructions

Cat. No. TD1724 Transaction Drawer

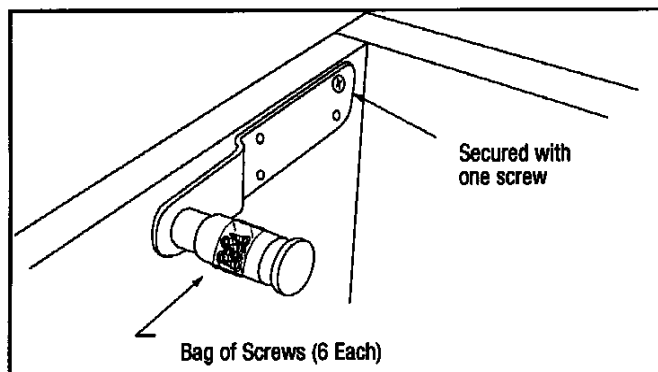
Note: Each of the five different Installation Options have different Installation Instructions.

Select the type of installation best suited for your application and read all instructions before starting installation.


ATTACHING SLIDE HANDLE TO DRAWER

Different types of installations require this procedure to be done at different times during the installation.

SLIDE HANDLE IN SHIPPING POSITION



SLIDE HANDLE IN OPERATIONAL POSITION

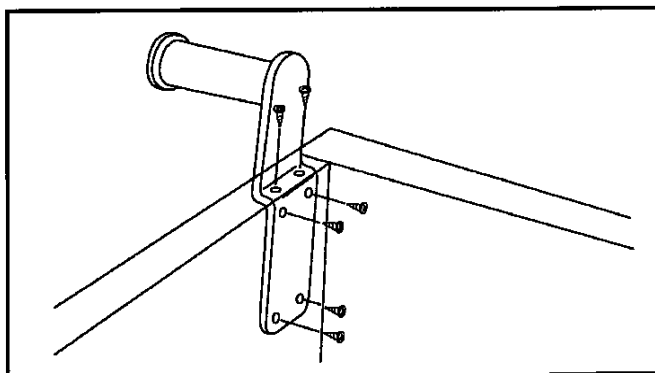


When the unit is shipped the slide handle is secured to the inside of the drawer with one screw. Remove this screw and the polybag of screws from the handle. Position handle vertically with the round grip pointing away from the drawer and secure with screws in the pre-drilled holes. Check your installation option for the correct time to install the handle.

UNDER WINDOW, NO COUNTER

1. Notch the wall below the window opening using the measurements shown to the right.
2. Place the unit on a table and turn the Latch Knob to lift up the Lexan Lid. Remove the locking pin with ring attached from the bottom of the drawer. Remove the 4 screws from each side of the lower slide rails that attach to the side of the box. Pull the drawer out of the box and set to the side.
3. Place the box portion of the unit in the opening and shim for proper fit. Lift the front Stainless Steel Door, and using an angle drill, drill through the sides (minimum 4" up from the bottom to clear drawer slides) and the bottom (on either side of the bottom center drawer slide), then secure with fasteners.
4. Lift the front Stainless Steel Door and insert the drawer with the drawer slides extended. Then screw the drawer slides to the side of the box (4 screws each side) and push the drawer back into the box.
5. Lift the Lexan Lid and attach the Stainless Steel Slide Handle (illustrated instructions above). Insert locking pin in the hole to secure the drawer.
6. Caulk any gaps between the wall and the unit to complete the installation.

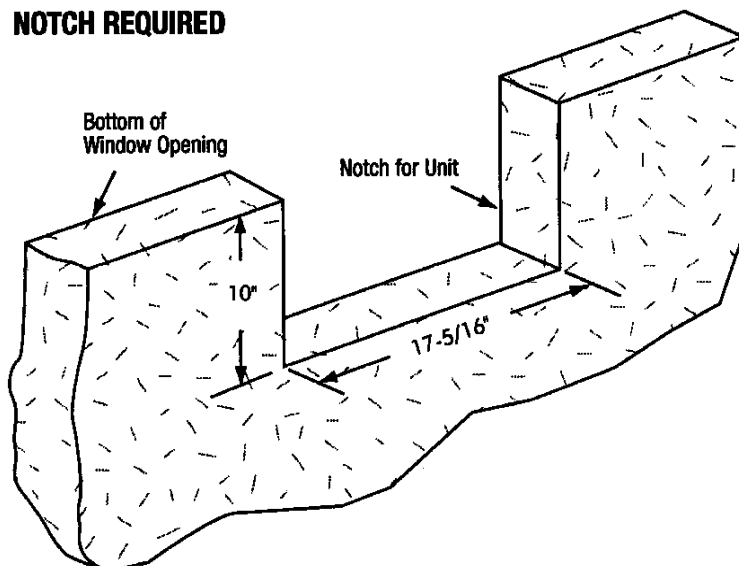NOTCH REQUIRED



C.R. LAURENCE
OF NORTH AMERICA

Phone (800) 421-6144 Ext. 777 • Fax (800) 587-7501 • E-Mail techsales@crlaurence.com

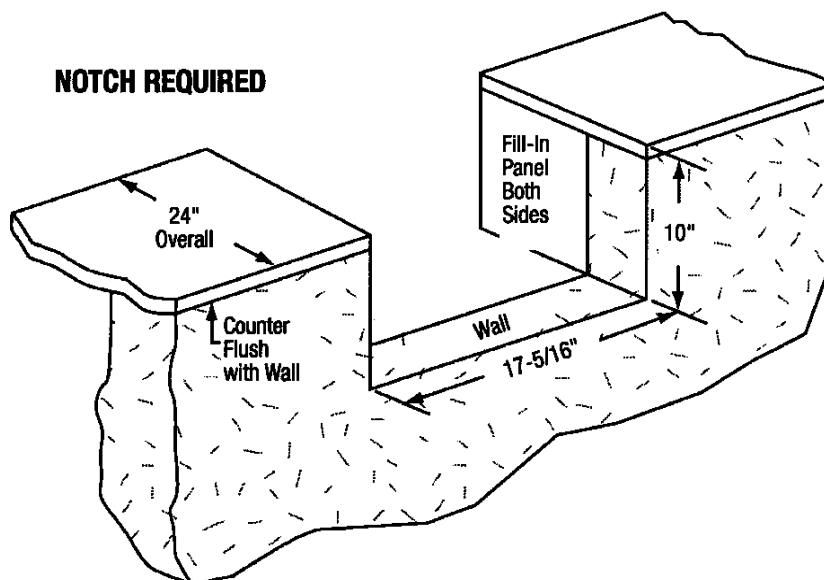
Installation Instructions

Cat. No. TD1724 Transaction Drawer

24" COUNTER ON TOP OF THE WALL

INSTALLATION INSTRUCTIONS:


1. Notch the wall below the window opening using the measurements shown to the right.
NOTE: deduct counter thickness from the depth measurement.
2. Attach counter on top of window opening and secure fill-in panels below the counter.
3. Place the unit in the opening and shim for proper fit. Slide drawer open and drill holes through both sides of the box and secure with screws into the fill-in panels. If additional securing is necessary, see steps 2, 3 and 4 of the "Under Window, No Counter" on page 2.
4. Lift the Lexan Lid and attach the Stainless Steel Slide Handle (illustrated instructions on page 2). Insert locking pin in the hole to secure the drawer.
5. Caulk any gaps between the wall and the unit to complete the installation.



26" OR DEEPER COUNTER ON TOP OF THE WALL

INSTALLATION INSTRUCTIONS:

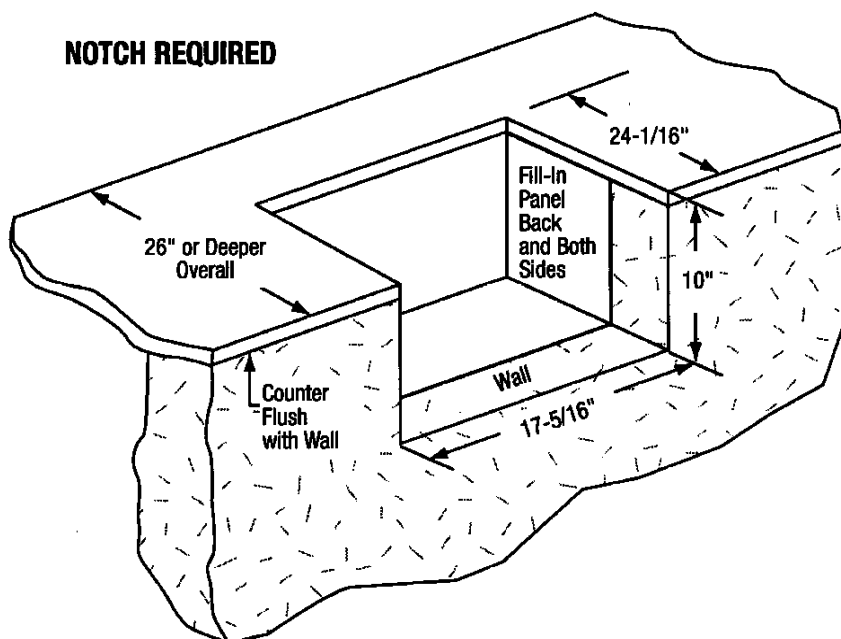1. Notch the wall below the window opening using the measurements to the right. NOTE: deduct counter thickness from the depth measurement.
2. Attach counter on top of window opening and secure fill-in panels below the counter.
3. Place the unit in the opening and shim for proper fit. Slide drawer open and drill holes through both sides and the back of the box and secure with screws into the fill-in panels. If additional securing is necessary, see steps 2,3 and 4 of the "Under Window, No Counter" on page 2.
4. Lift the Lexan Lid and attach the Stainless Steel Slide Handle (illustrated instructions on page 2). Insert locking pin in the hole to secure the drawer.
5. Caulk any gaps between the wall and the unit to complete the installation.




C.R. LAURENCE CO. INC



Installation Instructions

Cat. No. TD1724 Transaction Drawer**CONTENTS:**

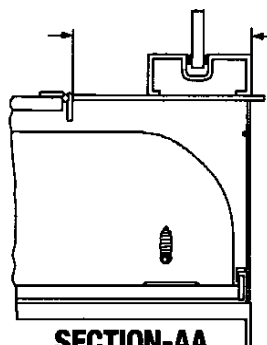- 1 Assembled Deal Tray
- 1 Instruction Sheet






**SECTION-AA**

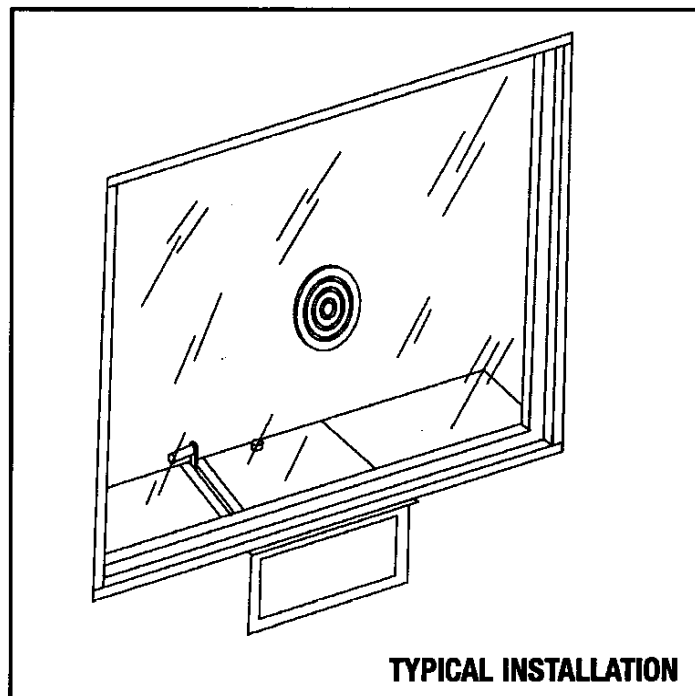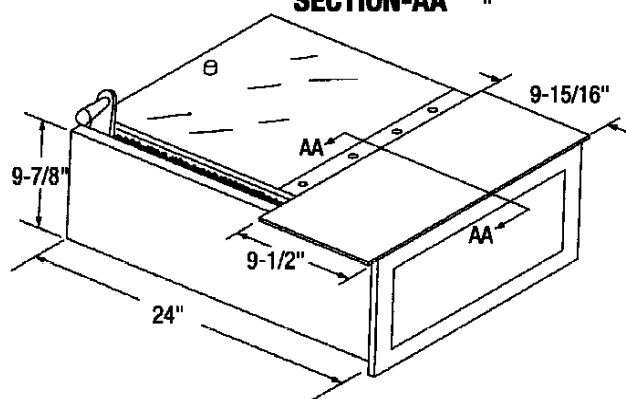NOTE: From the front edge of the wall to the back edge of the stainless steel top shelf is 9-1/2". No extrusion over 9-1/2" wide can be used as it would interfere with raising the Lexan Lid.

**TYPICAL INSTALLATION**

5 TYPICAL INSTALLATION OPTIONS

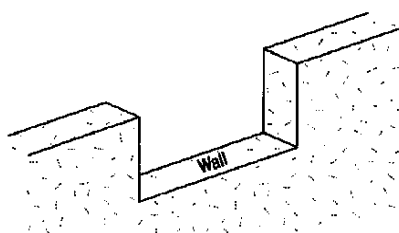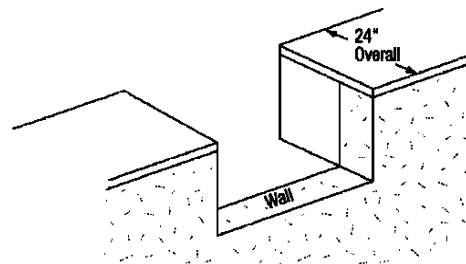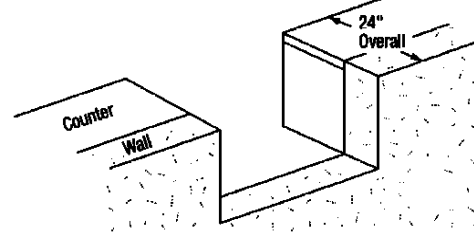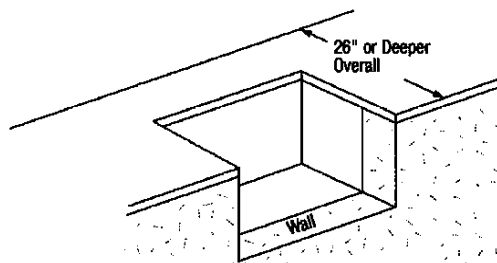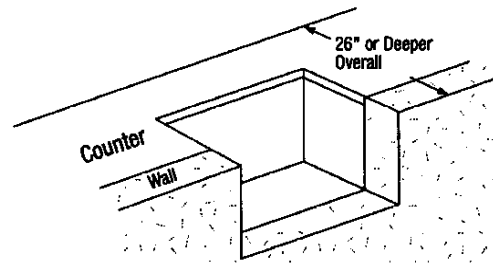(See Following Pages For Installation Instructions)

**UNDER WINDOW,
NO COUNTER****24" COUNTER ON TOP OF THE WALL****24" COUNTER BEHIND THE WALL
(INCLUDES WALL THICKNESS)****26" OR DEEPER COUNTER ON TOP OF THE WALL****26" OR DEEPER COUNTER BEHIND THE
WALL (INCLUDES WALL THICKNESS)****C.R. LAURENCE**
OF NORTH AMERICAPhone (800) 421-6144 Ext. 777 • Fax (800) 587-7501 • E-Mail techsales@crlaurence.com

C.R. LAURENCE CO. INC

Installation Instructions

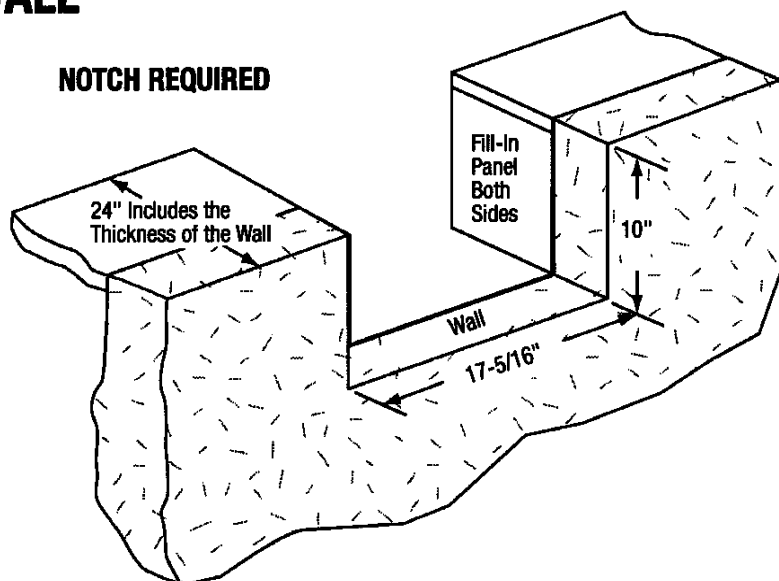
Cat. No. TD1724 Transaction Drawer

24" COUNTER BEHIND THE WALL

(Includes Wall Thickness)

INSTALLATION INSTRUCTIONS:

1. Notch the wall below the window opening using the measurements shown to the right.
2. Attach counter behind the window opening and secure fill-in panels below the counter.
3. Place the unit in the opening and shim for proper fit. Slide drawer open and drill holes through both sides of the box and secure with screws into the fill-in panels. If additional securing is necessary, see steps 2,3 and 4 of the "Under Window, No Counter" on page 2.
4. Lift the Lexan Lid and attach the Stainless Steel Slide Handle (illustrated instructions on page 2). Insert locking pin in the hole to secure the drawer.
5. Caulk any gaps between the wall and the unit to complete the installation.




26" OR DEEPER COUNTER BEHIND THE WALL

(Includes Wall Thickness)

INSTALLATION INSTRUCTIONS:

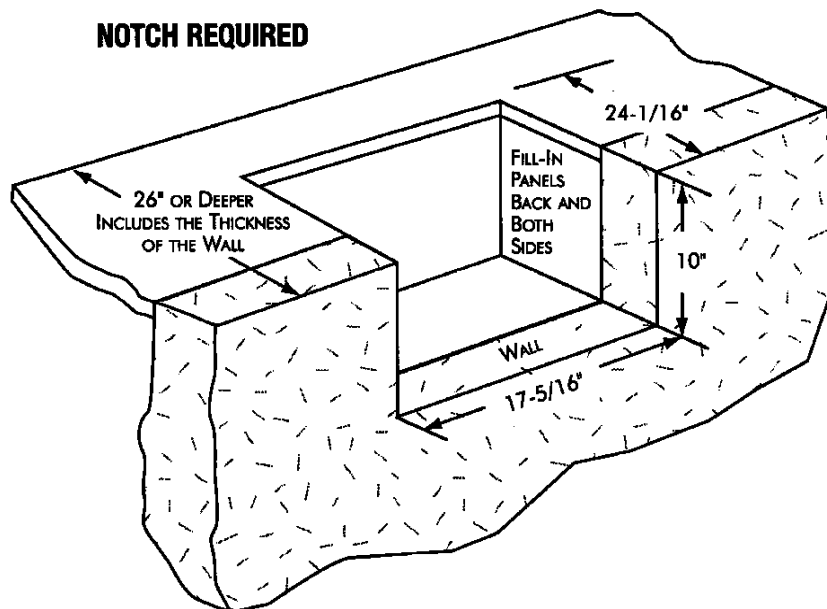1. Notch the wall below the window opening using the measurements to the right.
2. Attach counter behind the window opening and secure fill-in panels below the counter.
3. Place the unit in the opening and shim for proper fit. Slide drawer open and drill holes through both sides and the back of the box and secure with screws into the fill-in panels. If additional securing is necessary, see steps 2,3 and 4 of the "Under Window, No Counter" on page 2.
4. Lift the Lexan Lid and attach the Stainless Steel Slide Handle (illustrated instructions on page 2). Insert locking pin in the hole to secure the drawer.
5. Caulk any gaps between the wall and the unit to complete the installation.



C.R. LAURENCE
OF NORTH AMERICA

Phone (800) 421-6144 Ext. 777 • Fax (800) 587-7501 • E-Mail techsales@crlaurence.com