


MIRROR HANGER


CAT. NO. 74154, 74116, 74124, 74128, 74136, 74142, 74154

Step 1

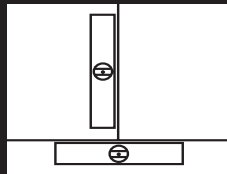


Determine the location of the mirror. Using a level mark a plumb vertical centerline, then mark a level horizontal line for the bottom of the mirror.

Step 2

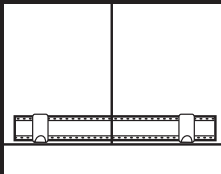


Draw a centerline on both Hangers. Line up the centerline of the Bottom Hanger with the plumb vertical centerline on the wall and place the Bottom Hanger above the bottom horizontal level line (bottom of the mirror).

Step 3

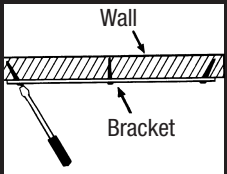


Using a drill with a 1/8" (3 mm) drill bit drill holes at the center and at each end of the Bottom Hanger. When drilling the end holes angle the drill towards the outside of the Bottom Hanger ends. Use the included screws for fastening the Bottom Hanger to the wall as needed.

Step 4

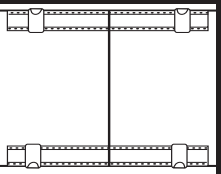

After the Bottom Hanger is installed measure up from the base of the Bottom Hanger Clips the height of the mirror less 1/2" (12.7 mm) and mark a horizontal line. Line up the centerline of the Top Hanger with the plumb vertical centerline on the wall and install the Top Hanger below the horizontal level line.

Step 5



Mark the center of the mirror at the Bottom. Set the mirror in Bottom Clips aligning the centerline of the mirror with the centerline of the Bottom Hanger. Next lift the Top Clips on the Top Hanger and lay the mirror against the wall. Once the mirror is in place press the Top Clips downward over the edge of the mirror.

Important Notice: CRL Mirror Clips should be installed into wall studs for maximum support. It is the responsibility of the installer to select the proper screws and anchors when mounting to wall studs is not possible. It is also the responsibility of the installer to determine the safe weight load based on the installation conditions.