



C.R. LAURENCE Installation Instructions

COUNTER TOP STANDARD DEAL TRAYS

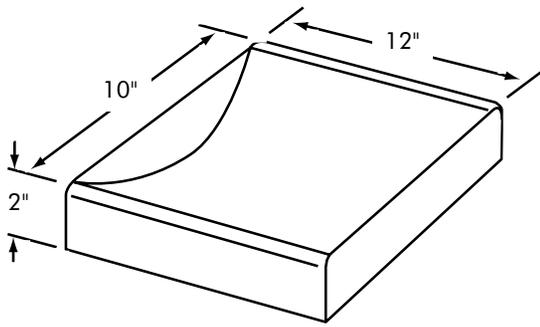

Cat. No. CTC12

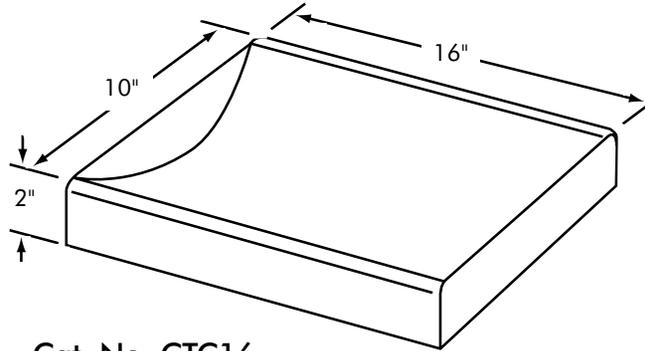

Cat. No. CTC16

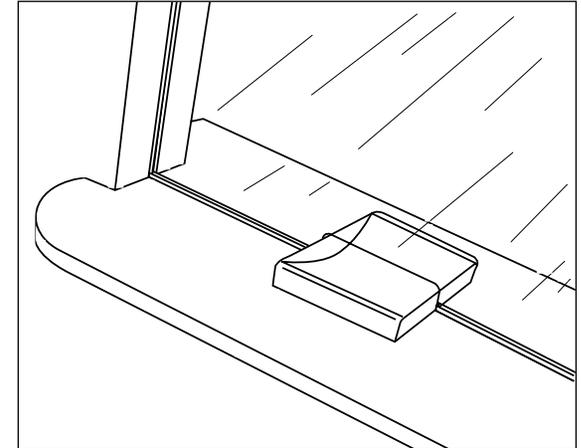


FIGURE A

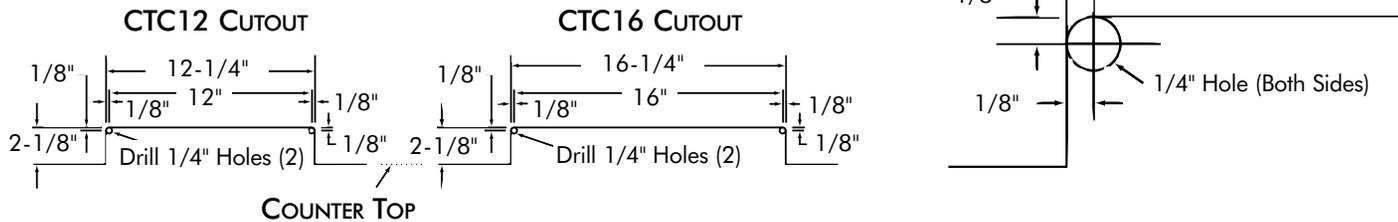


FIGURE B

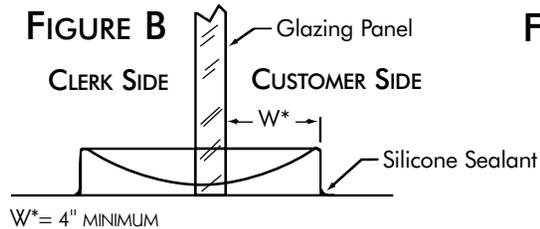


FIGURE C


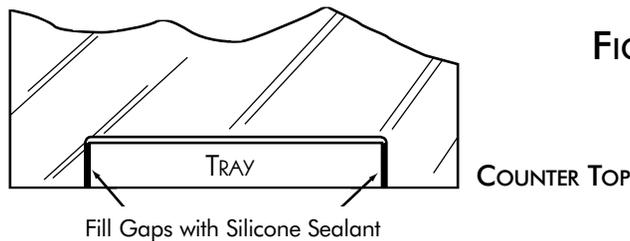


FIGURE D

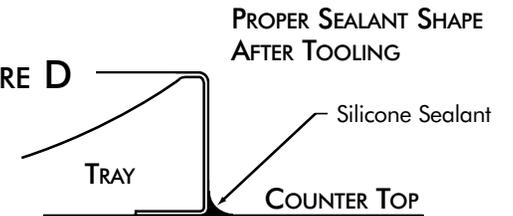

(SEE BACK OF PAGE FOR INSTALLATION INSTRUCTIONS)

C.R. LAURENCE

Installation Instructions

COUNTER TOP STANDARD DEAL TRAYS

STEP 1

Glazing panel must be notched per dimensions on template. See Figure A. Minimum notch height is 2-1/8". Minimum notch width is 12-1/4" for 12" Tray, 16-1/4" for 16" Tray.

*2-1/8" is the height above the counter. If the glazing panel is setting in a channel, deduct the channel bottom thickness from the 2-1/8" measurement.

STEP 2

Check that counter top is level, clean and dry where Deal Tray is to be installed. Minimum recommended exposed depth of tray on customer side of glazing panel is 4". See Figure B.

STEP 3

Dispense a bead of Cat. No. 33SC Clear Silicone Sealant, or equivalent, around base perimeter of tray on both clerk and customer side of glazing panel. See Figure B.

STEP 4

Fill vertical gap between tray and glazing panel with Cat. No. 33SC Clear Silicone Sealant, or equivalent. See Figure C.

NOTE:

Sealant beads should be tooled and excess removed immediately after application. See Figure D. Cured sealant is difficult to tool or clean up without damaging adjoining surfaces.