

## Corner Shelf Clip Instructions

### Tool Required:

- Standard Length #2 Phillips Screwdriver


### Tools Suggested:

- Tape Measure
- Drill With 1/8" Drill Bit

### Parts Included:

- Corner Clip
- #10 x 2" Pan Head Phillips Screw
- 10" x 10" or 12" x 12" x 3/8" Thick Glass Shelf



- Mark Location of Clip
- Pre-drill 1/8" Hole Straight Into Corner  
(corners almost always have studs - if not - use 3/16" x 3" toggle bolt)
- Hold Clip in place and screw in until tight

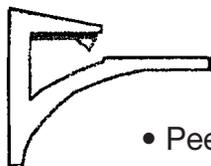

- Peel Mounting Tape



- Put glass all the way back into slot while tilting up front - push down in place so mounting tape sticks to top of glass.

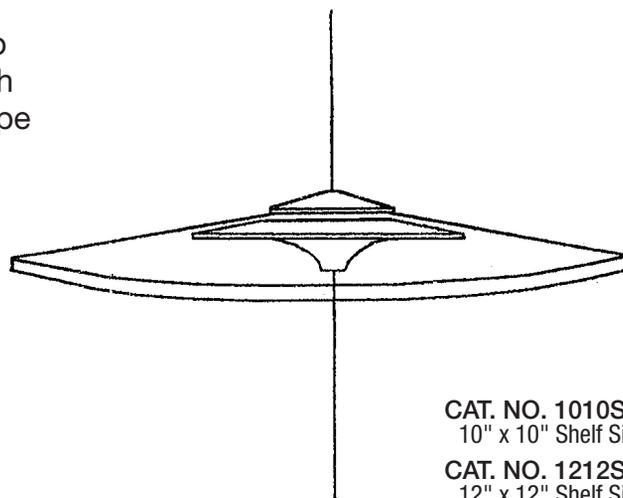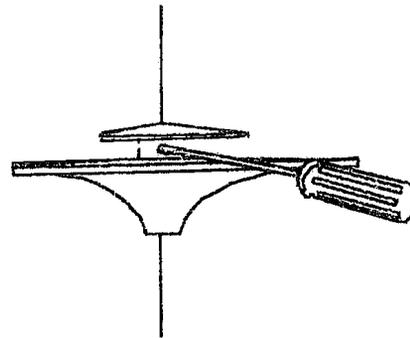

CAT. NO. 1010SCK  
10" x 10" Shelf Size

CAT. NO. 1212SCK  
12" x 12" Shelf Size