

INSTALLATION INSTRUCTIONS

crlaurence.com

CVM8030 **CRL CONVEX MIRRORS**

26" (660 mm) Diameter and Larger

(C)

FOR SUSPENSION FROM CEILING OR TO MOUNT ON COUNTER TOP

- 1. Attach Base Plate Bracket (D) to ceiling or counter top
- 2. Attach "U" Channel Bracket (C) to Base Plate Bracket (D)
- 3. Attach Mirror (A) to "J" Bracket (B) and adjust for proper angle
- 4. Tighten screws on ball bracket to fix Mirror in desired position

Tips on Installation (Safety Use)


Avoid collisions at intersections:

Place Mirrors as close to eye level as practical

Theft and intrusion protection (Retail Stores): Place Mirrors up high in a position so that the image can be seen by attendant over and behind obstructions


FOR EXTENDED WALL USE

- 1. Attach Base Plate Bracket (D) to wall
- 2. Attach "U" Channel Bracket (C) to Base Plate Bracket (D)
- 3. Attach "J" Bracket (B) to Channel Bracket (C)
- 4. Attach Mirror (A) to "J" Bracket (B) and adjust for proper angle
- 5. Tighten screws on ball bracket to fix Mirror in desired position

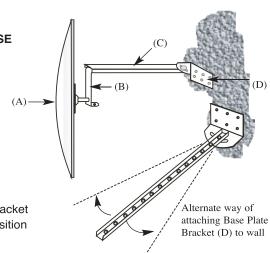

FOR CLOSE WALL USE ON 13" - 18" ROUND MIRRORS AND ON SMALLER RECTANGULAR **MIRRORS USE "J" BRACKET ONLY** (MUST BE ORDERED SEPARATELY)

- 1. Attach "J" Bracket (B) to wall or post with screws or lag bolts
- 2. Attach Mirror (A) to "J" Bracket (B) and adjust for proper angle
- 3. Tighten screws on ball bracket to fix Mirror in desired position

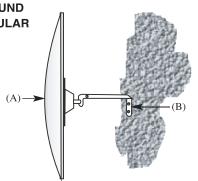


Package Contents:

- (A) 1 Mirror
- (B) 1 "J" Bracket
- (C) 1 "U" Channel Bracket
- (D) 1 Base Plate Bracket
- 4 Bolts and Nuts Provided



MIRROR (A)



"J" BRACKET (B)

