

#### **Important Information:**

The PH41R Right Hand Sidelite Mount Transom Patch is designed for 2 -3/4" (70mm) and 2 -9/16" (65mm) setbacks. This dimension is measured from the "finished" door opening to the pivot center line. When using the PH41R Right Hand Sidelite Mount Transom Patch simply reverse the INT300 pivot insert to match either setback.

#### **Specifications:**

Glass Sizes: 3/8" (10mm) to 1/2" (12mm) thick tempered safety glass

Construction: High density casting

**Cutouts and Holes Required** 

Includes: Gaskets, screws and template Insert: (Included) - INT300 Pivot Insert

Accessories: (Included) - None

Available Finishes: - PH41RA Satin Aluminum

PH41RBR Polished Brass (Lacquered)PH41RBS Brushed Stainless SteelPH41RPS Polished Stainless Steel

#### **Use of Gaskets:**

For 3/8" (10mm) Glass: Use two gaskets on each side For 1/2" (12mm) Glass: Use one gasket on each side

## **Recommendations:**


For public safety, we recommend the use of only tempered safety glass.

SEE TEMPLATE ON BACK Refer to Dimensions Shown to Ensure Accuracy

# CRL RIGHT HAND SIDELITE MOUNTED TRANSOM PATCH with SUPPORT FIN BRACKET

North American 2 -3/4" (70mm) SetBack OR European 2 -9/16" (65mm) SetBack Includes INT300 Insert, Cover Plates

Cat No. PH41R

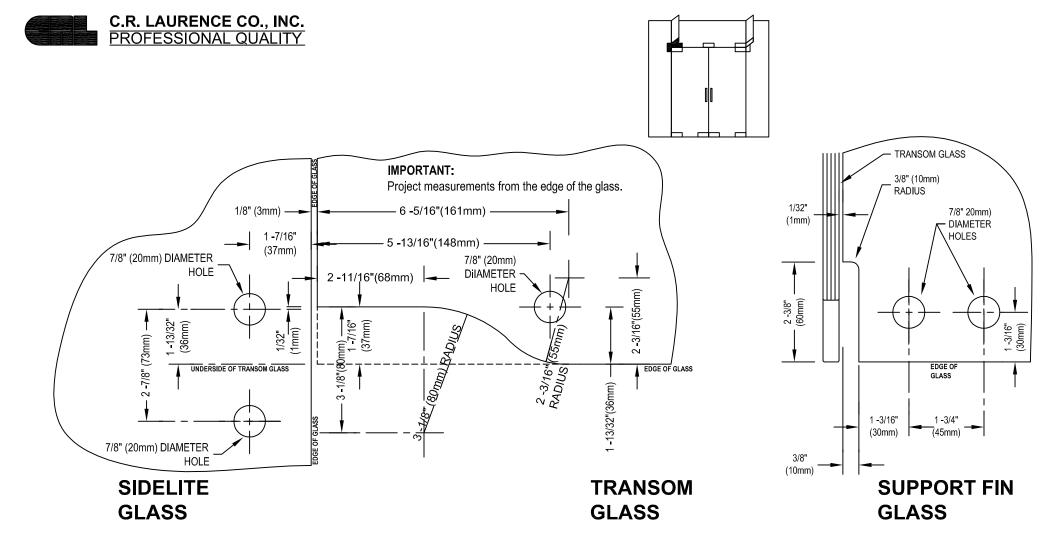


# CRL RIGHT HAND SIDELITE MOUNTED TRANSOM PATCH

### with SUPPORT FIN BRACKET

North American 2 -3/4" (70mm) SetBack OR European 2 -9/16" (65mm) SetBack Includes INT300 Insert, Cover Plates

Cat No. PH41R

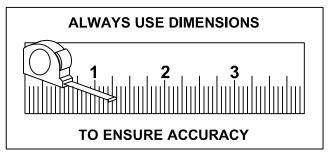

DO NOT SCALE