



Rivet-Nut Installation Steps

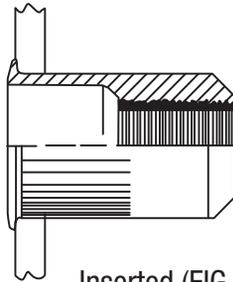

Inserted (FIG. 1)

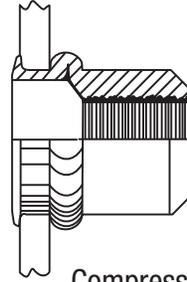

Compressed (FIG. 2)

STEP1



First, drill the appropriate size hole for the Rivet-Nut into your round post or square tube

STEP2



Second, insert the Rivet-Nut into your round post or square tube until the collar on the Rivet-Nut is against the post or tube wall (FIG. 1)

STEP3



Third, compress the Rivet-Nut by using the CRL Cat. No. 34604 Heavy-Duty Thread Insert Tool (FIG. 2)

STEP4



Lastly, insert the screw or bolt into the Rivet-Nut and tighten