


INSTALLATION INSTRUCTIONS

AW7700 SERIES ALUMINUM SUNSHADE SYSTEM

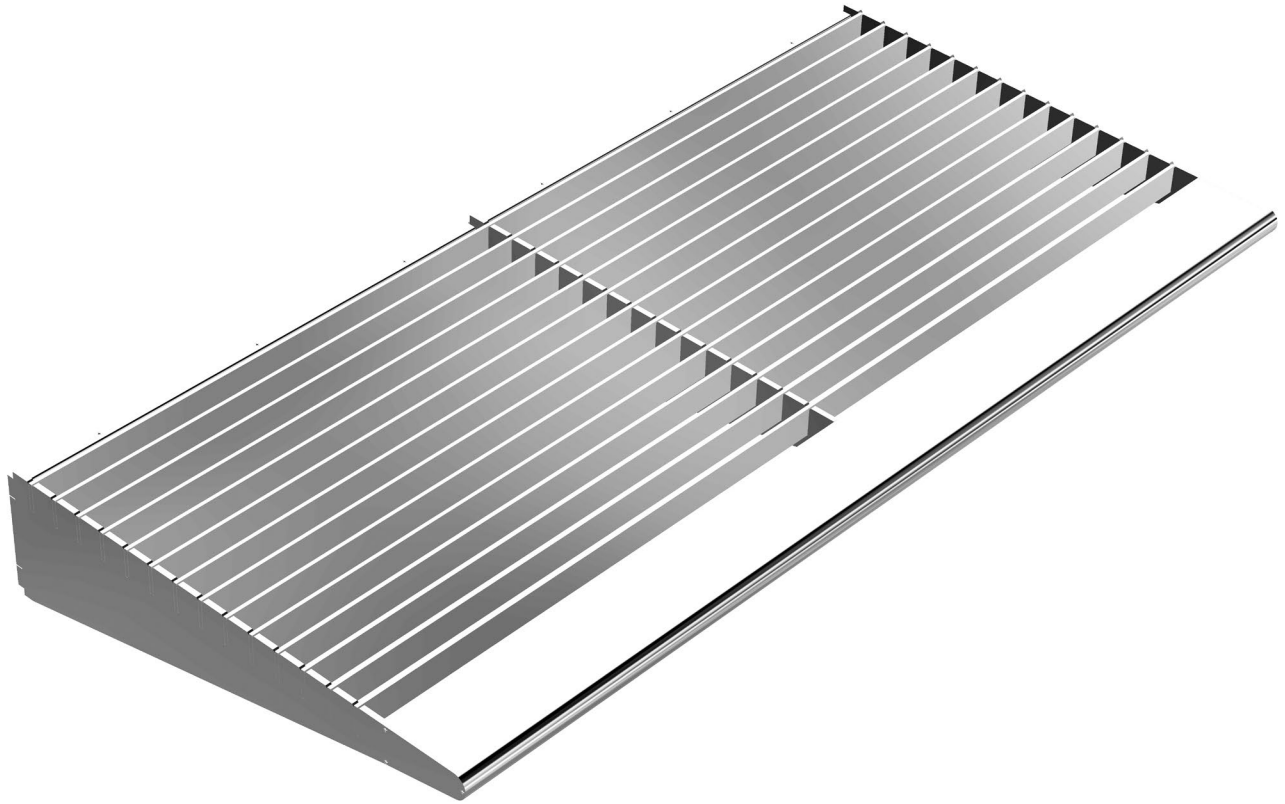

IMPORTANT: READ THIS MANUAL THOROUGHLY BEFORE BEGINNING INSTALLATION



A CRH COMPANY

Phone: (800) 228- 9203 • Fax: (800) 587-7501


Email: railings@crlaurence.com

crlaurence.com • usalum.com • crl-arch.com

11M0423_1-31-20

MOUNTING OPTIONS

NOTE: Consult a Structural Engineer to determine the appropriate fasteners for your substrate.


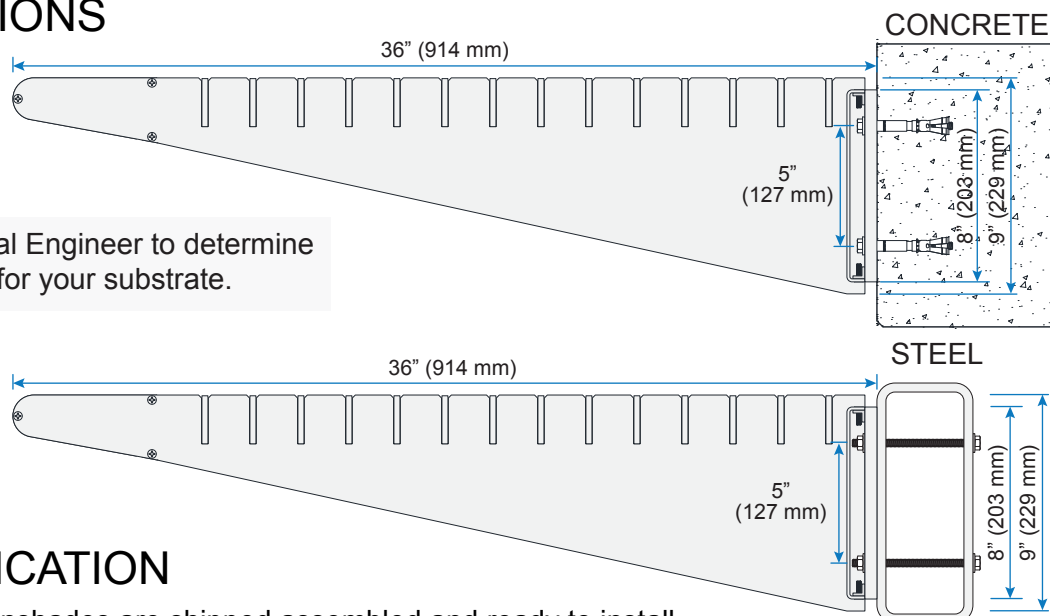


MODEL IDENTIFICATION

AW7700 Welded Series Sunshades are shipped assembled and ready to install. Standard sizes are listed below. Custom sizes and finishes available upon request.

Cat. No. 7763 Includes:



(12)
#10-32 x 3/4"
PFHMS

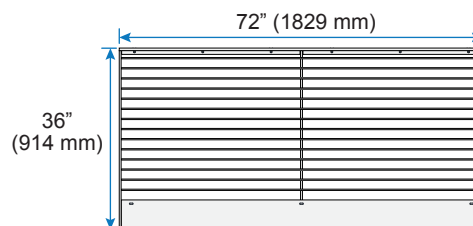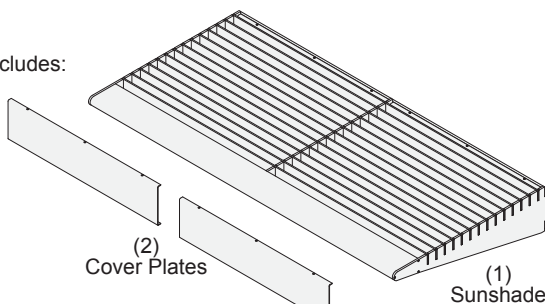

Cat. No. 7763
CRL Metallic Silver 6' (1829 mm)
7700 Series Aluminum Sunshade

Cat. No. 7783 Includes:



(12)
#10-32 x 3/4"
PFHMS

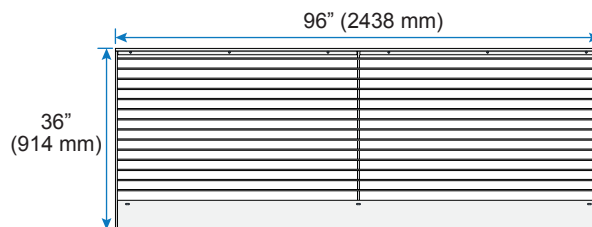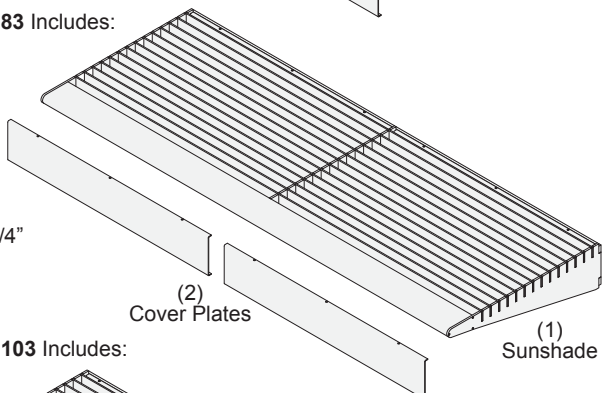

Cat. No. 7783
CRL Metallic Silver 8' (2438 mm)
7700 Series Aluminum Sunshade

Cat. No. 77103 Includes:

(16)
#10-32 x 3/4"
PFHMS

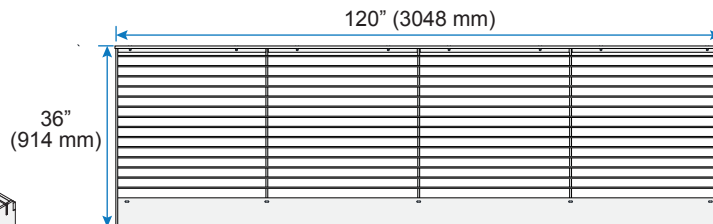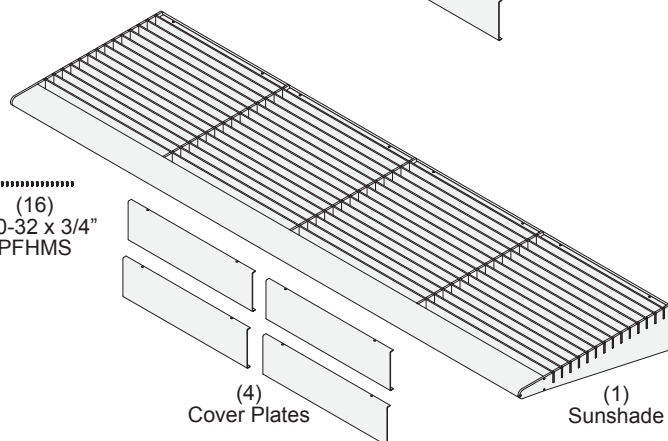


Cat. No. 77103
CRL Metallic Silver 10' (3048 mm)
7700 Series Aluminum Sunshade

INSTALLATION

Mount Sunshade

NOTE: Use fasteners specified by a Structural Engineer for your conditions. CRL EBA334 for concrete shown.

- ① Install Sunshade level and true. Fasten at each mounting hole in back plate.

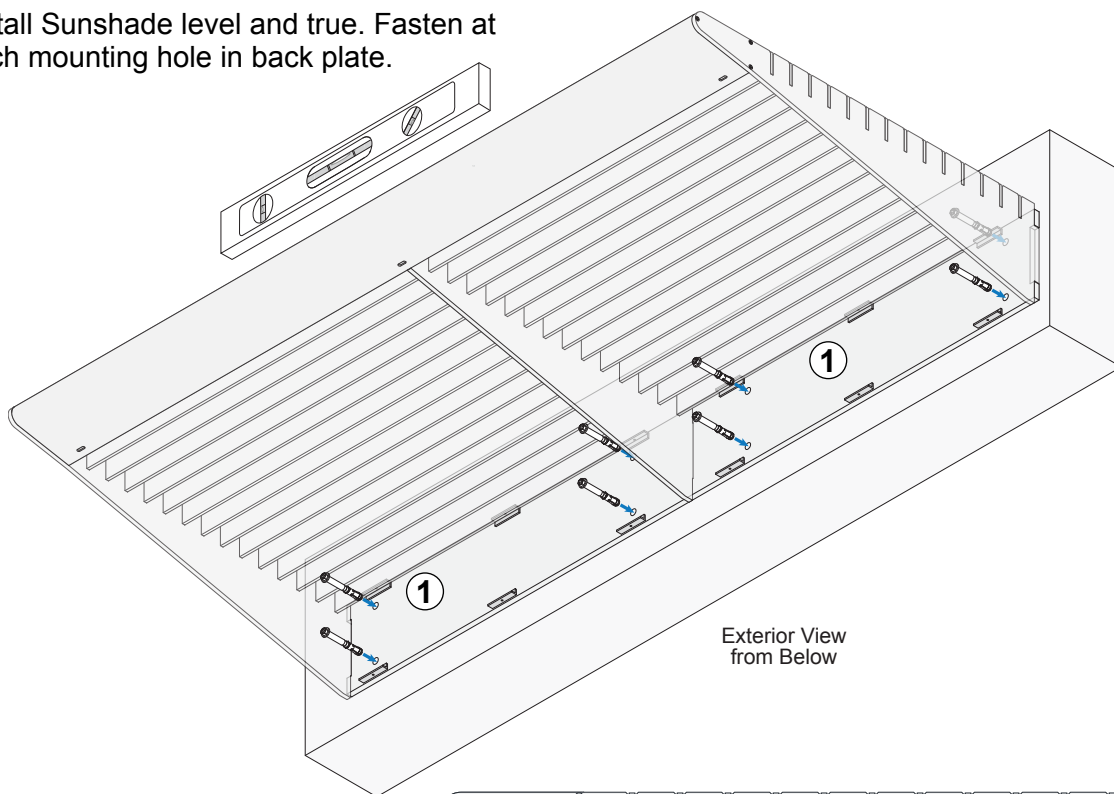

Install Cover Plates

- ② Install Cover Plates and secure with included screws.

