



# C.R. LAURENCE Installation Instructions


**CAT. No. FL1213 COUNTER TOP DEAL TRAY WITH FLIP LID**

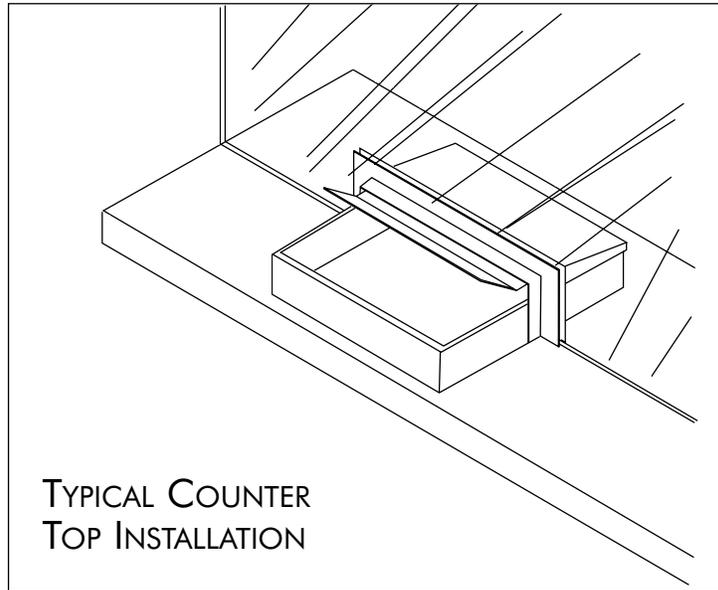

**FIGURE A: GLAZING PANEL CUT OUT**

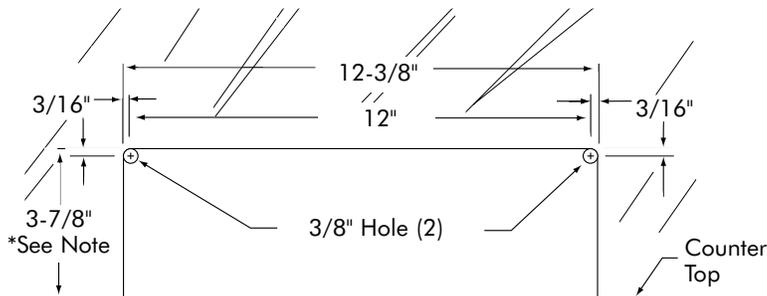


**FIGURE B**

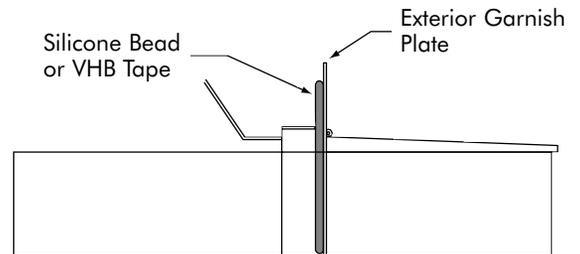


NOTE: If glazing panel is setting in a U-Channel, deduct the channel bottom thickness from the 3-7/8" measurement.

**FIGURE C**

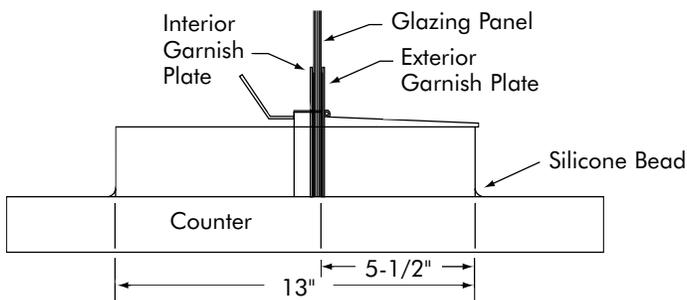

**FIGURE D**

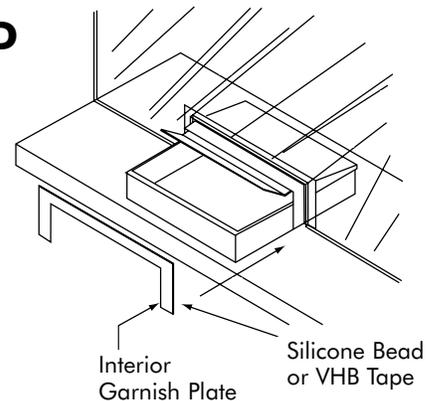

(SEE BACK OF PAGE FOR INSTALLATION INSTRUCTIONS)

**C.R. Laurence Co., Inc. Toll Free (800) 421-6144 FAX (800) 262-3299**

# **C.R. LAURENCE**

# Installation Instructions

## CAT. No. FL1213 COUNTER TOP DEAL TRAY WITH FLIP LID

### INSTALLATION INSTRUCTIONS

Read all instructions before starting installation.

#### STEP 1

Check contents of package immediately after opening. Package should include:

- 1 Each Deal Tray Unit
- 1 Each Interior Garnish Plate

Deal Tray cannot be installed properly without both parts. **Report missing parts to dealer immediately.**

#### STEP 2

Glazing panel must be notched per dimensions on template. See Figure A. Maximum glazing panel thickness is 2".

NOTE: If glazing panel is setting in a U-channel, deduct the channel bottom thickness from the 3-7/8" measurement.

#### STEP 3

Check that counter top where Deal Tray is to be installed is level, dry and clean. Minimum exposed depth of counter on customer side of glazing panel is 5-1/2", which will place unit even with the edge of the counter. The recommended depth is 7-1/2" or more.

#### STEP 4

Determine if Deal Tray will be attached to the counter with screws or silicone.

**If using screws:** Pre-drill 2 or 3 holes in the bottom of the Deal Tray (in the clerk side) and countersink them for appropriate fasteners.

**If using silicone:** No special fabrication is required. Proceed to Steps 5 and 6 and select the desired method for attaching the interior garnish plate (choose one).

#### STEP 5

Attaching garnish plates using clear silicone:

- 5A. Dispense a bead of clear silicone sealant on rear side of exterior garnish plate (top and sides). See Figure B.
- 5B. Place Deal Tray on counter top on the customer side of the opening and slide through notch until exterior garnish plate is seated. Clean up any silicone that may have squeezed out. See Figure C.
- 5C. Dispense a bead of clear silicone sealant on rear side of interior garnish plate (top and sides).
- 5D. Place interior garnish plate against glazing panel so top and sides align with exterior garnish plate. Clean up any silicone that may have squeezed out. See Figure D.
- 5E. If using fasteners to attach Deal Tray to counter, drill pilot holes into the counter through the holes drilled in Step 4. Fasten to complete installation.
- 5F. If using silicone to attach Deal Tray to counter, run a bead of silicone around the entire bottom perimeter of the unit. Tool the bead to obtain an attractive concave appearance. In 24 hours the silicone will skin over and have sufficient strength to hold the unit in place. Full cure will be obtained in 5 to 7 days.

#### STEP 6

Attaching garnish plate using VHB Tape:

- 6A. Place a strip of 1/2" clear VHB Tape on rear side of exterior garnish plate (top and sides). See Figure B.
- 6B. Place Deal Tray on counter top on the customer side of the opening and slide through notch until exterior garnish plate is seated. Be sure that VHB Tape has made full contact with panel. See Figure C.
- 6C. Place a strip of clear VHB Tape on rear side of interior garnish plate (top and sides).
- 6D. Place interior garnish plate against glazing panel so top and sides align with exterior garnish plate. Be sure that VHB Tape has made full contact with panel. See Figure D.
- 6E. If using fasteners attach Deal Tray to counter, drill pilot holes into the counter through the holes drilled in Step 4. Fasten to complete installation.
- 6F. If using silicone to attach Deal Tray to counter, run a bead of silicone around the entire bottom perimeter of the unit. Tool the bead to obtain an attractive concave appearance. In 24 hours the silicone will skin over and have sufficient strength to hold the unit in place. Full cure will be obtained in 5 to 7 days.