


Revisions By:

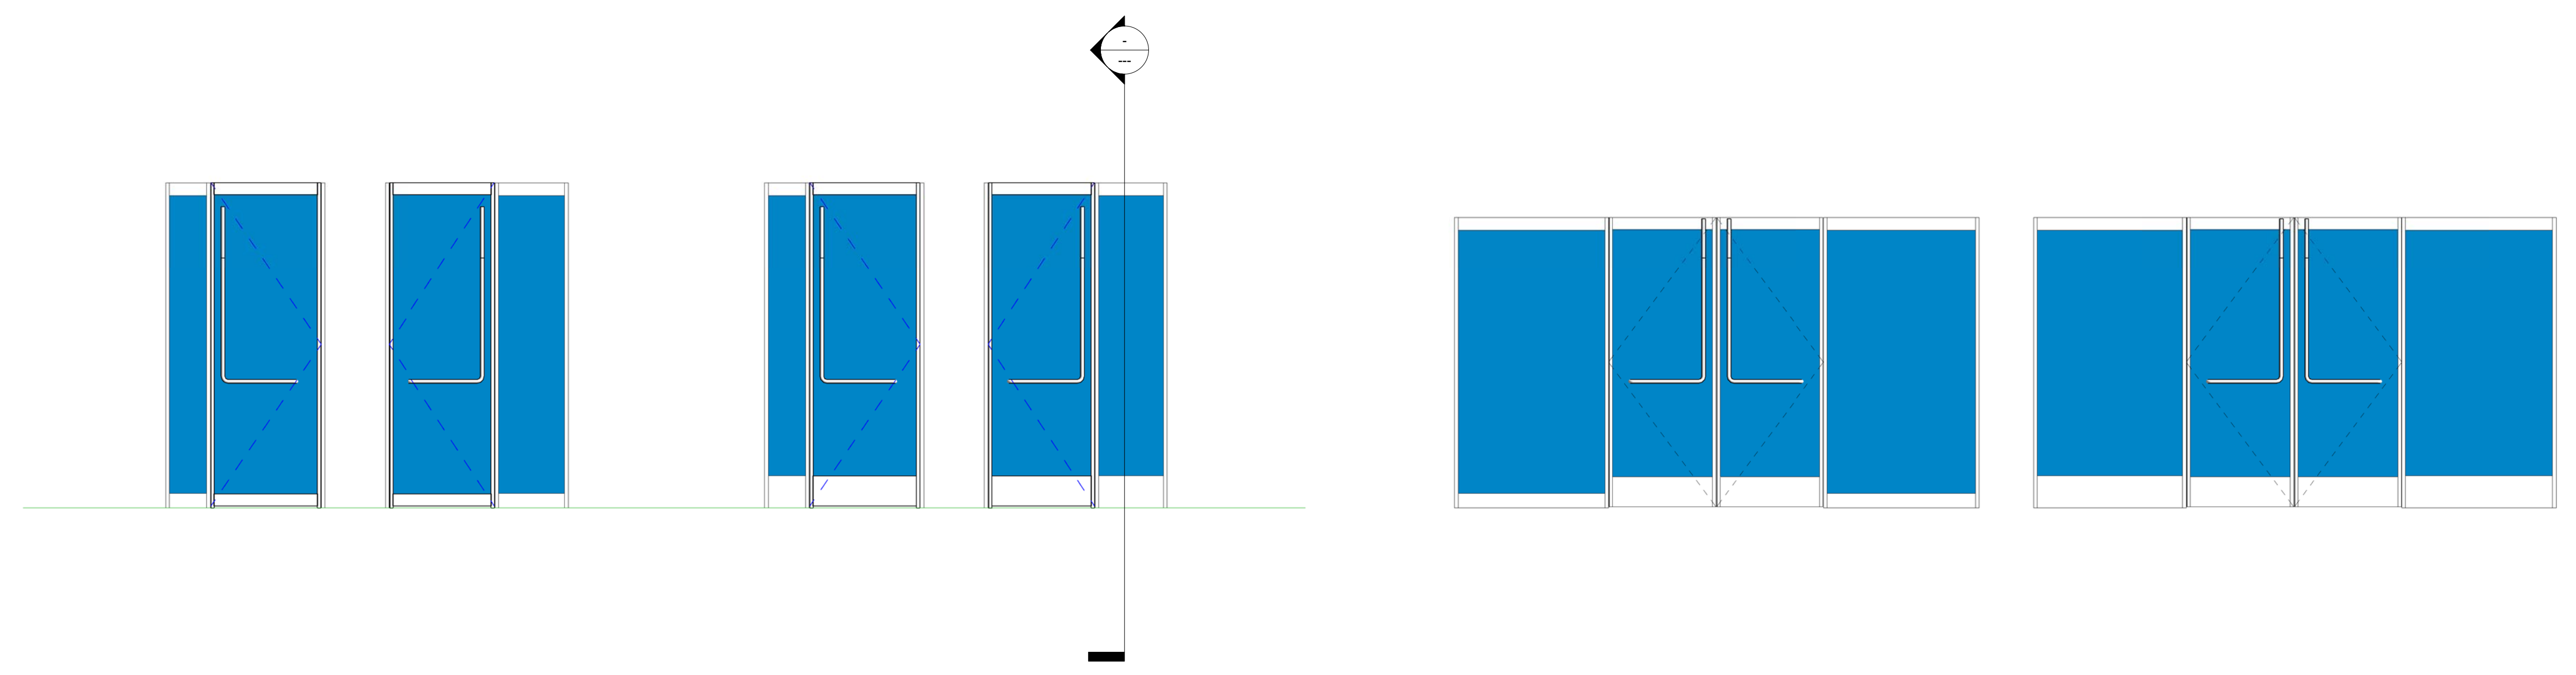


1 South
3/8" = 1'-0"

To bring everything to your project:
*Select all walls inside the drawn rectangle
*Ctrl-V to paste onto your project.

Now you have these options embedded

(Note you might need to cut out your solid wall and modify the face to insert the "revit curtain wall" in order to bring these in. Check Sample)

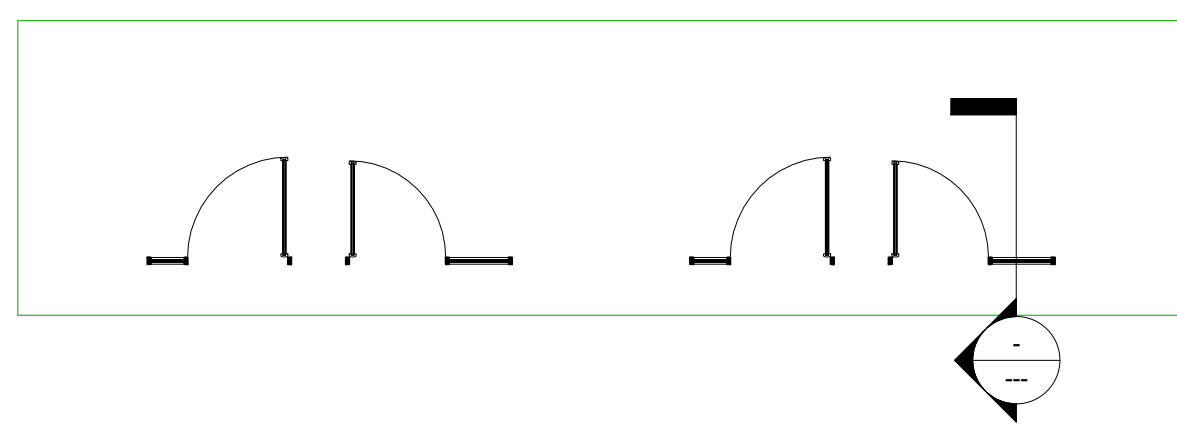

Entice Doors
4" Bottom Rail Entice Doors
10" Bottom ADA Rail



Entice Double Doors
4" Bottom Rail Entice Double Doors
10" Bottom ADA Rail


SAMPLE:




*Edit face profile on your wall



*add curtain wall wall

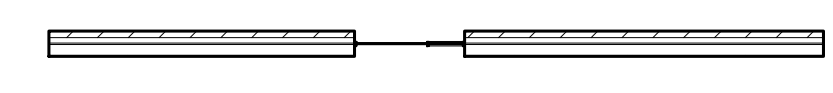

*delete top and bottom mullions where door will be

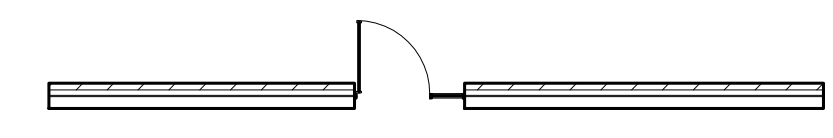

*select glaze panel and replace with door family from properties menu

Description
**ENTICE
SINGLE & DOUBLE
DOORS**

2 Level 1
3/16" = 1'-0"

3 Directions
1/8" = 1'-0"

Drawn by:

Date:

Scale:

File name:

Sheet