

Installation Instructions for Two-Point Ceiling Mount Vertical Post Kit (Cat. No. VPK33)



(For Behind-the-Glass Mounting)

Stock Kit Includes:

- 1 Each – 33" (838 mm) length of 2" (51 mm) diameter Round Tubing, two Rivet Nuts, and Flat Style End Cap
- 2 Each – Tube Adapters with 1-1/2" (38 mm) diameter End Caps (with Threaded Stud)
- 1 Each – Removable Top Flange with Set Screw

- 1) Permanently install the fixed panel of glass that will accommodate the Vertical Post.
- 2) Measure from the center of the top hole in the glass where the Post is to be mounted to the ceiling.
- 3) Using this dimension, deduct 1/4" (6 mm). This will be your "cut-size". Do not cut Post yet.
- 4) Remove the Standoff Caps from the Two-Point Vertical Post.
- 5) Measuring from the center of the hole in the top Standoff Base, use your "cut-size" dimension (from Step 3 above) to cut the Post to the correct dimension.
- 6) Slide the removable flange over the cut end of the Post.
- 7) Position the cut-to-size Post in place, aligning with the 3/4" (19 mm) holes in the glass.
- 8) Screw the Standoff Caps through the glass and finger-tighten them to the Post.
- 9) Using a level, align the Post to the desired location.
- 10) Slide the top flange to the ceiling and mark the holes for drilling.
- 11) Remove the Standoff Caps and set the Post aside.
- 12) Drill the holes in the ceiling. Permanently fasten the top flange to the ceiling.
- 13) Slide the Post into the top flange and permanently fasten the Standoff Caps. Tighten the set-screw in the top flange into the Post.

NOTE:


There are size limitations when hinging a door off a panel fastened using the VPK33. Call our Frameless Shower Department for details.

For Additional Details, see next page

3-35H

Installation Instructions for Two-Point Ceiling Mount Vertical Post Kit (Cat. No. VPK33)

Cat. No. VPK33 Parts Breakdown

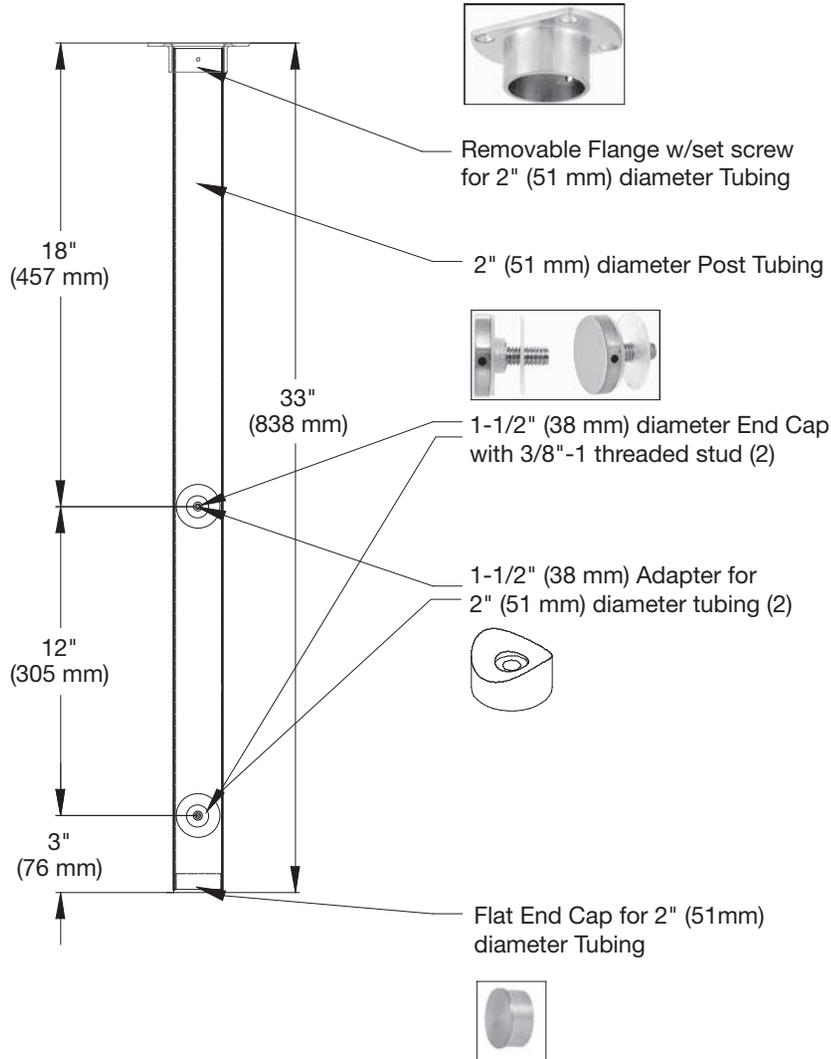

Glass Fabrication: Fixed panel requires two 3/4" (19 mm) diameter holes.

