


## Installation guidelines for Rod Display Systems (10mm)

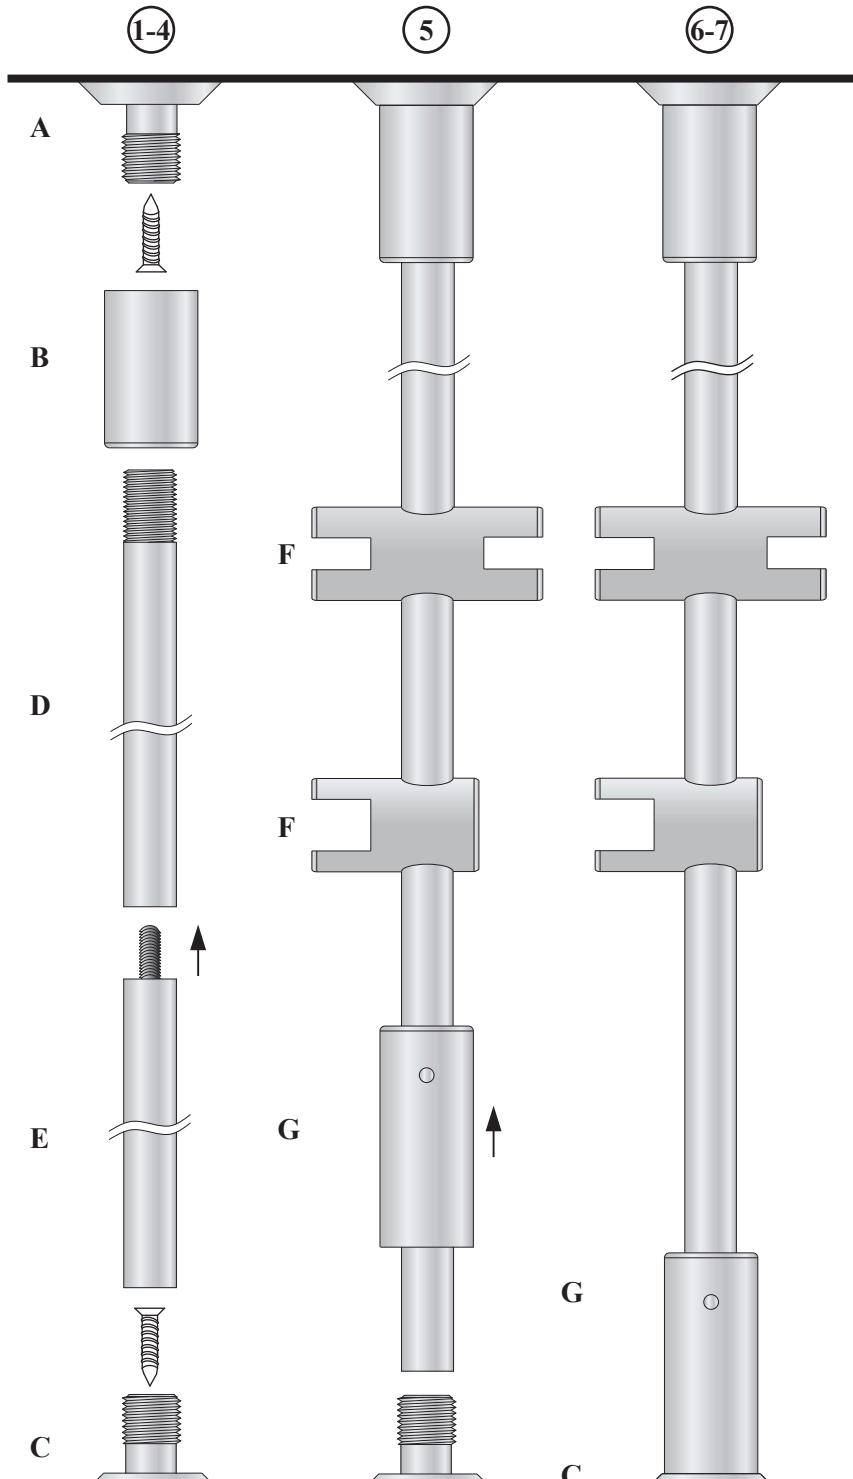

Top to Bottom - 10mm Rod installation

**\*\*Always check the installation surface to ensure that the substrate will be strong enough to hold the weight of the panel. All installation must be done so with proper hardware and protective gears to ensure safety.**

- 1) Install part (A) to ceiling using the proper hardware.  
  - Wooden screw for wood
  - Toggle bolt or screw with wall anchor for drywall/concrete
  - Twist on clip for T-bar
- 2) Screw part (B) into (A).
- 3) From part (B), use a plummet and with proper hardware, install part (C).
- 4) Screw rod ARBA-R6-M10, part (D) into part (B). If the installation requires multiple rods for each top to bottom setup, screw the extension rods, ARBA-R6-M6 or ARBA-R-M6 (E) into part (D) at this point.

**\*\*Cut rod to size. Cut ONLY on the side with round tip or internal thread. Leave approximately 1/4" (6.5mm) gap, between end of rod and part (C).**


- 5) Insert parts (F) onto the rod and then insert part (G). Lightly tighten the parts to hold in place.

For easier installation, unscrew the rod first.

- 6) Screw part (G) to part (C). Tighten the M4 screw on part (G) securely onto the rod.

- 7) Slide parts (F) to the desired heights and tighten with M4 allen wrench.

It is important to check that parts are properly tightened prior to usage.

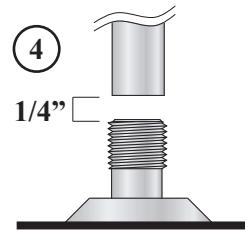

\*Parts (F) can be any of the clamps/supports that are available.  
Not all clamps/supports are shown.