### **INSTALLATION INSTRUCTIONS**

# CRL DELUXE SERENITY SER1ES SER78 SLIDING DOOR KIT





2503 E. Vernon Avenue, Los Angeles, CA 90058-1826 (800) 421-6144 Fax (800) 262-3299 crlaurence.com


### ORDER OF ASSEMBLY AND INSTALLATION

PARTS LISTPARTS LIST	2
SPECIFICATIONS	3
BLASS FABRICATION	4
SLIDING DOOR PREPARATION	
Jnpack Rollers	
nstall Top Rollers	
SITE PREPARATION	
Mark Location for Header Support Bar	
RAME FABRICATION	
Prepare Header Support Bar	
RAME INSTALLATION	
Mount Track Holder Fittings	
Install Header	
Bottom Guide Mounting Options and U-Channel Preparation (Optional)	
Unpack and Prepare Bottom Door Guide	
Install Fixed Panel Curb Mounts	
Install Fixed Panel	
Place Bottom Door Guide	
Install Bottom Door Guide	
SLIDING DOOR INSTALLATION	
Hang Sliding Door	
Install Bottom Rollers	10
INISHING	11
Unpack and Install Thru-Glass Pull	11
Position and Tighten Stopper	11
Install L-Seal	11

IMPORTANT: READ THIS MANUAL THOROUGHLY BEFORE BEGINNING INSTALLATION.


GRL.

### PARTS LIST

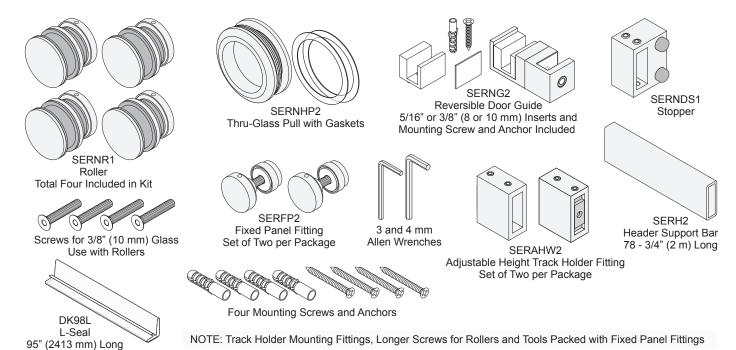


### **SPECIFICATIONS**

Drawing not to scale. Shown from exterior.

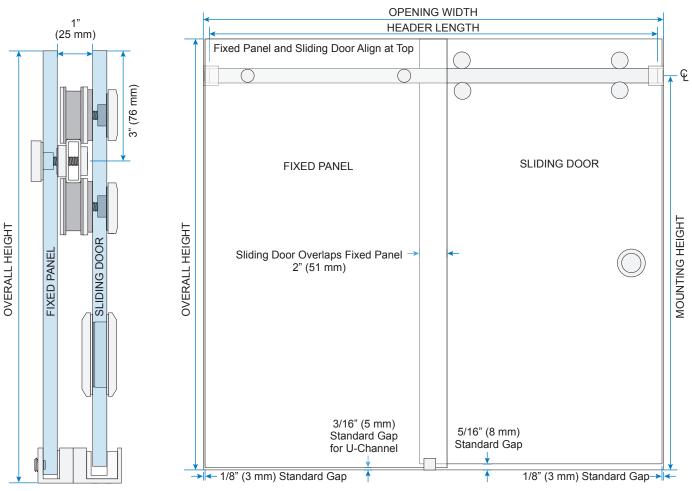


#### **GLASS FABRICATION**

NOTE: For use with 5/16" to 3/8" (8 - 10 mm) Tempered Glass only. Do Not use Laminated Glass.

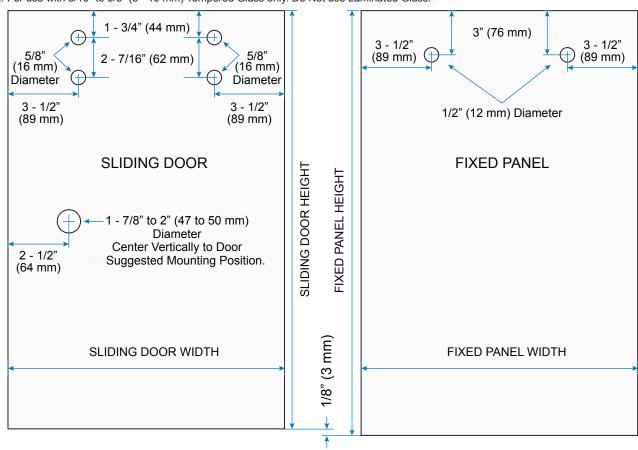

SLIDING DOOR AND FIXED PANEL WIDTH: Overall Width Divided by 2, plus 7/8" (22 mm)

FIXED PANEL HEIGHT: Overall Height minus 3/16" (5 mm) SLIDING DOOR HEIGHT: Overall Height minus 5/16" (8 mm)

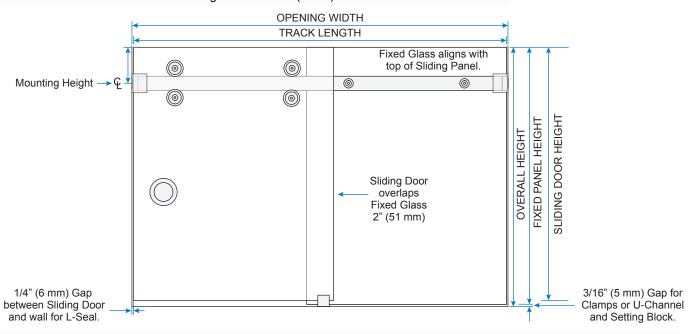

NOTE: Drawings not shown to scale. Track is cut 1" (25 mm) less than Opening Width and centered in opening. Overall Height is height from curb/floor to top of glass. Drawings shown from interior with Bottom Door Guide cupping Fixed panel. See Page 8 for Guide mounting options.

## SLIDING DOOR PREPARATION Unpack Rollers

1 Unpack and disassemble two sets of Rollers.

**EXTERIOR** 


NOTE: Rollers shipped assembled with screws for 5/16" (8 mm) Glass. Screws for 3/8" (10 mm) Glass and Allen Wrench packaged with Fixed Panel Fittings.


2 Adjust wheel height.


### **Install Top Rollers**


(3) Install Top Rollers on Sliding Door.

NOTE: Lower Rollers are installed after door is hung. See Page 10.

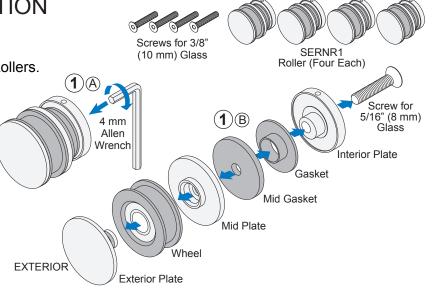

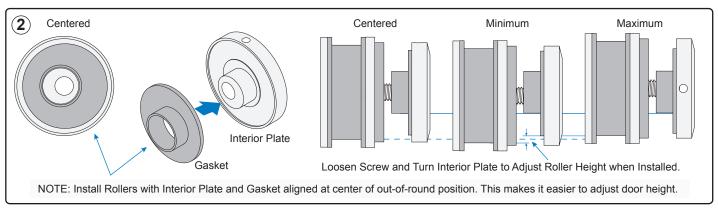


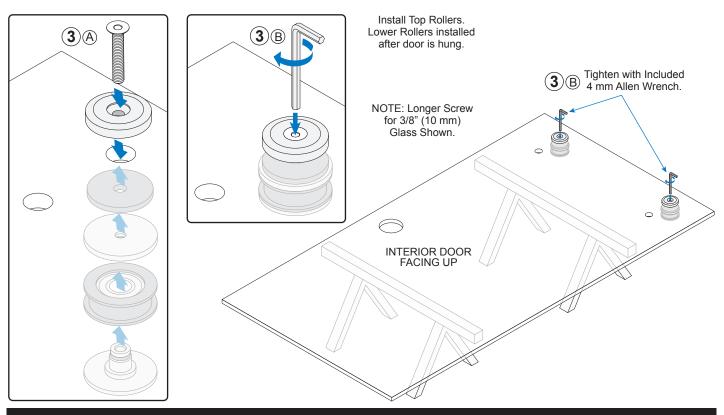

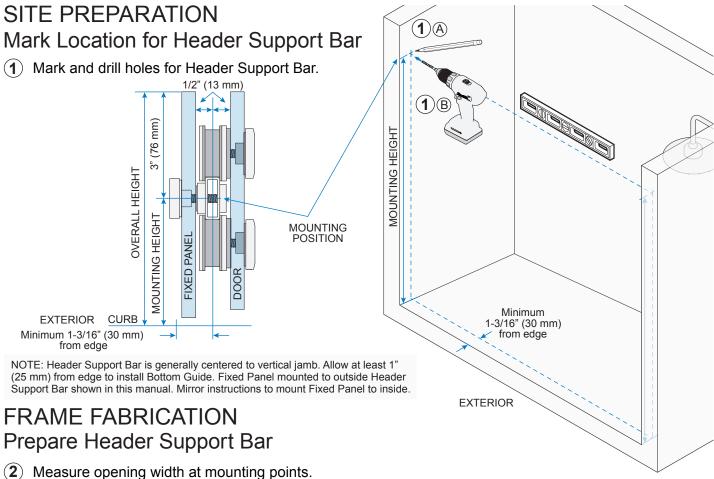

- (3) Cut SERH2 Header Support Bar.
- Drill holes for Fixed Panel Fittings.

NOTE: Header Support Bar is cut 1" (25 mm) short from tight dimension and centered in opening, leaving 1/2" (13 mm) gap on each end to mount. Refer to Fixed Panel Glass fabrication and gap allowance between Fixed Panel and wall to determine mounting hole placement.

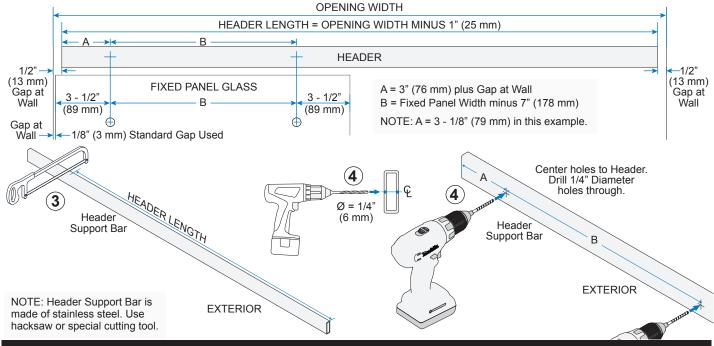

### FRAME INSTALLATION Mount Track Holder Fittings

(1) Unpack Track Holder Fittings. Loosen Set Screws and remove Mounting Blocks.

NOTE: Screws, Anchors and 3 mm Allen Wrench packaged with Fixed Panel Fittings.


(2) Fasten Mounting Blocks to wall.

#### Install Header


- (3) Unpack and loosen Set Screws on top and bottom of Stopper.
- (4) Slide Stopper and Track Holder Fittings onto Header.

NOTE: Orient Stopper with Rubber Bumpers facing Sliding Door and Track Holder Fittings with closer Set Screw next to ends of Header.


(5) Align Header with Mounting Block. Slide Track Holder Fittings to wall and tighten Set Screws to secure.

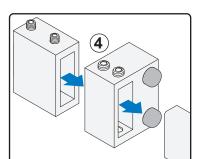




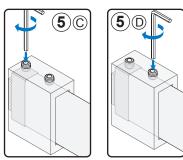



NOTE: Ensure Header is level. If not, loosen screws holding Mounting Blocks to adjust height.

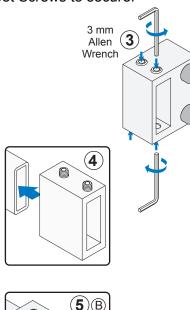








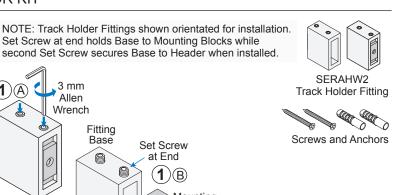



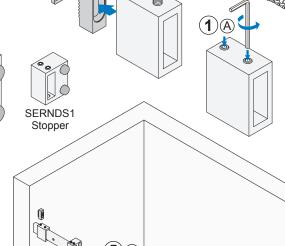

Set Screw at end holds Base to Mounting Blocks while

3 mm

Allen

Wrench

0

Fitting

Base

(1)(A)


second Set Screw secures Base to Header when installed.

Set Screw at End

**1**)(B)

Mounting

Blocks

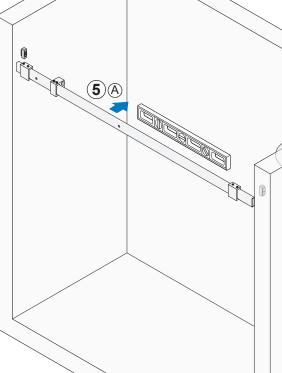

crlaurence.com | usalum.com

**EXTERIOR** 

### FRAME INSTALLATION (CONTINUED) Bottom Guide Mounting Options and U-Channel Preparation (Optional)

NOTE: Fixed Panel may be fastened to curb with clamps. Use dimensions shown below to calculate length of U-Channel for each mounting option.

1 Determine Bottom Door Guide mounting option.

