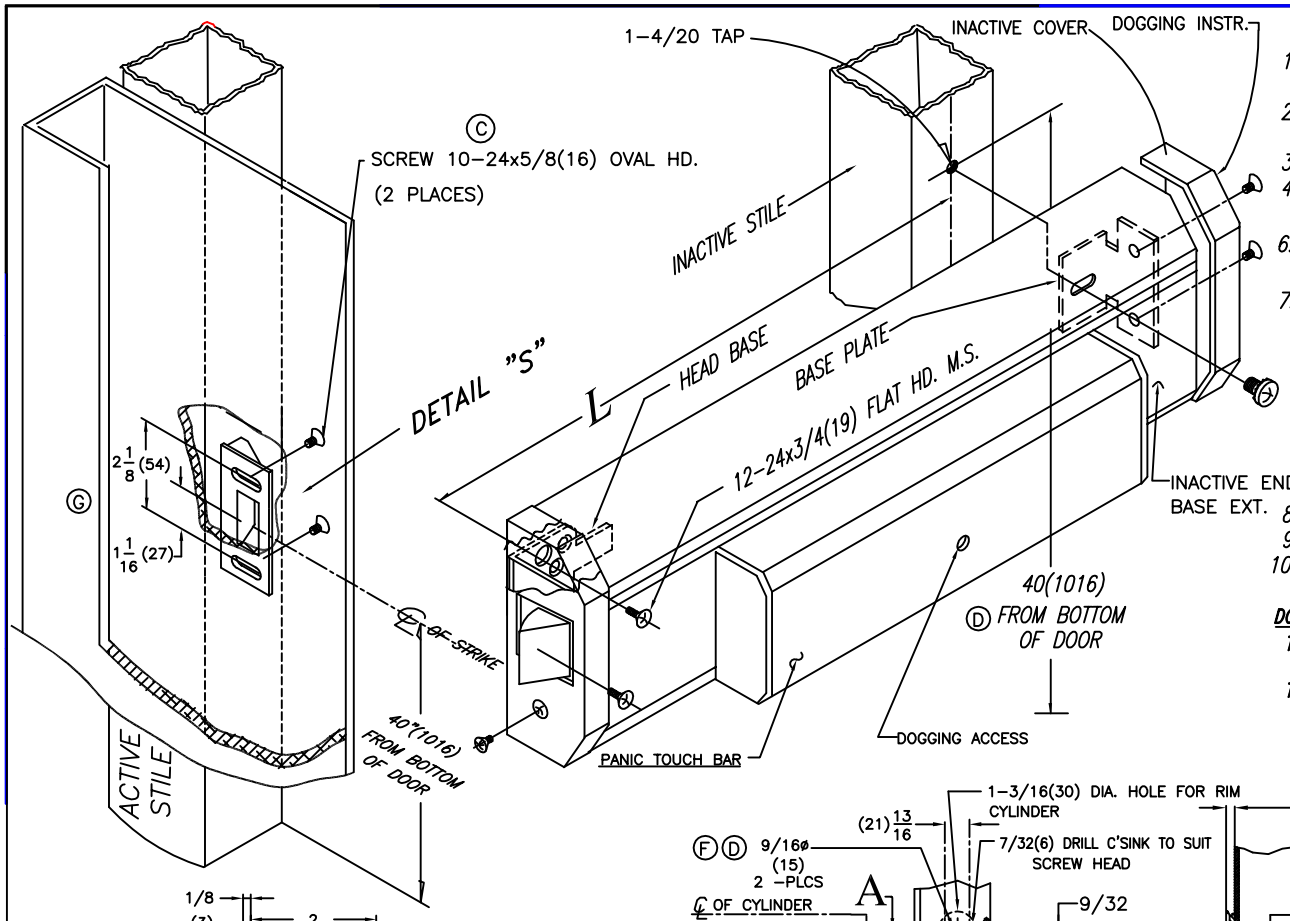

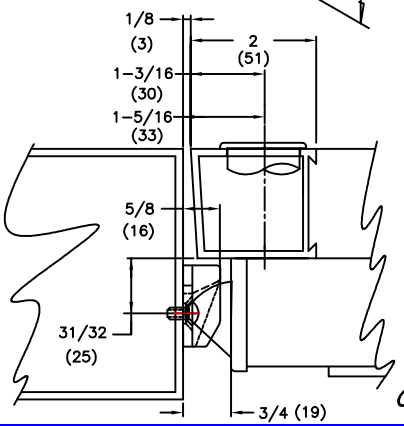

OFFSET HUNG INST.

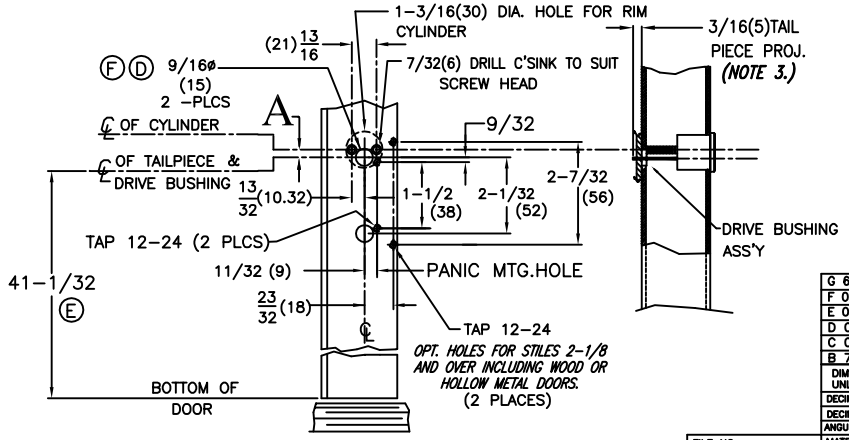

MOUNTING INSTRUCTIONS:

1. PREPARE LOCK STILE PER TEMPLATE NO. 10-935 DRILL CYLINDER MOUNTING HOLES IF REQUIRED.
2. LOCATE CENTERLINE OF CYLINDER ON EXTERIOR OF DOOR AND DRILL IF REQUIRED.
3. TRIM TAIL PIECE TO FIT INTO PANIC DRIVE BUSHING ASSEMBLY.
4. MOUNT CYLINDER AND SECURE WITH MOUNTING SCREWS (SUPPLIED BY LOCK MFG.)IF TRIM IS REQ'D PREP. PER 10-997
6. LOCATE MOUNTING HOLE ON INACTIVE STILE DRILL & TAP 1/4-20 THDS. 40"(1016) FROM BTM. OF DOOR .
7. **PANIC ATTACHMENT**

   REMOVE FRONT AND REAR END BASE COVERS BY RELEASING 6-32 x 3/16(5) FLAT HD. SCREWS. SECURE ACTIVE END OF PANIC BY INSTALLING 2 EACH 12-24x3/4(19) FLAT HD.M.S.

   SECURE INACTIVE END WITH SINGLE 1/4-20x1/2(13) ROUND HD. M.S. (PHIL.) WITH SEMS THROUGH INACTIVE BASE PLATE. PROCEED BY RE-INSTALLING BASE COVERS ON EACH END OF PANIC BASE.
8. TO INSTALL STRIKE LOCATE 10-24 TAPS ON ACTIVE STILE (2 PLACES).
9. MOUNT AND SECURE STRIKE. (REF. DETAIL "S")
10. CHECK OPERATION OF ALL PARTS INCLUDING CYLINDER IF BEING USED TO ASSURE PROPER OPERATION.

DOGGING INSTRUCTIONS:

TO DOG- INSERT HEX. KEY TURN CLOCKWISE UNTIL IT STOPS, FULLY DEPRESS TOUCH BAR THEN RELEASE.

TO UNDOG-INSERT HEX KEY TURN CLOCKWISE UNTIL IT STOPS, TOUCH BAR WILL RELEASE.

FUNCTIONAL CYLINDERS	A	DOOR OPENING	L
ILCO LOCKWOOD YALE CORBIN SCHLAGE RUSSWIN WELCH KEIL	1/4" (6)	36"(914)	33"(838)
		48"(1219)	45"(1143)
SARGENT	3/8" (10)		

MODEL 1295

RELEASE FOR PRODUCTION	DATE

G	6.25.03	2-1/8 WAS 1-13/16 ECN1625	RM
F	06/21/01	ADD 41-1/32 9/16ø WAS 19/32ø DIM ECN1502	RM
E	06/21/01	ADD 41-1/32 DIM ECN1501	RM
D	05/31/00	40" WAS 37 ADD 2nd 19/32" HOLE ECN1377	RM
C	04/17/00	12-24 CALLOUT WAS 10-32 ECN1366	RM
B	7/7/99	12-24 TAP WAS 8-32 ECN1267	RM

DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED	APPROVALS	DATE
DECIMAL DIMENSIONS .XX ± .010	APPROVED	
DECIMAL DIMENSIONS .XXX ± .005	CHECKED	
ANGULAR ± ° FRACTIONAL ± 1/64	DRAWN RM	5/5/99

jackson CORPORATION
3447 UNION PACIFIC AVE.
LOS ANGELES, CALIF. 90023

FILE NO. 10-936	MATERIAL NONE	SCALE NONE	INSTALLATION GUIDE 1295 RIM DEVICE "C" TYPE STRIKE	SHEET 1 OF 1 SHEETS
NEXT ASSY. 1295-KITS	FINISH NONE			DWG. NO. 10-936 REV. G
QTY. USED 1	HEAT TREAT			