CCS90
ZERO 90° WALL & GLASS MOUNT CLAMP

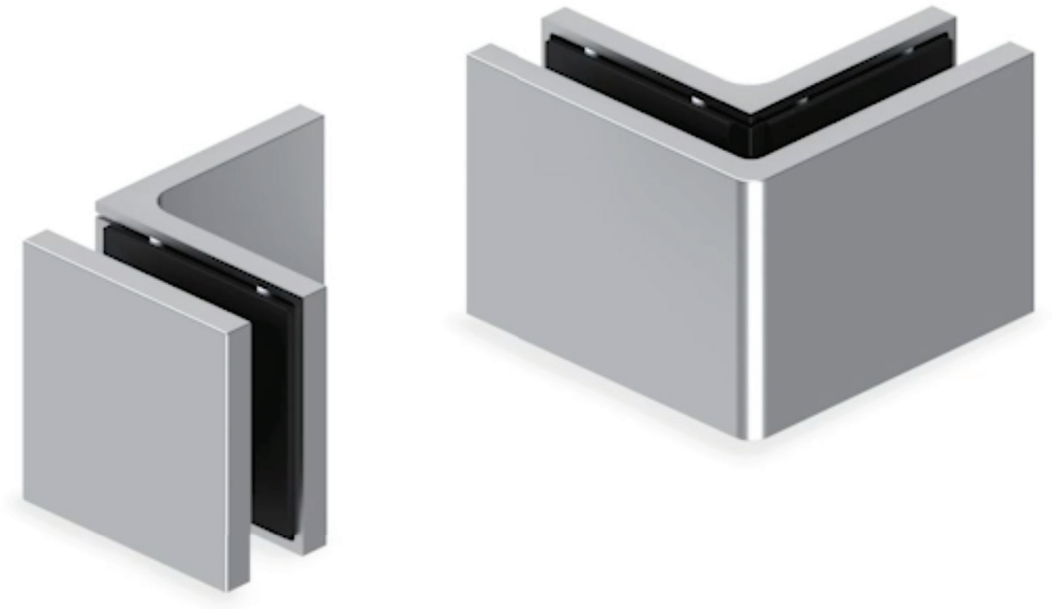

1

Make marks at the wall where each of the four glass cutouts are situated.

2

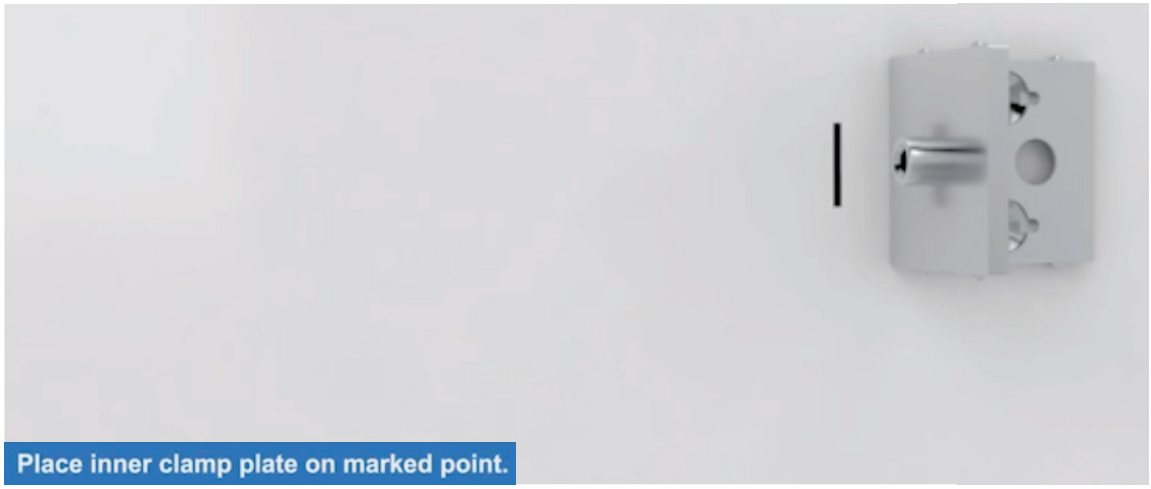
Place inner clamp plate on marked point.

3

CRL
Drill and screw through the bracket of inner clamp plate onto wall.

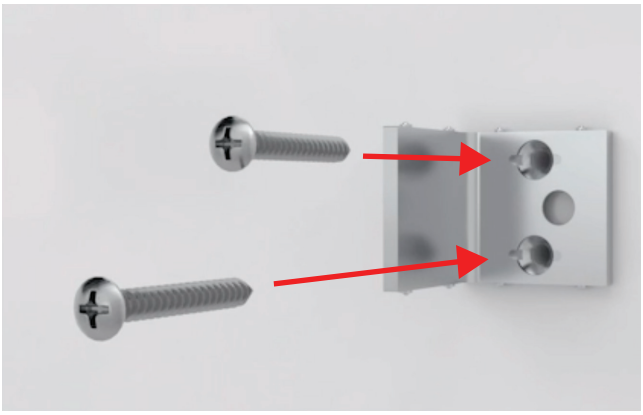

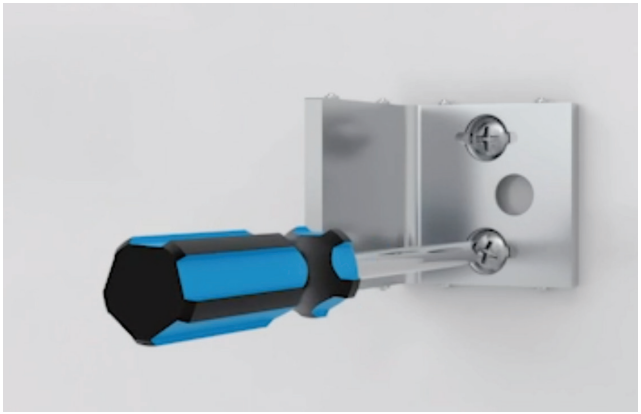

4

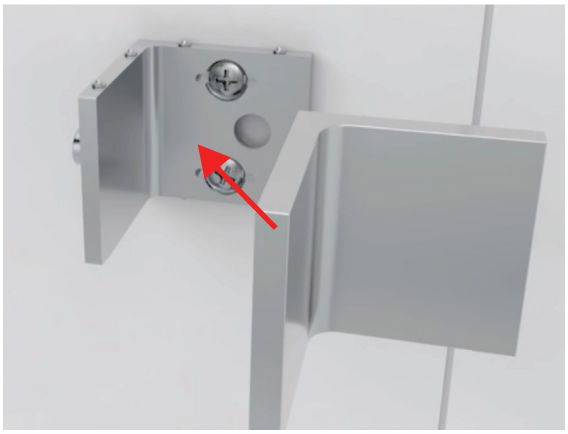

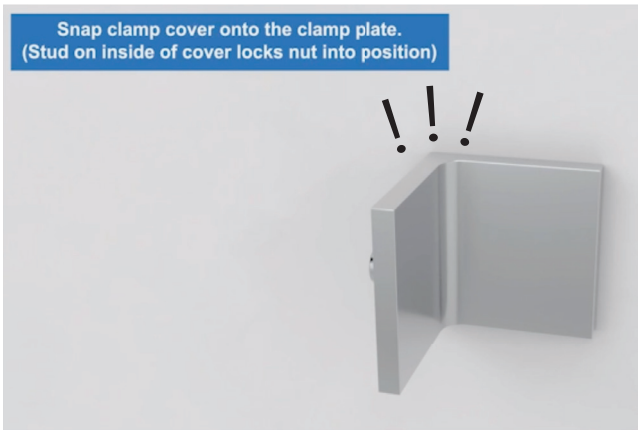
Snap clamp cover onto the clamp plate.
(Stud on inside of cover locks nut into position)

5

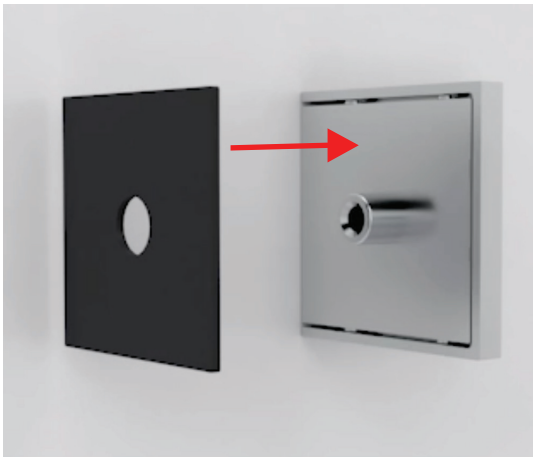

Apply gasket onto the inside of the clamp by sleeving it over the nut.

6

Sleeve protection ring over the nut.

7

Install the remaining clamps onto the marked points.

8

Place glass in place.

9

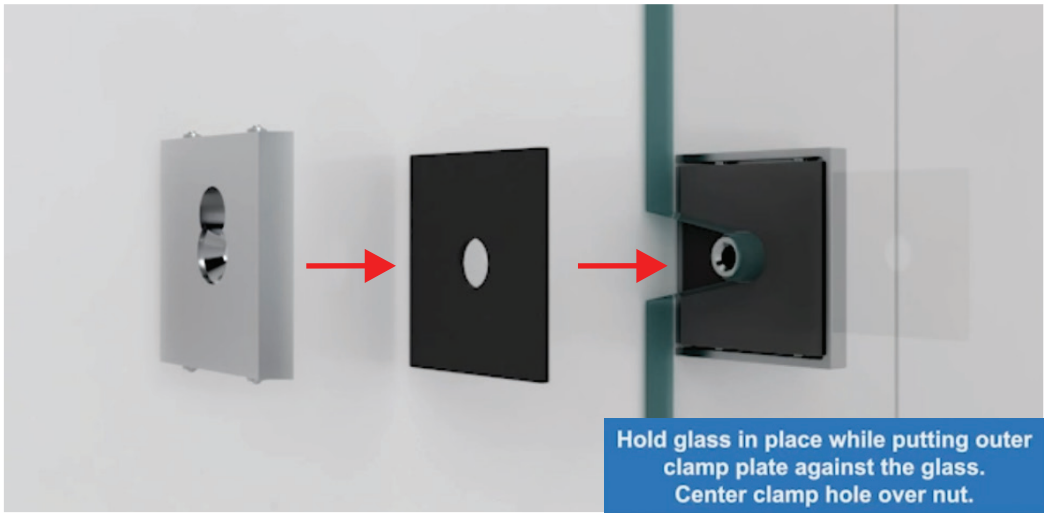
Hold glass in place while putting outer clamp plate against the glass. Center clamp hole over nut.

10

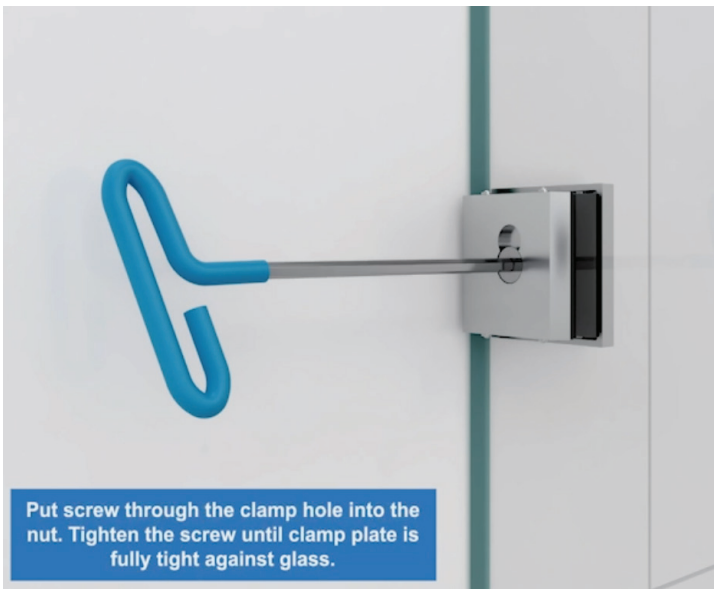
Put screw through the clamp hole into the nut. Tighten the screw until clamp plate is fully tight against glass.

11

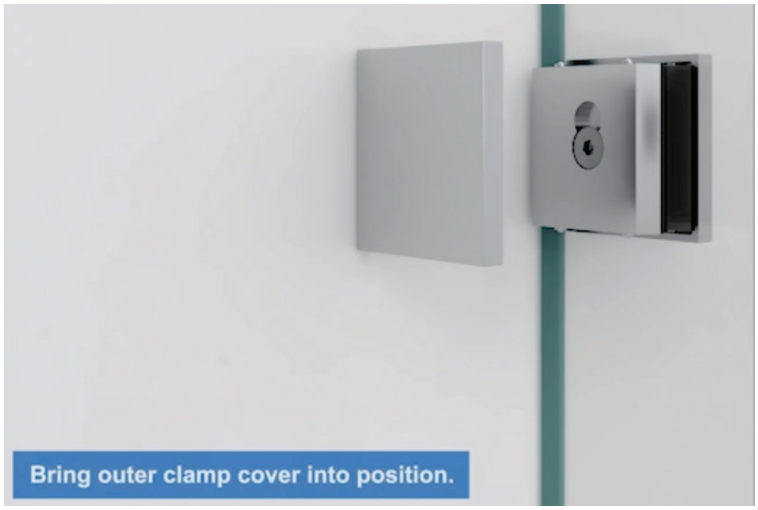
Bring outer clamp cover into position.

12

Install the rest of the clamps in the following chronology.
3
4
2

13

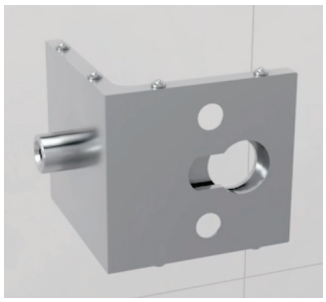

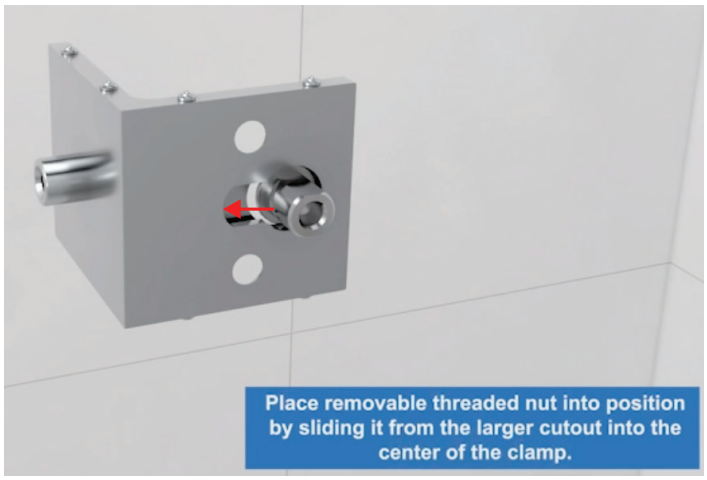
Place removable threaded nut into position by sliding it from the larger cutout into the center of the clamp.

14

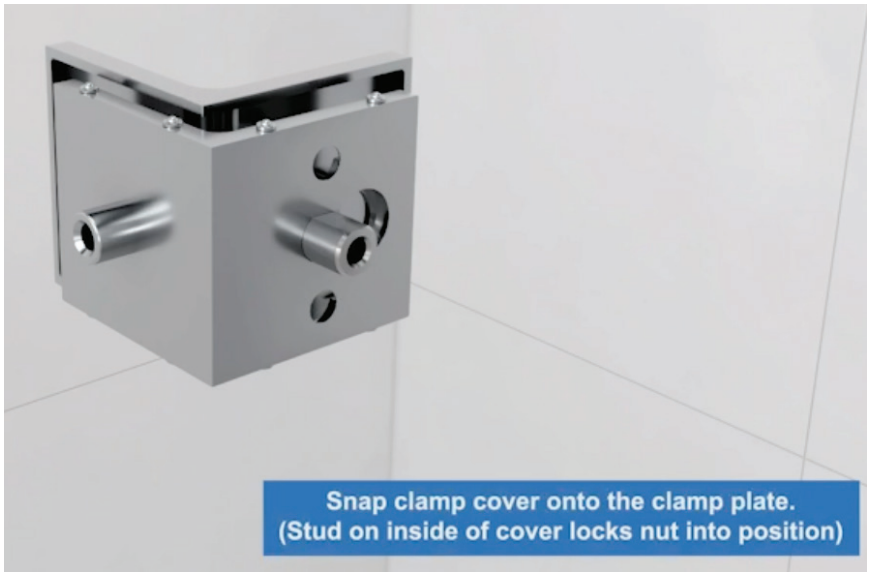

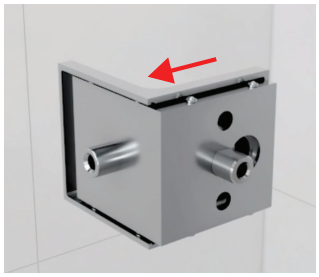

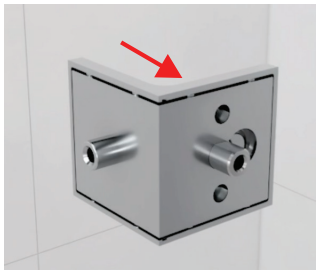

15

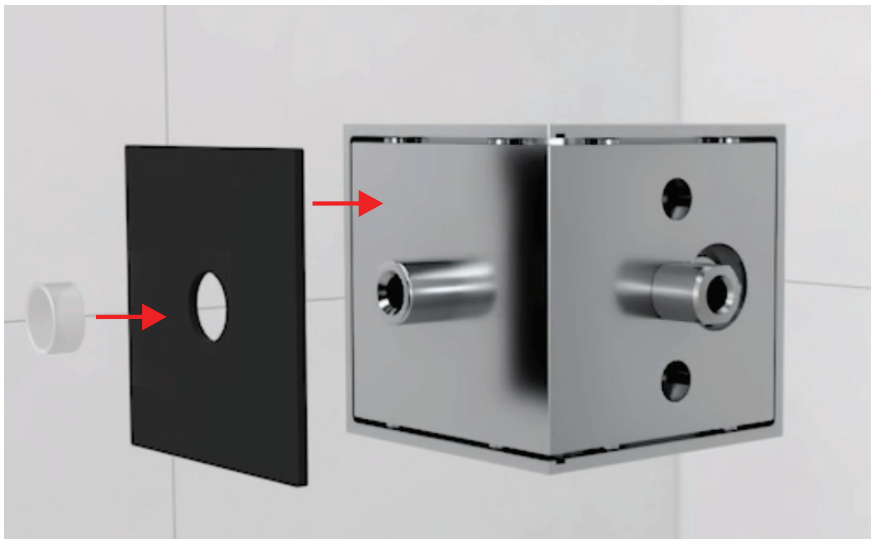

Apply gasket onto the inside of the clamp by sleeving it over the nut.

Sleeve protection ring over the nut.

16

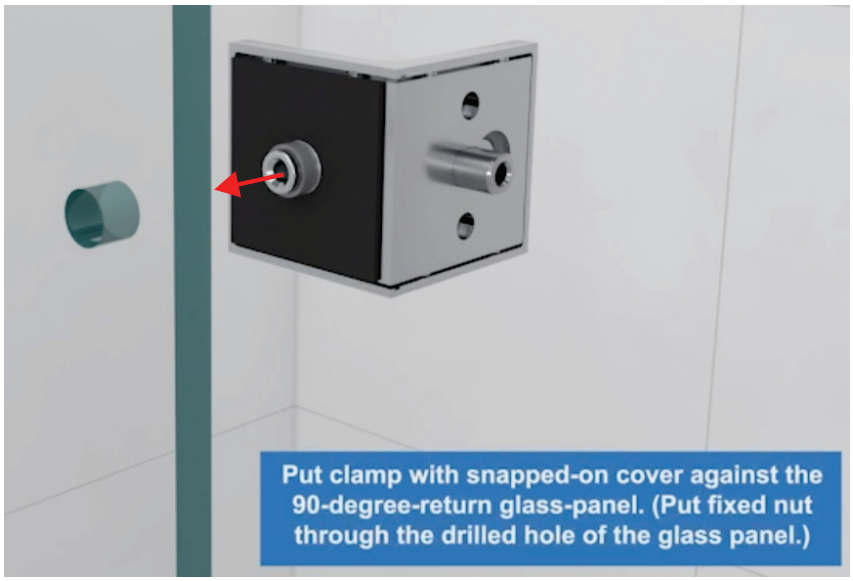
Put clamp with snapped-on cover against the 90-degree-return glass-panel. (Put fixed nut through the drilled hole of the glass panel.)

17

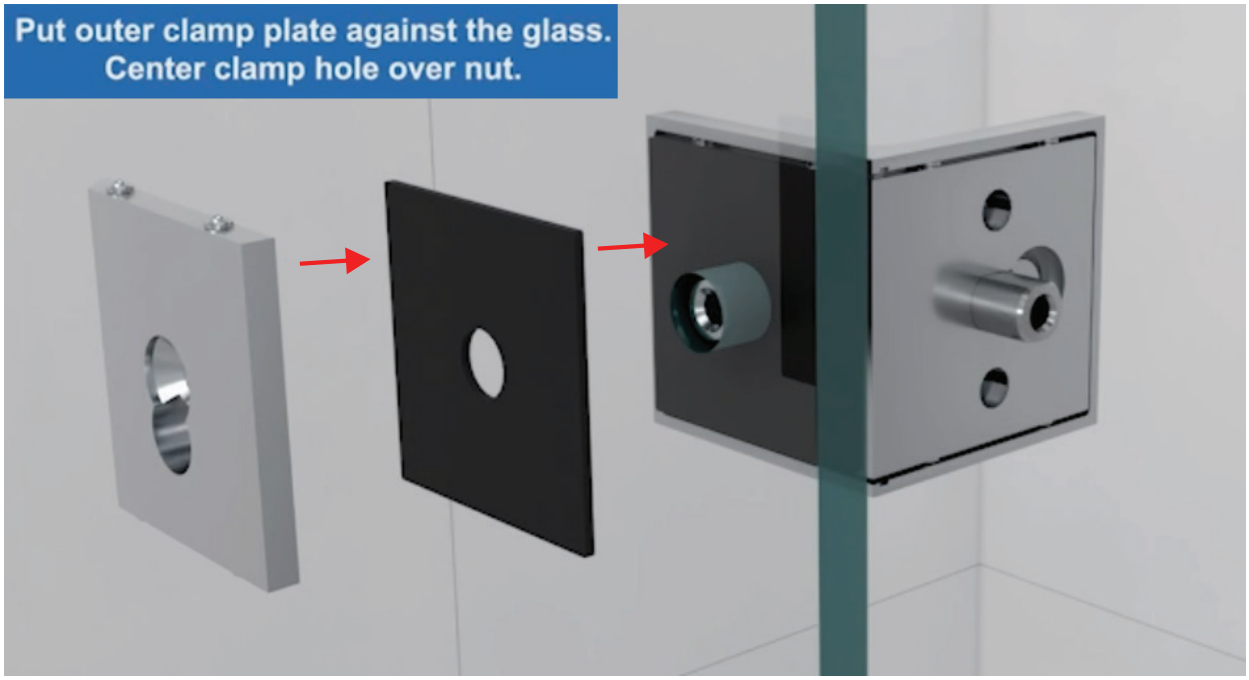
Put outer clamp plate against the glass.
Center clamp hole over nut.

18

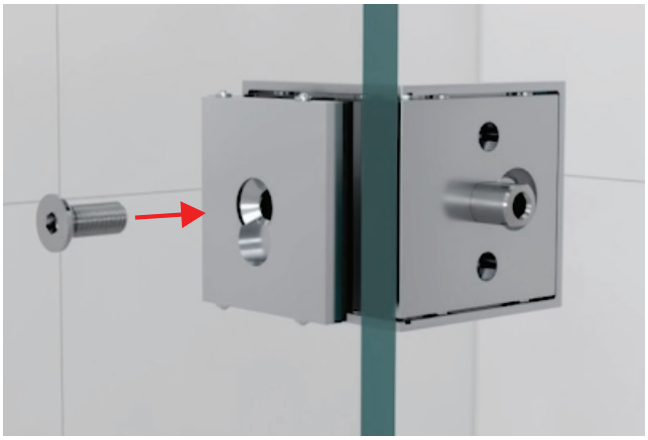

Put screw through the clamp hole into the nut. Tighten the screw until clamp plate is fully tight against glass.

19

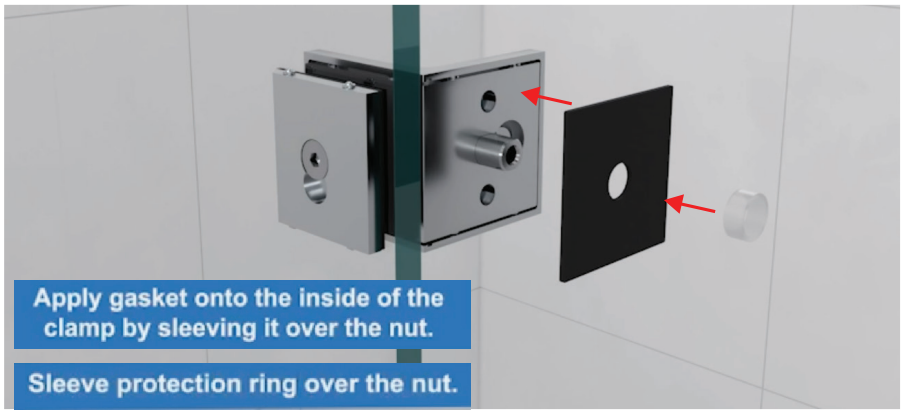
Apply gasket onto the inside of the clamp by sleeving it over the nut.
Sleeve protection ring over the nut.

20

Apply top installation steps to the bottom hinge up until placement of glass.

21

Place glass in place.

22

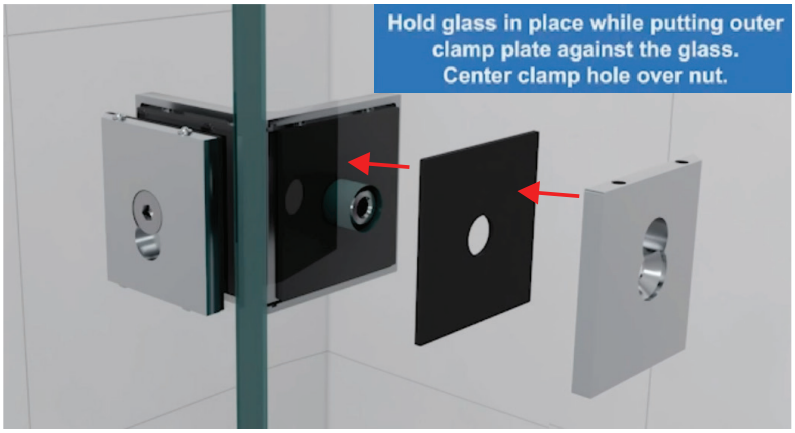
Hold glass in place while putting outer clamp plate against the glass. Center clamp hole over nut.

23

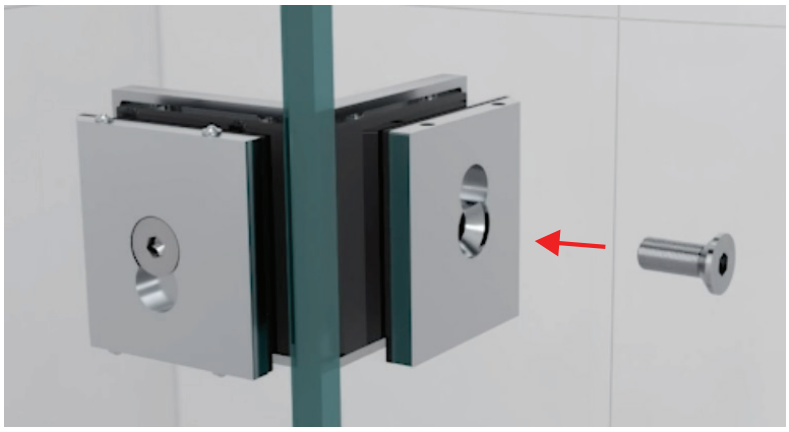

Put screw through the clamp hole into the nut. Tighten the screw until clamp plate is fully tight against glass.

24

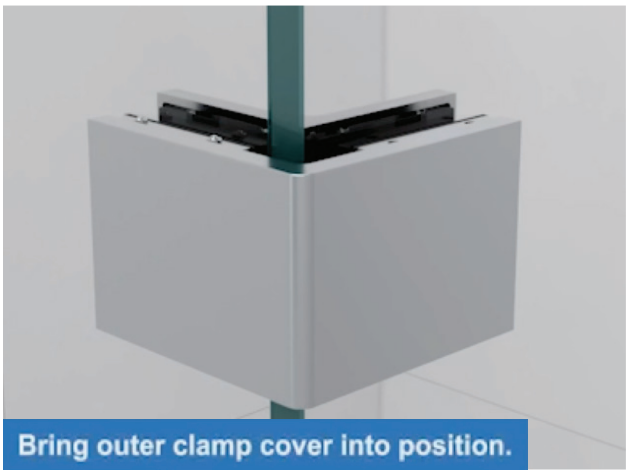
Bring outer clamp cover into position.

Snap out clamp cover onto the outer clamp plate.

25

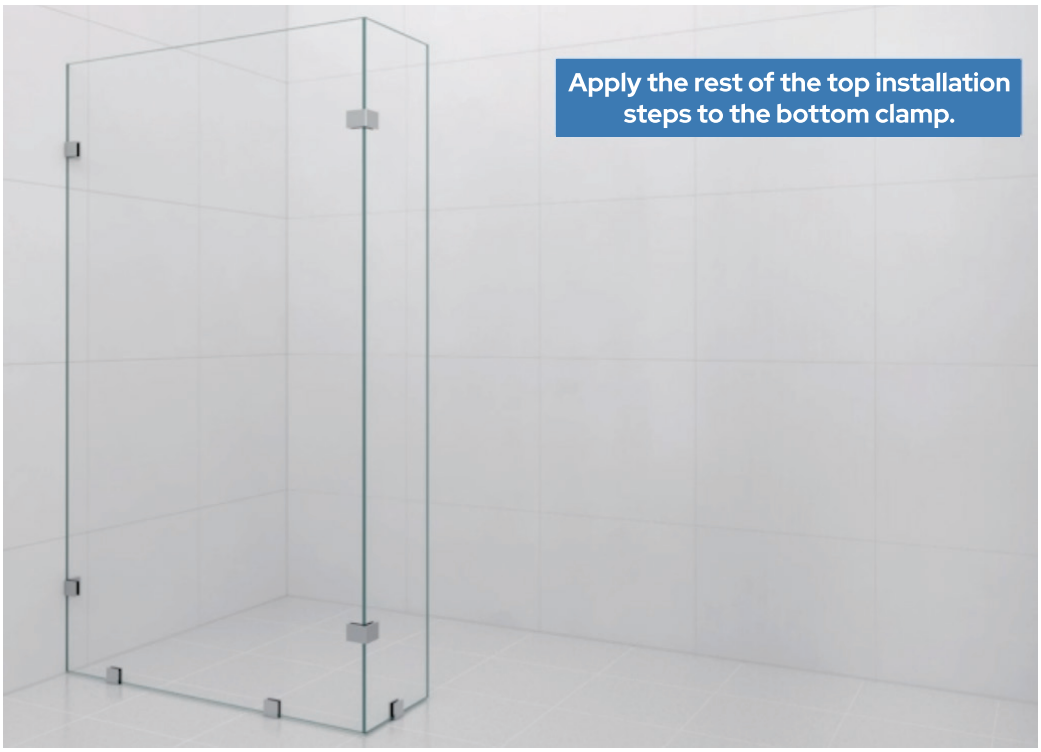
Apply the rest of the top installation steps to the bottom clamp.