




C.R. LAURENCE CO., INC.
PROFESSIONAL QUALITY

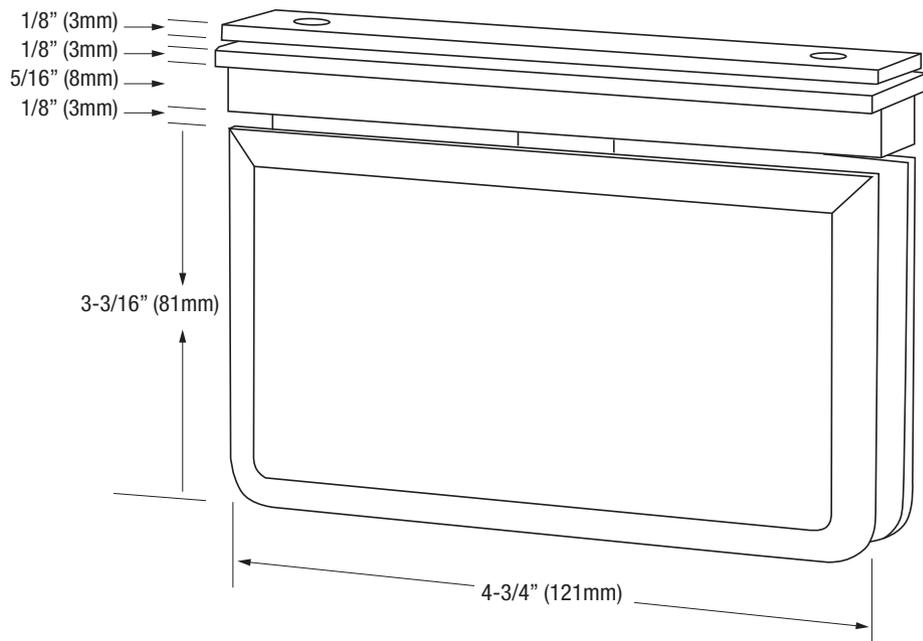

SENIOR PRIMA

EZ-Adjust Header Mount Hinge

Cat. No. SRPPH06

Edge Mount Preferred MethodPage 4H-8B
 Inset Mount MethodPage 4H-8C

*Maximum Door Capacities	1/2" (12mm) Glass	
	Weight	Width
Using 2 Hinges	145 lbs.(66 kg)	36"(914mm)

***NOTE:** Do not exceed either maximum weight or width when choosing proper quantity of hinges.

Important Information:

Template Options: The Senior Prima EZ-Adjust Header Mount SRPPH06 Hinge offers two template options, depending upon the capabilities of the temperer (see lower left of this page). The Preferred Method allows a full vertical seal along the hinge side. The Inset Mount Template is beneficial for two reasons. It allows a full length vertical seal. Also, by inseting the hinge a certain distance towards the center of the door, it enables the door to avoid hitting a towel bar, or some other protrusion from the wall.

Specifications:

- Glass Sizes:** 1/2" (12mm) thick tempered safety glass
- Construction:** Solid brass
- Closing Type:** Self-centering when within 15° of closed position
- Cutout Required**
- Includes:** Gaskets, screws and template

Use of Gaskets:

- For 1/2" Glass:** Use one thick gasket and one thin gasket on each side
- For 12mm Glass:** Use one thick gasket on each side

Recommendations:




For public safety, we only recommend the use of tempered safety glass. Do not use power tools when installing these hinges.

Maintenance Guidelines:

- Never use an abrasive cleaner on the hardware. Many of the components are coated with a clear lacquer that will be irreparably damaged if subjected to harsh, abrasive chemicals. Advise your customer that drying the hardware with a clean, soft towel on a daily basis is the best way to maintain the hardware. If mineral deposits build-up, mix a couple of drops of a mild liquid soap (such as Ivory or a similar product) into a cup of warm water. Using a soft, non-abrasive cloth, clean the hardware. Rinse thoroughly with clean, warm water and dry.



C.R. LAURENCE CO., INC.
PROFESSIONAL QUALITY

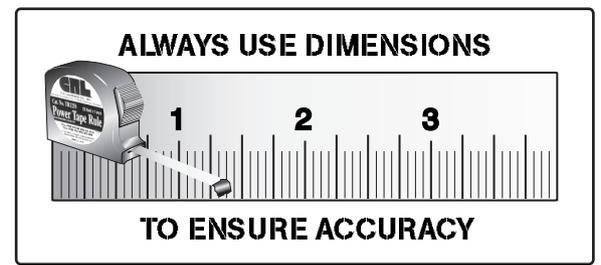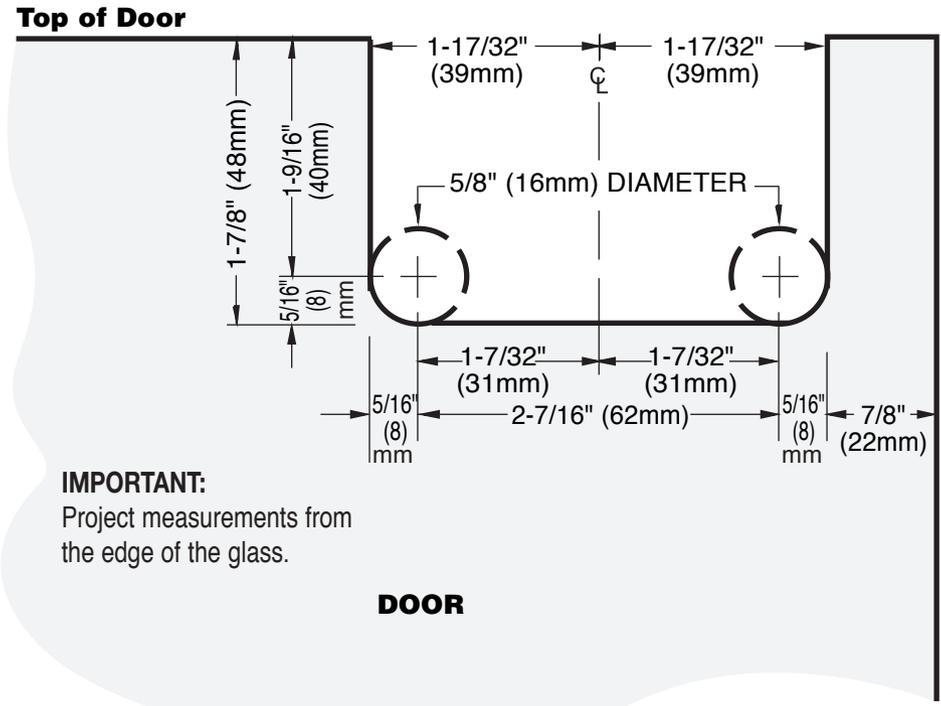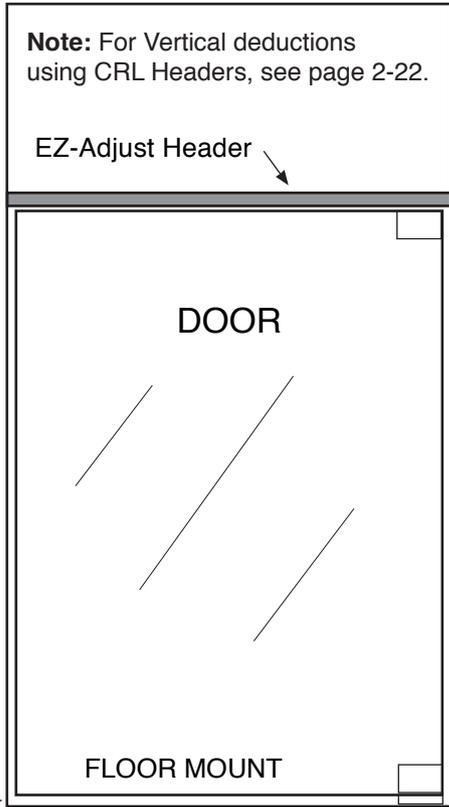

SENIOR PRIMA
EZ-Adjust Header Mount Hinge
CAT. No. SRPPH06
EZ-Adjust Header Edge Mount Preferred Method

C.R. Laurence Co., Inc. crlaurence.com For technical assistance in the United States call toll free (800) 421-6144; from Canada call toll free (877) 421-6144; Outside the U.S. and Canada call (323) 588-1281. Ask for Tech Sales at Extension 7740. Toll free fax (800) 458-7496.



C.R. LAURENCE CO., INC.
PROFESSIONAL QUALITY

Note: For Vertical deductions using CRL Headers, see page 2-22.


EZ-Adjust Header

DOOR

9/16" (14mm)
Suggested Gap

FLOOR MOUNT

*This measurement varies depending on the amount of inset you desire.

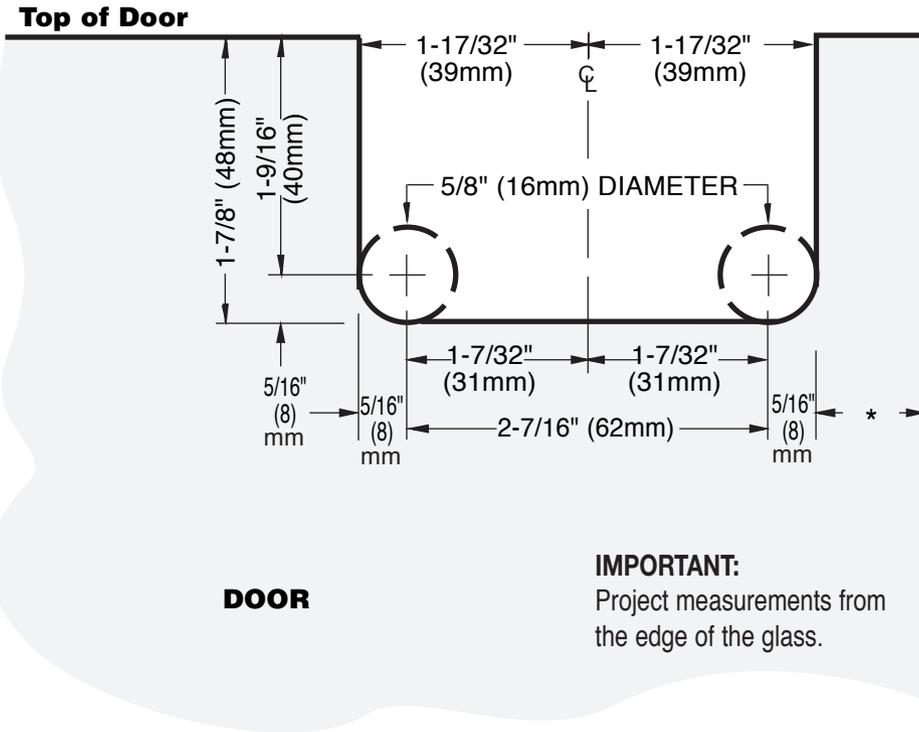

SENIOR PRIMA

EZ-Adjust Header Mount Hinge

Cat. No. SRPPH06

EZ-Adjust Header Inset Mount Method

