



INSTALLATION INSTRUCTIONS

FALLBROOK XL NY INTERIOR PARTITION SYSTEM



GENERAL INSTALLATION NOTES

Recommended Guidelines For All Installations:

1. **REVIEW CONTRACT DOCUMENTS.** Check shop drawings, installation instructions, architectural drawings, and shipping lists to become thoroughly familiar with the project. The shop drawings take precedence and include specific details for the project. Note any field verified notes on the shop drawings prior to installing. The installation instructions are of a general nature and cover most conditions.
2. **INSTALLATION.** All materials are to be installed plumb, level, and true. Install operable windows preglazed only.
3. **BENCH MARKS.** All work should start from bench marks and/or column lines as established by the architectural drawings and the general contractor with guaranteed accuracy. Working from these datum points and lines determine:
 - a) The plane of the wall in reference to offset lines provided on each floor.
 - b) The finish floor lines in reference to bench marks on the outer building columns.
 - c) Mullion spacing from both ends of masonry opening to prevent dimensional build-up of daylight opening.
4. **SURROUNDING CONDITIONS.** Make certain that construction which will receive your materials is in accordance with the contract documents. If not, notify the general contractor in writing and resolve differences before proceeding with work.
5. **SEALANTS.** Sealants must be compatible with all materials with which they have contact, including other sealant surfaces. Consult with sealant manufacturer for recommendations relative to joint size, shelf life, compatibility, cleaning, priming, tooling, adhesion, etc. It is the responsibility of the Glazing Contractor to submit a statement from the sealant manufacturer indicating that glass and glazing materials have been tested for compatibility and adhesion with glazing sealants, and interpreting test results relative to material performance, including recommendations for primers and substrate preparation required to obtain adhesion. The chemical compatibility of all glazing materials and framing sealants with each other and with like materials used in glass fabrication must be established. This is required on every project.
6. **FASTENING.** Within the body of these instructions „fastening“ means any method of securing one part to another or to adjacent materials. Only those fasteners used within the system are specified in these instructions. Due to the varying perimeter conditions and performance requirements, perimeter and anchor fasteners are not specified in these instructions. For perimeter and anchor fasteners refer to the shop drawings or consult the fastener supplier.
7. **BUILDING CODES.** Due to the diversity in state/provincial local, and federal laws and codes that govern the design and application of architectural products, it is the responsibility of the individual architect, owner, and installer to assure that products selected for use on projects comply with all the applicable building codes and laws. CRL exercises no control over the use or application of its products, glazing materials, and operating hardware and assumes no responsibility thereof.
8. **EXPANSION JOINTS.** Expansion joints and perimeter seals shown in these instructions and in the shop drawings are shown at normal size. Actual dimensions may vary due to perimeter conditions and/or difference in metal temperature between the time of fabrication and the time of installation. Gaps between expansion members should be based on temperature at time of installation.
9. **COORDINATION WITH OTHER TRADES.** Coordinate with the general contractor any sequence with other trades which offset installation (i.e. fire proofing, back-up walls, partitions, ceilings, mechanical ducts, converters, etc.)
12. **CARE AND MAINTENANCE.**
 - 12.1. GLASS:

For cleaning the glass, it is best to use clean water and a microfibre cloth. Alternatively, clean the glass surface with a mild soapy water solution using a sponge or soft cloth. Rinse thoroughly and repeat if necessary. If additional cleaning is required, we recommend using a non-ammonia cleaner for glass, which you apply to the areas to be cleaned using moderate pressure and circular movements.
 - 12.2. PROFILES AND GASKETS:
 - Carefully remove loose surface deposits with a wet sponge.
 - Use a soft brush (non-abrasive), sponge or soft cloth and a diluted solution of a mild detergent, e.g. pH neutral liquid hand dishwashing detergent in warm water (DO NOT use solvents) to remove dust and other deposits.
 - Be sure to rinse surfaces thoroughly with clean water after cleaning to remove all residue.
 - High-quality aluminum cleaners can be used to remove heavier soiling. All cleaning solutions must be washed off immediately.
 - To ensure a longer lifetime of the gaskets, they should be cleaned with clean water and a soft cloth. It is recommended to treat the seals with silicone spray afterwards.
 - 12.3. GLASS FITTINGS GENERAL INFORMATION AND MOUNTING
 - Glass fittings are not suitable for rooms where chemicals (e.g. chlorine) are used, e.g. swimming pools, saunas and brine baths.
 - Do not shut doors with excessive force. Install a door stop to prevent door from opening too far.
 - Before final fitting, the glass in the clamping area must be cleaned of grease using grease-dissolving household agents.

12.4. MAINTENANCE

The fit and movement of the fittings and the adjustment of the door must be checked regularly. Especially highly-frequented door systems require inspection carried out by a specialist or installation company. Immediately replace damaged glass elements (no glass flaking and/or conchoidal fractures)! For metallic surfaces (anodized shades, stainless steel), please use only suitable cleaners without abrasives.

HANDLING, STORAGE, AND PROTECTION OF ALUMINUM

The following precautions are recommended to protect the material against damage. Following these precautions will help ensure early acceptance of your products and workmanship.

A. HANDLE CAREFULLY.

All aluminum materials at job site must be stored in a safe place, well removed from possible damage by other trades. Cardboard wrapped or paper interleaved materials must be kept dry.

B. CHECK ARRIVING MATERIALS.

Check for quantities and keep records of where various materials are stored.

C. KEEP MATERIALS AWAY FROM WATER, MUD, AND SPRAY.

Prevent cement, plaster or other materials from damaging the finish.

D. PROTECT THE MATERIALS AFTER ERECTION.

Protect erected frame with polyethylene or canvas splatter screen. Cement, plaster, terrazzo, other alkaline solutions, and acid based materials used to clean masonry are harmful to the finish. If any of these materials come in contact with the aluminum, immediately remove with water and mild soap.

FALLBROOK, DOOR AND HINGE LIMITATION

Maximum door width = 36" (914mm)


Maximum door height = 118" (2997mm)

Maximum door weight = 190lbs (86kg)

Number of hinges required:

- ♦ 2 hinges - door weight up to 110lbs (50kg) OR door height up to 80" (2032mm)
- ♦ 3 hinges - door weight over 110lbs (50kg) and up to 190lbs (86kg) OR door heights 80" to 98-7/16"
- ♦ 4 hinges - door height over 98-7/16" to maximum height 118" (3000mm) regardless of weight.

Recommended hinge locations:

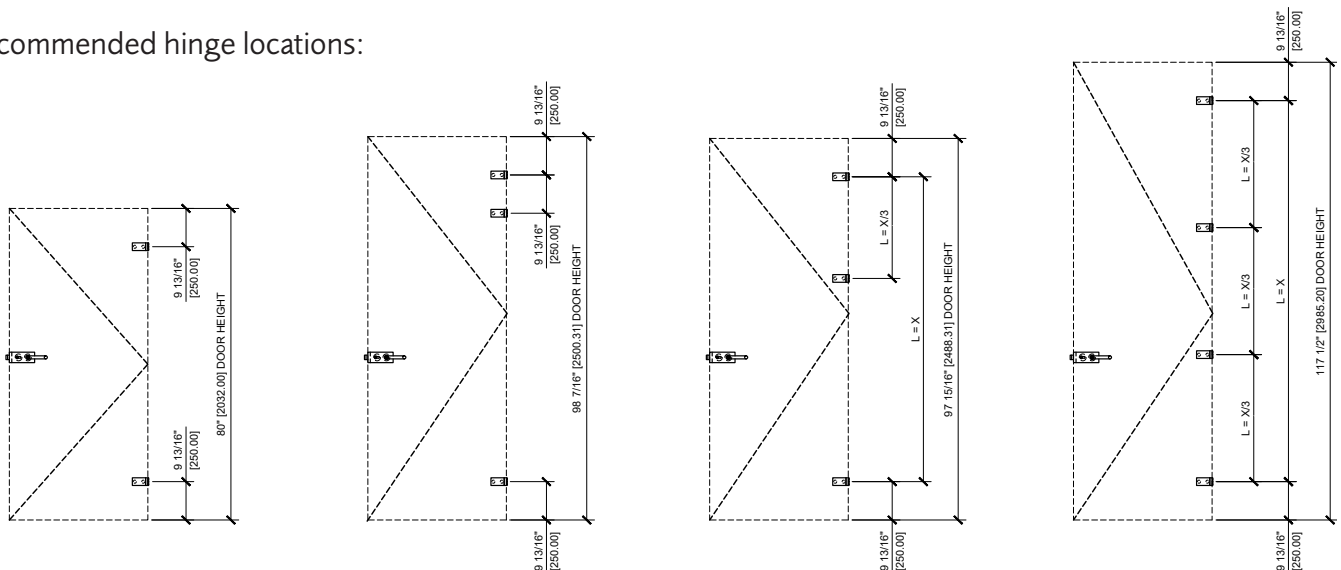








IMPORTANT: READ THIS MANUAL THOROUGHLY BEFORE BEGINNING INSTALLATION

EXTRUSION IDENTIFICATION







We have placed an Indicator Label on the inside or back side of each part before final packaging. Use the Identification Key (below) to organize and lay out each FALLBROOK / FALLBROOK XL / FALLBROOK NY Partition System before proceeding with the assembly process.

NOTE: Read these instructions carefully to identify the parts needed for your particular installation.

6M EXTRUSION
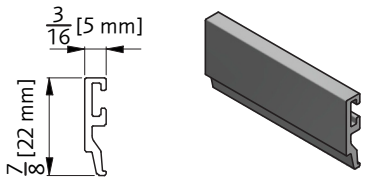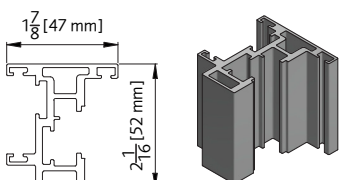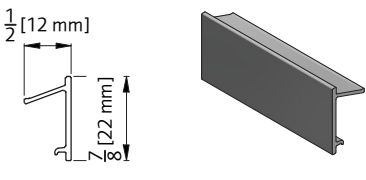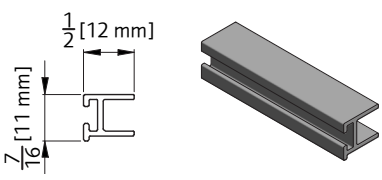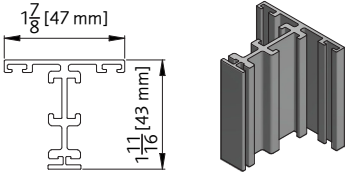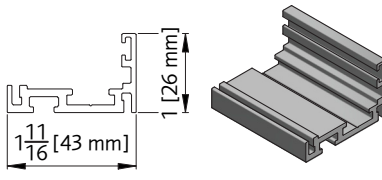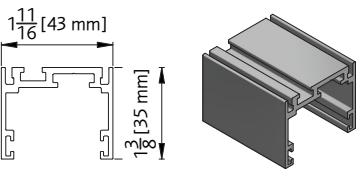
<p>FALLBROOK / XL / XL NY</p>  <p>FCLPD6BN / FCLPD6MBL / FCLPD6SA</p>	<p>FALLBROOK XL / XL NY</p>  <p>FXBD6BN / FXBD6MBL / FXBD6SA</p>	<p>FALLBROOK XL / XL NY</p>  <p>FXCLPD6BN / FXCLPD6MBL / FXCLPD6SA</p>
<p>FALLBROOK XL / XL NY</p>  <p>FXNYF6MBL / FXNYF6SA</p>	<p>FALLBROOK XL / XL NY</p>  <p>FXFRMT6BN / FXFRMT6MBL / FXFRMT6SA</p>	<p>FALLBROOK XL / XL NY</p>  <p>FXFRMD6BN / FXFRMD6MBL / FXFRMD6SA</p>
<p>FALLBROOK XL / XL NY</p>  <p>FXTPD6BN / FXTPD6MBL / FXTPD6SA</p>		


3 & 1.1M EXTRUSION SETS
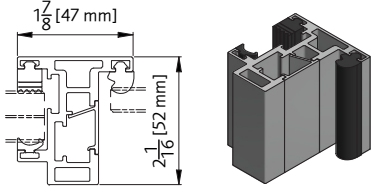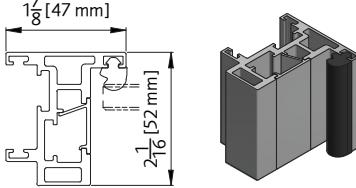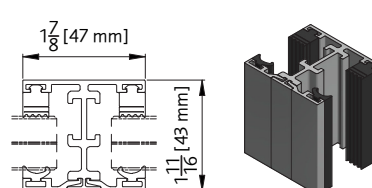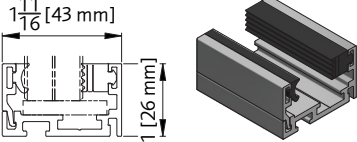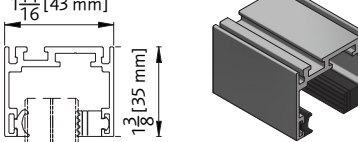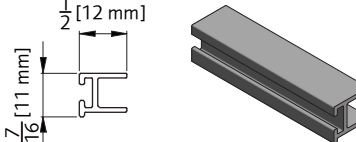
<p>FALLBROOK XL / XL NY</p>  <p>FXG2GD1BN / FXG2GD1MBL / FXG2GD1SA / FXG2GD3BN / FXG2GD3MBL / FXG2GD3SA</p>	<p>FALLBROOK XL / XL NY</p>  <p>FXW2GD1BN / FXW2GD1MBL / FXW2GD1SA / FXW2GD3BN / FXW2GD3MBL / FXW2GD3SA</p>	<p>FALLBROOK XL / XL NY</p>  <p>FXG2GF3BN / FXG2GF3MBL / FXG2GF3SA</p>
<p>FALLBROOK XL / XL NY</p>  <p>FXW2GF3BN / FXW2GF3MBL / FXW2GF3SA</p>	<p>FALLBROOK XL / XL NY</p>  <p>FXC2GF3BN / FXC2GF3MBL / FXC2GF3SA</p>	<p>FALLBROOK XL / XL NY</p>  <p>FXNYF3MBL / FXNYF3SA</p>


COMPONENTS

<p>FALLBROOK / XL / XL NY</p> <p>FFCC</p>	<p>FALLBROOK / XL / XL NY</p> <p>FXCH</p>	<p>FALLBROOK / XL / XL NY</p> <p>FFCCL</p>
<p>FALLBROOK XL / XL NY</p> <p>FXCZ</p>	<p>FALLBROOK XL / XL NY</p> <p>FXSP</p>	<p>FALLBROOK XL / XL NY</p> <p>FXDSP</p>
<p>FALLBROOK XL NY</p> <p>no Article No. yet</p>	<p>FFALLBROOK / XL / XL NY</p> <p>FFP16BL / FFP16GR</p>	<p>FALLBROOK / XL / XL NY</p> <p>FFPBL / FFPBL25 / FFPGR / FFPGR25</p>
<p>FALLBROOK / XL / XL NY</p> <p>FRGBL / FRGBL25 / FRGGR / FRGGR25</p>	<p>ALLBROOK XL / XL NY</p> <p>FXDJBL / FYDJGR</p>	<p>FALLBROOK / XL / XL NY</p> <p>FFP14BL / FFP14GR</p>
<p>FALLBROOK XL / XL NY</p> <p>FXHHN</p>	<p>FALLBROOK XL / XL NY</p> <p>FXNYK</p>	<p>FALLBROOK XL NY</p> <p>FXNYBMBL / FXNYBSA</p>

MEASUREMENT GUIDE FOR PLANNING

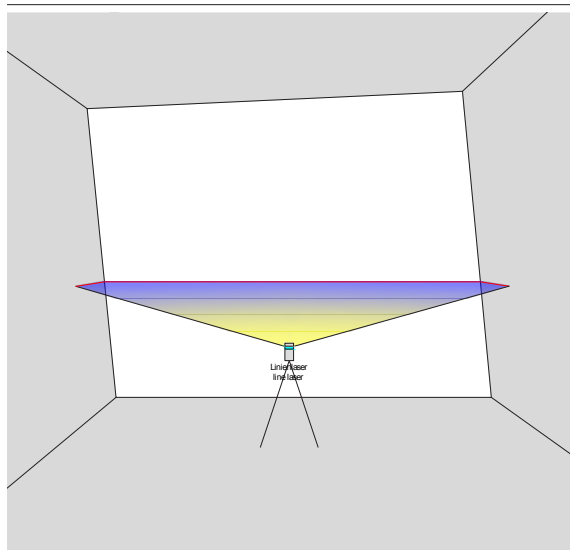

Step 1:
Set up self-leveling line laser.

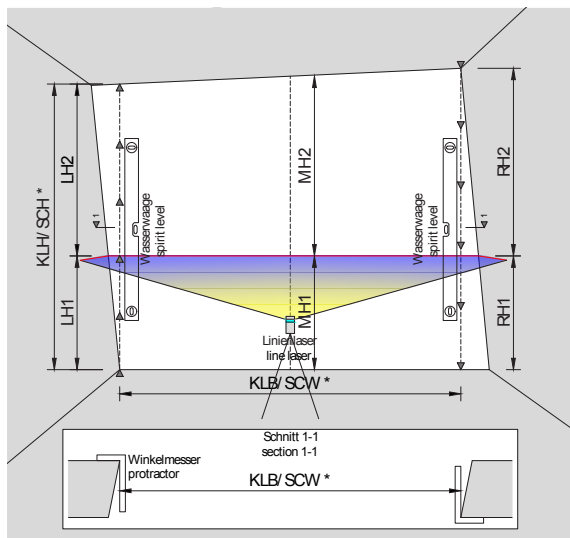

Step 2:
Take measurements for planning.


LEGEND

LH1 left height 1
LH2 left height 2
MH1 middle height 1
MH2 middle height 2
RH1 right height 1
RH2 right height 2

*SCH smallest clear height

*SCW smallest clear width

*relevant measurement for the planning


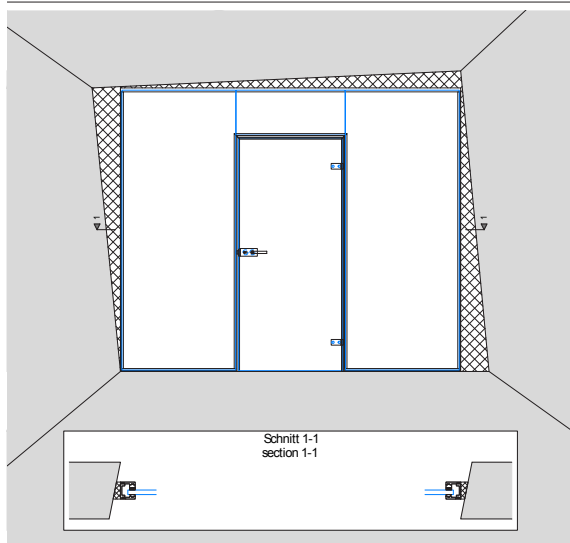


Step 3:
Install AL-OFFICE system and, if necessary backfill the space between the profile and the masonry.







Backfilling required

MILLING GROOVE FOR THE DOOR LOCK SYSTEM FALLBROOK

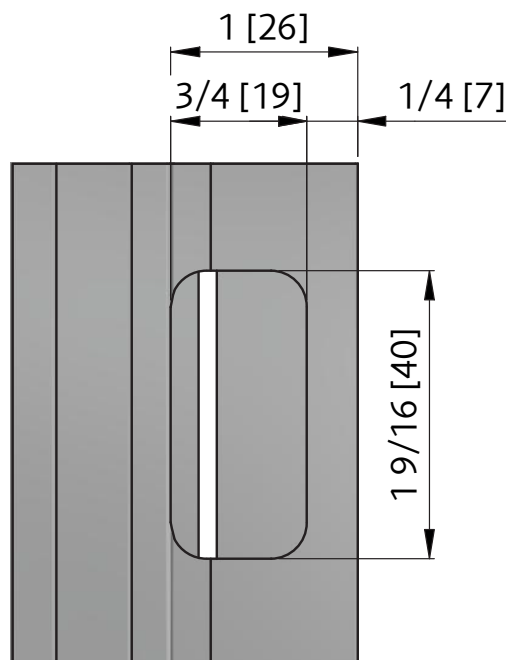
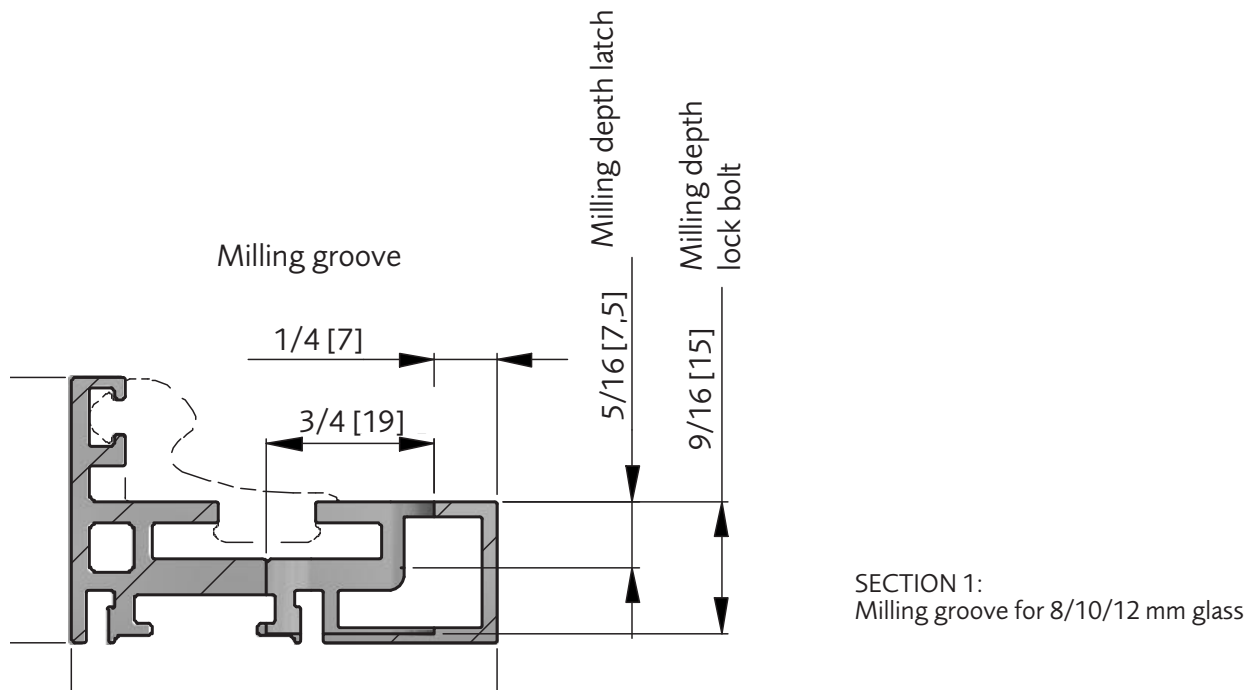


GLASS PREP

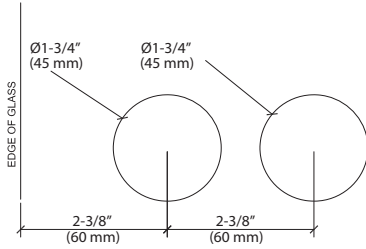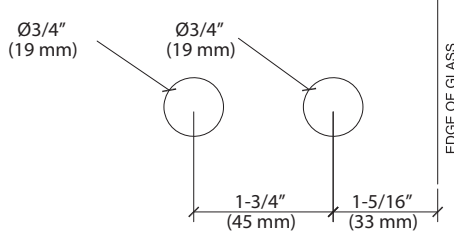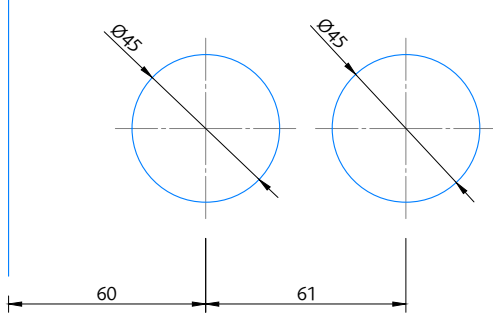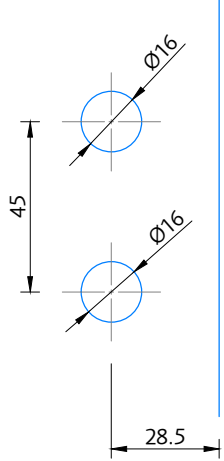LOCK:	HINGE WITH FRAME PIECE:
FLKSxx LOCK FLSxx LOCK	FHSXX HINGE FHDXX HINGE
	
LOCK:	HINGE WITH FRAME PIECE:
STUDIO RONDO (only available in sets) FDSETDSA / FDSETDMBL / FDSETDBN FDSETKDSA / FDSETKDMBL / FDSETKDBN OFFICE CLASSIC (only available in sets) FDSETSSA / FDSETSMBL / FDSETSBN FDSETKSSA / FDSETKSMBL / FDSETKSBN	OFFICE JUNIOR FDHDSA / FDHDMBL / FDHDBN OFFICE CLASSIC FDHSSA / FDHSMBL / FDHSBN
	


ADJUST GASKET TO GLASS THICKNESS

The Gasket FFBL / FFBL25 / FFPGR / FFPGR25 is suitable for 5/16", 3/8" and 1/2" glass.
You can easily adjust the gasket.

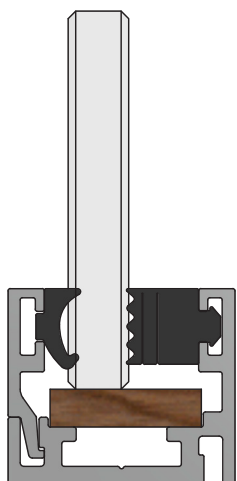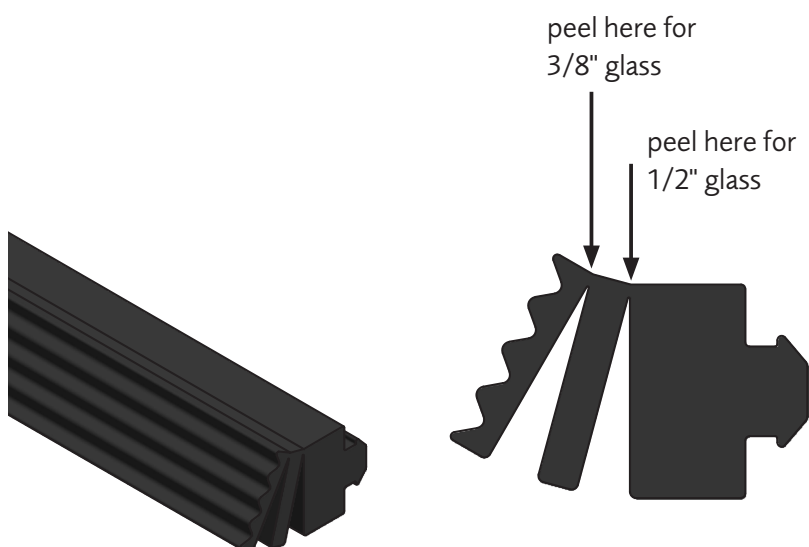


5/16" glass

use the entire gasket
as supplied

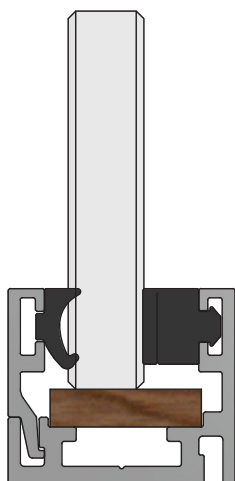

3/8" glass

peel off one layer of
the gasket

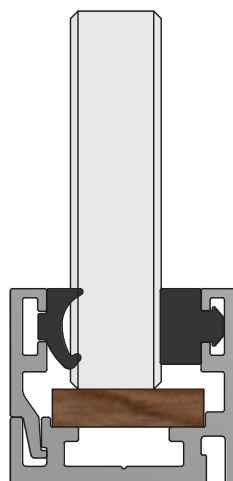
















1/2" glass







peel off both layer of
the gasket

ASSEMBLY INSTRUCTION FALLBROOK XL NY



ITEMS
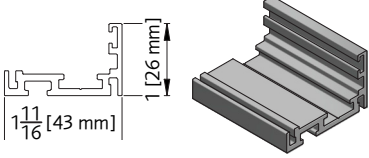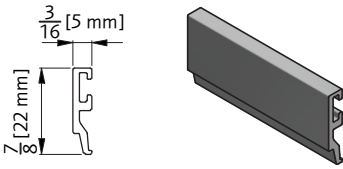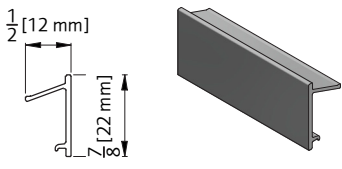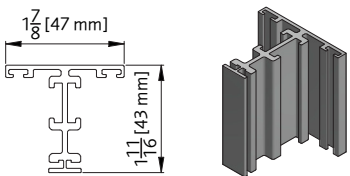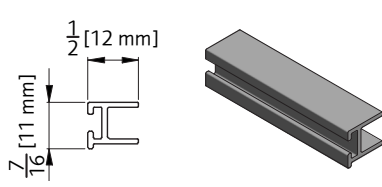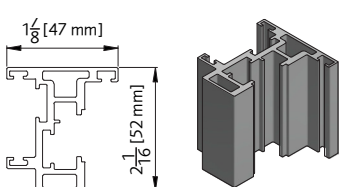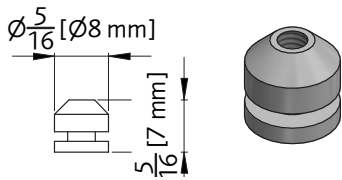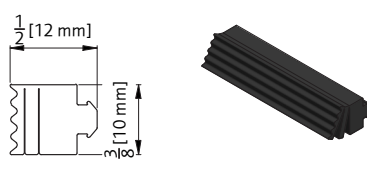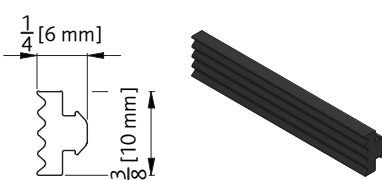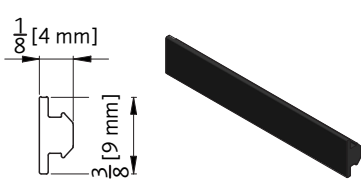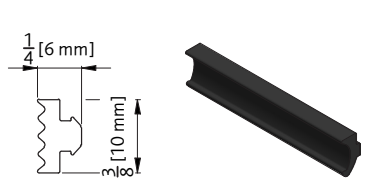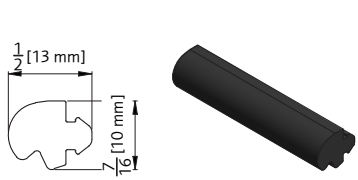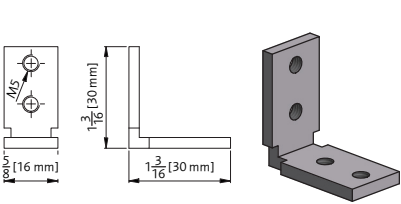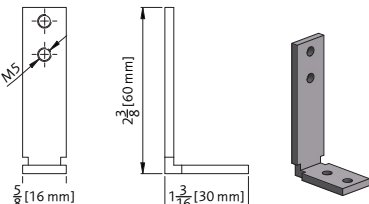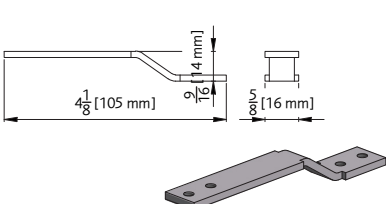
<p>1</p>  <p>FXFRMD6BN / FXFRMD6MBL / FXFRMD6SA</p>	<p>2</p>  <p>FCLPD6BN / FCLPD6MBL / FCLPD6SA</p>	<p>3</p>  <p>FXCLPD6BN / FXCLPD6MBL / FXCLPD6SA</p>
<p>4</p>  <p>FXFRMT6BN / FXFRMT6MBL / FXFRMT6SA</p>	<p>5</p>  <p>FXNYF6MBL / FXNYF6SA / FXNYF3MBL / FXNYF3SA</p>	<p>6</p>  <p>FXBD6BN / FXBD6MBL / FXBD6SA</p>
<p>7</p>  <p>FXNYK</p>	<p>8</p>  <p>FFPBL / FFPBL 25 / FFGR / FFGR25</p>	<p>9</p>  <p>FFP14BL / FFP14GRV</p>
<p>10</p>  <p>FFP16BL / FFP16GR</p>	<p>11</p>  <p>FRGBL / FRGBL25 / FRGGR / FRGGR25</p>	<p>12</p>  <p>FXDJBL / FYDJGR</p>
<p>13</p>  <p>FFCC</p>	<p>14</p>  <p>FFCL</p>	<p>15</p>  <p>FXCZ</p>
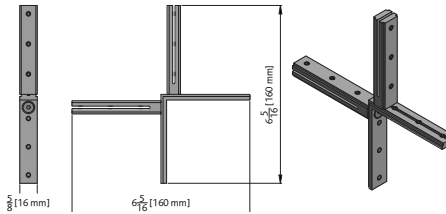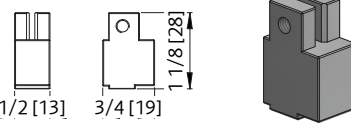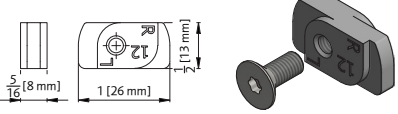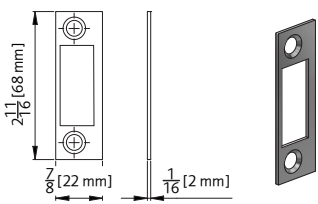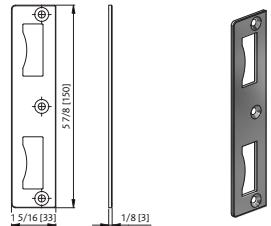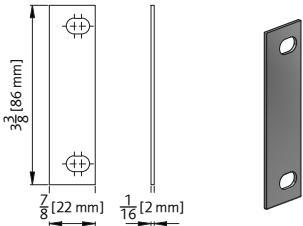
<p>16</p>  <p>noch keine Artikelnummer</p>	<p>17</p>  <p>FXNYBMBL / FXNYBSA</p>	<p>18</p>  <p>FXHHN</p>
<p>19</p>  <p>FXSP</p>	<p>20</p>  <p>FDSP</p>	<p>21</p>  <p>FXDSP</p>


FOR POWDER COATED SURFACES IT IS RECOMMENDED TO USE SOAPY WATER FOR INSERTING THE FIXATION RUBBER.

THE SYSTEM IS SO TO CHOOSE, THAT A PRE-ASSEMBLING ON A FLAT SURFACE IS POSSIBLE.


INSTALLATION FIXED GLAZING




A EQUIP THE PROFILE ENDINGS OF THE FRAME FXFRMT6XX* **4** PROFILE WITH FXNYBXX* **17**.

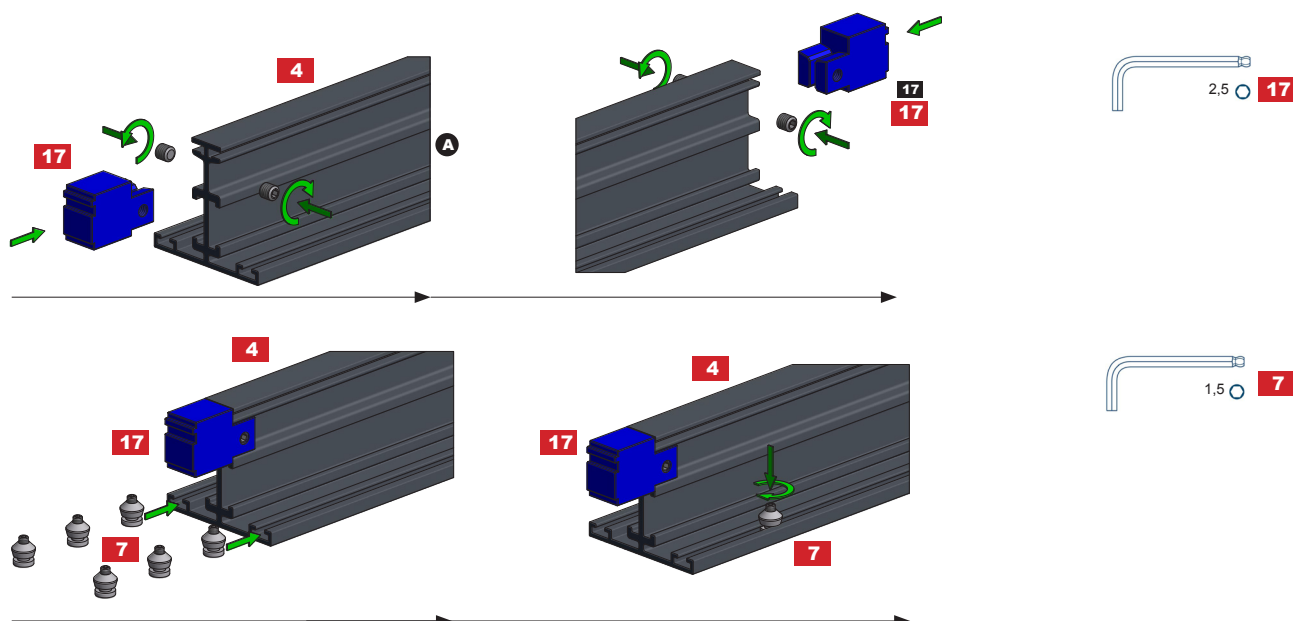

A SLIDE IN AND FIX THE REQUIRED NUMBER OF FXNYK **7** CLAMPING HEADS.


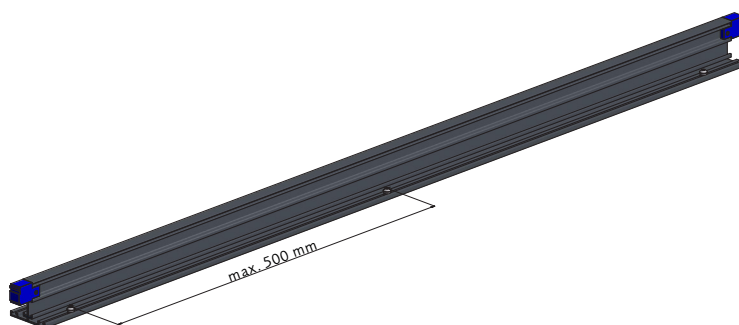


*...XX means different colours available, please see ITEMS



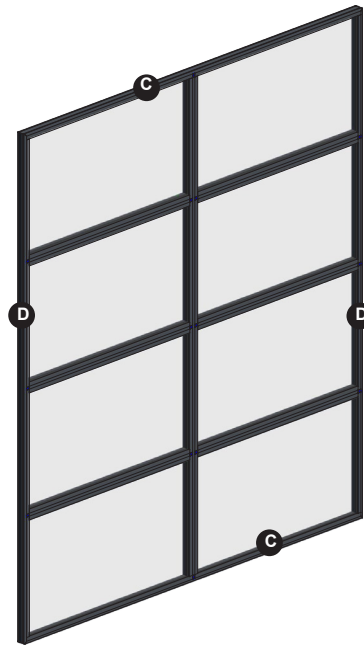


C & D ASSEMBLING THE OUTER FRAME


C & D SLIDE IN AND FIX THE REQUIRED NUMBER OF FXNYK **7** CLAMPING HEADS AND FFCCL **14** CONNECTORS.

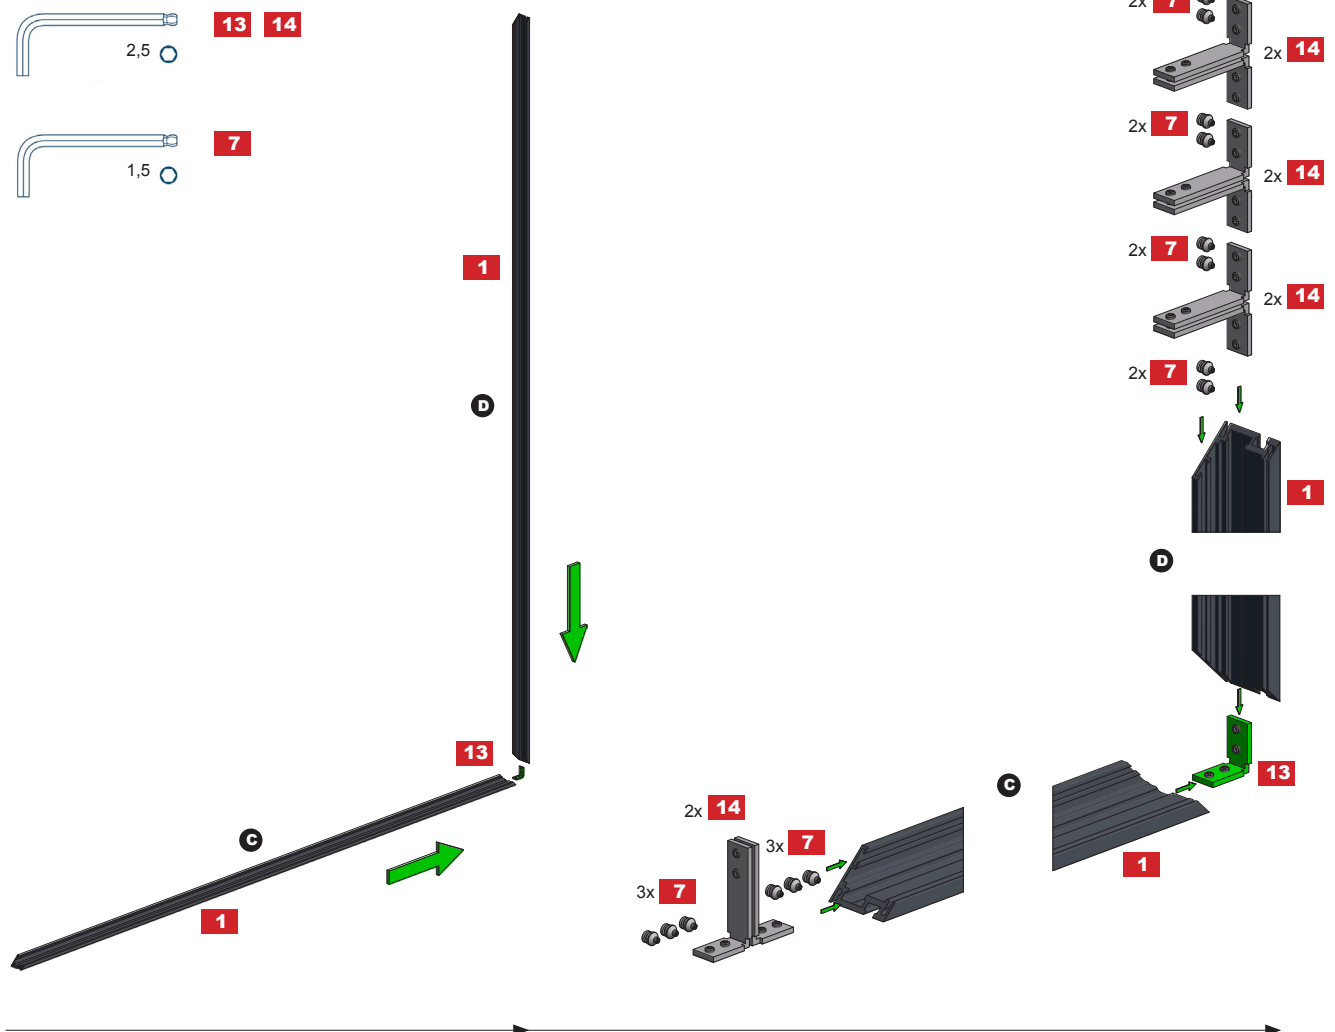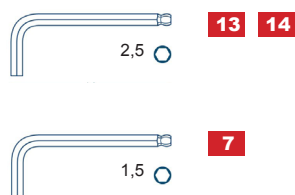

A & C,D SLIDE IN AND FIX THE HORIZONTAL PROFILES **A** – PLEASE PAY ATTENTION TO A GAP-FREE MOUNTING!

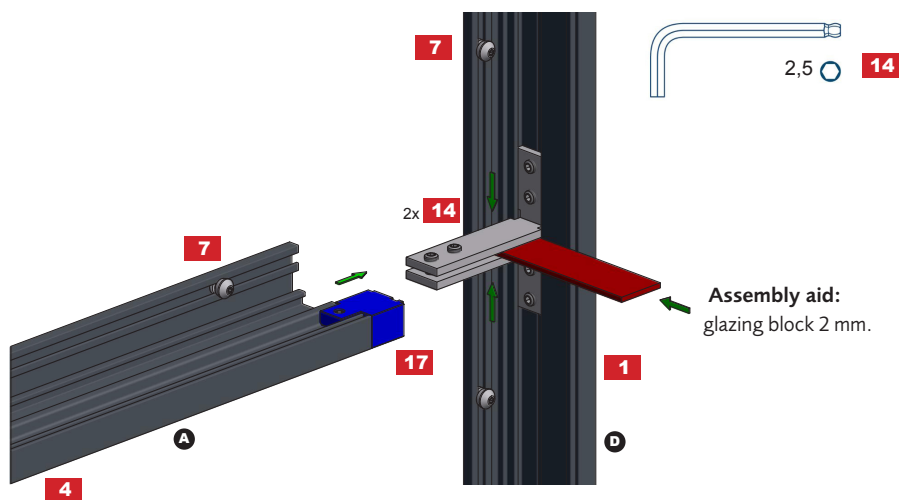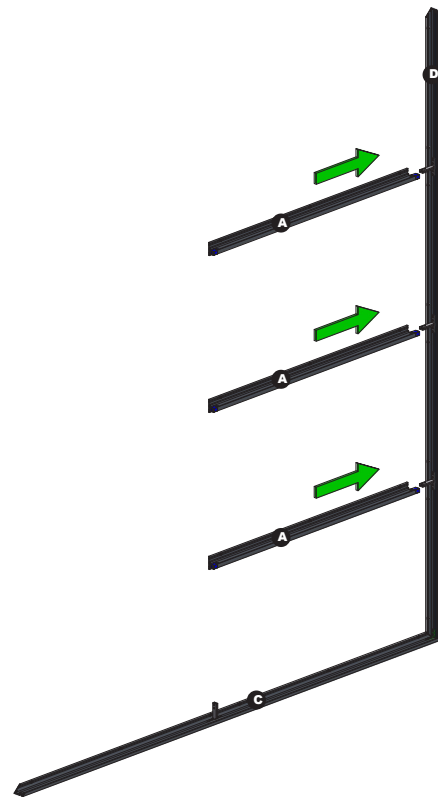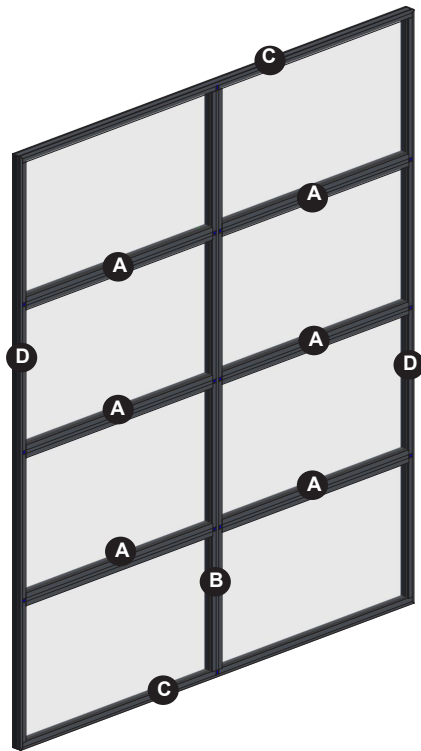


Detail: Gap-free mounting only.

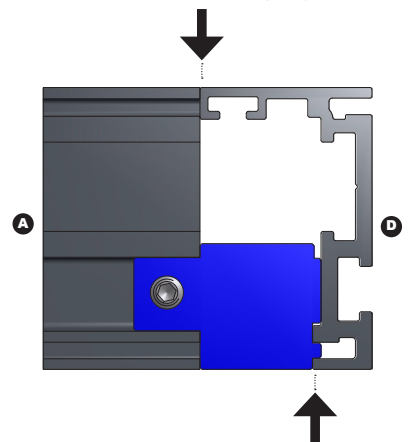


FOR AN EASIER POSITIONING OF THE FXFRMT6XX* **4** ALREADY INSERT IN THIS INSTALLATION STADIUM THE FITTING FCLPD6XX* **2** = ASSEMBLY AID.

*...XX means different colours available, please see ITEMS

B & A,C,D SLIDE IN VERTICAL FXFRMT6XX* **(B)** IN CONNECTOR OF PROFILE **(C)**. THEN CONNECT WITH HORIZONTAL PROFILES **(A)** AND SCREW EVERYTHING TOGETHER.

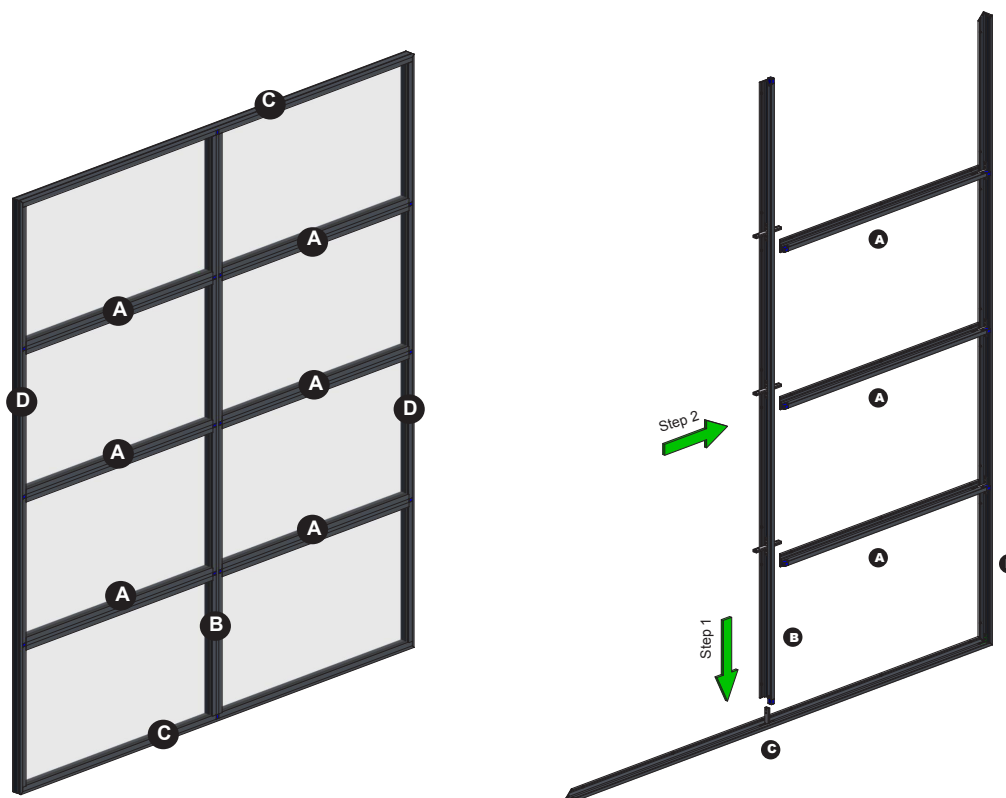

*ALREADY EQUIPPED WITH THE REQUIRED NUMBER OF FXNYK **7** AND FFCCL **14**.


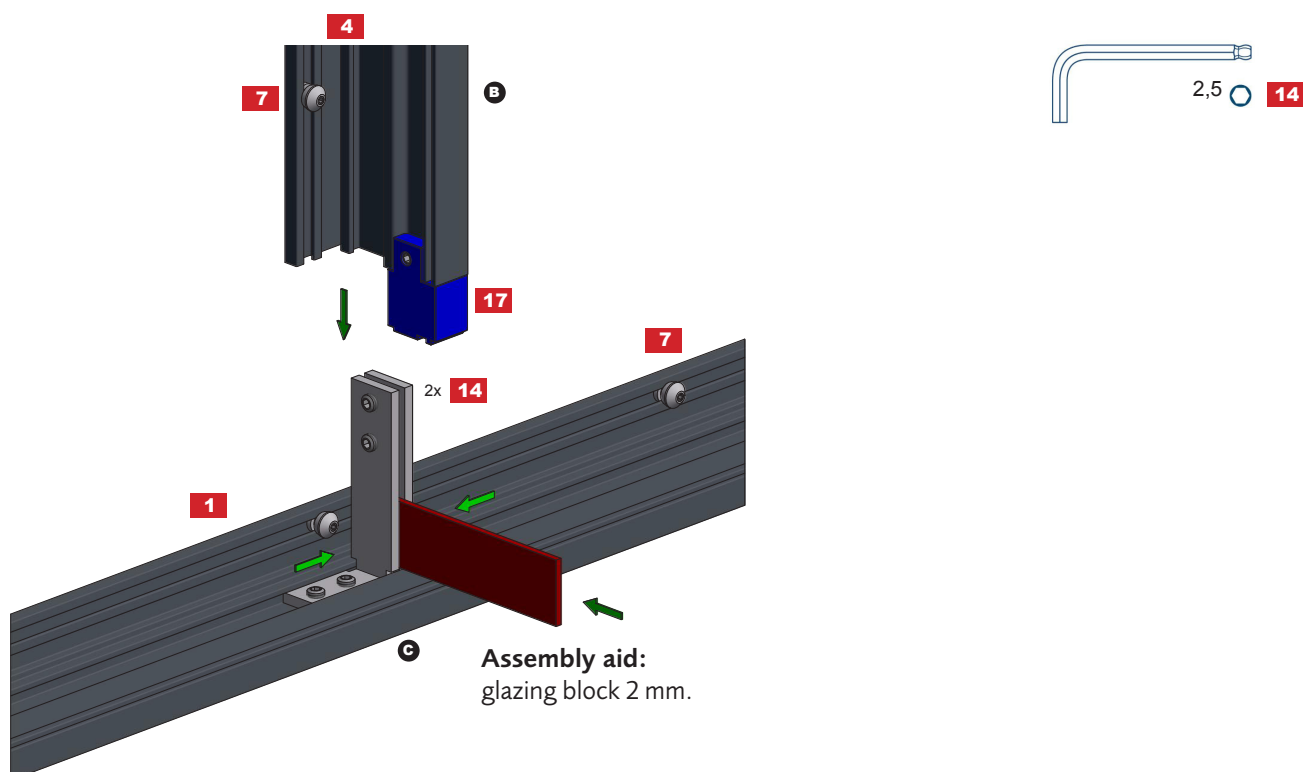


*...XX means different colours available, please see ITEMS




STEP 1: SLIDE IN AND FIX THE HORIZONTAL PROFILES **A**.


STEP 2: SLIDE IN AND FIX THE VERTICAL PROFILE **D**. THEN CONNECT WITH HORIZONTAL PROFILES **A** AND SCREW EVERYTHING TOGETHER.

STEP 3: SLIDE IN AND FIX THE HORIZONTAL PROFIL **C**.

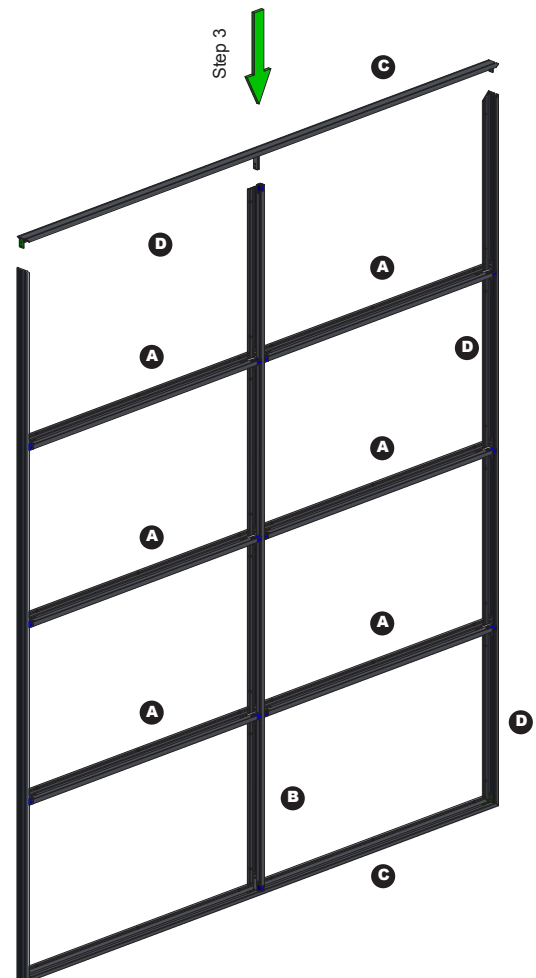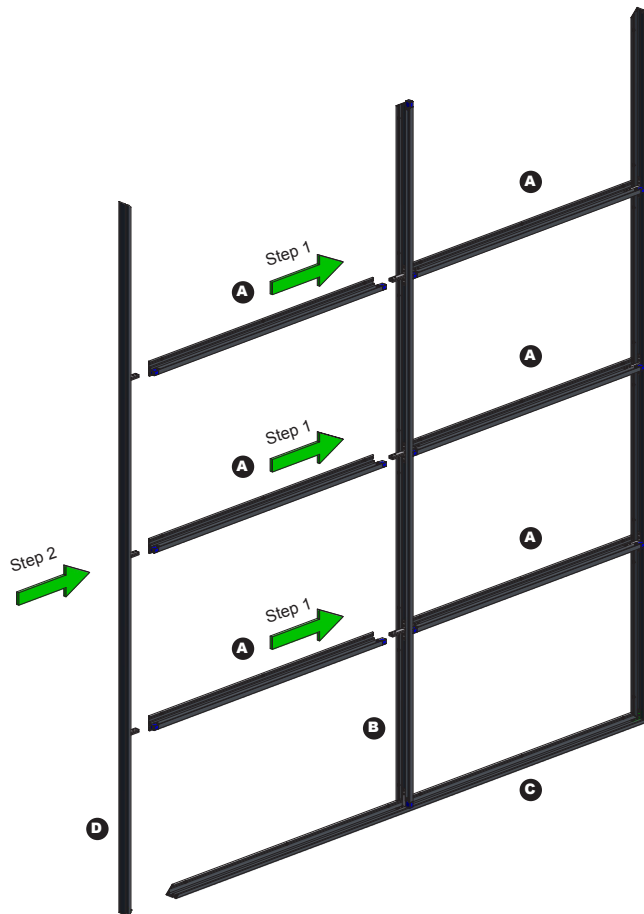



ASSEMBLY FOR ADAPTER PROFILE PLUS **4** FOR GLASS THICKNESS 8-16 MM.
 LENGTH ADAPTER PROFILE PLUS **4** = CW/CH + 10 MM.

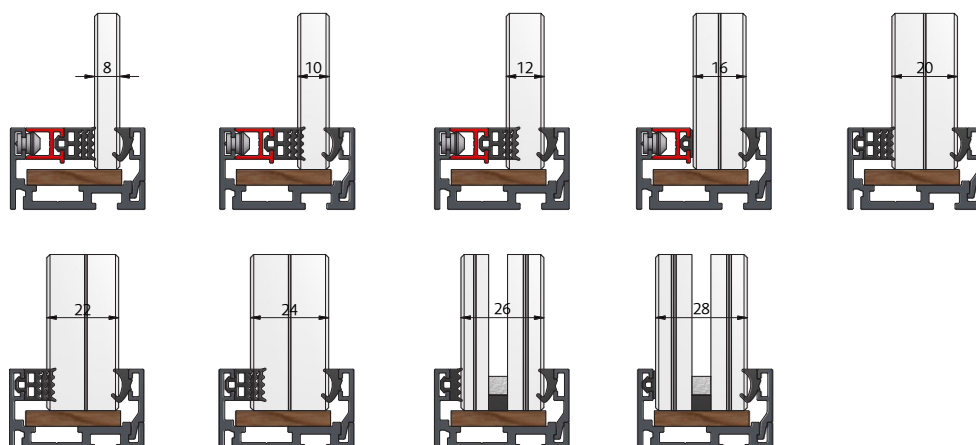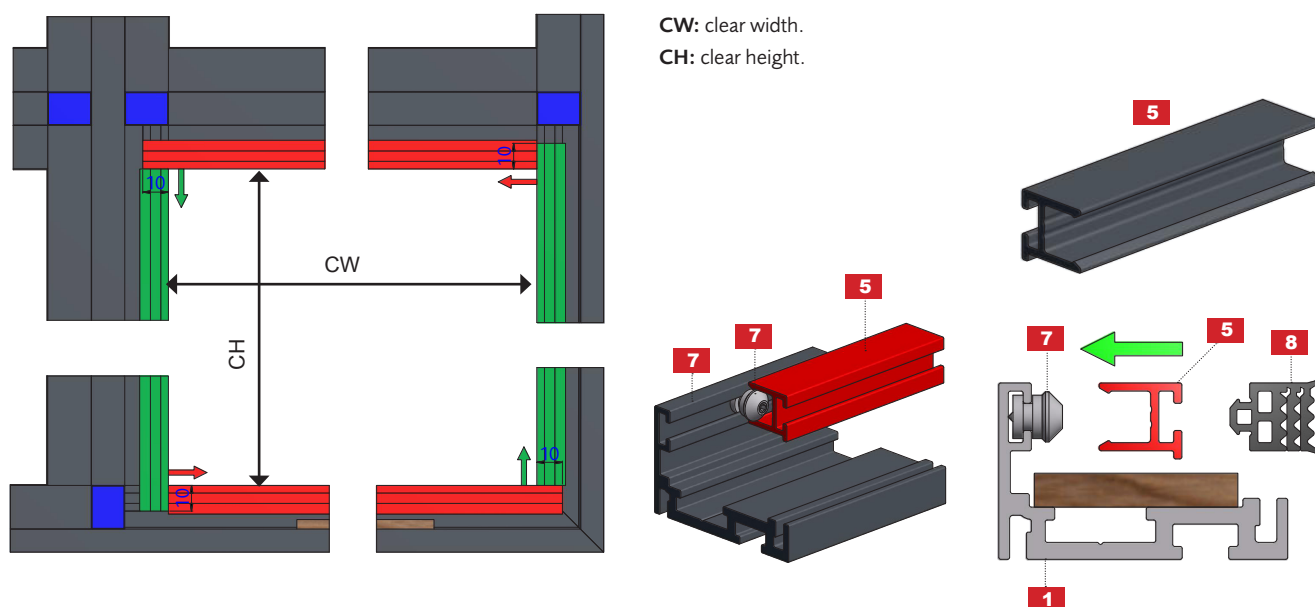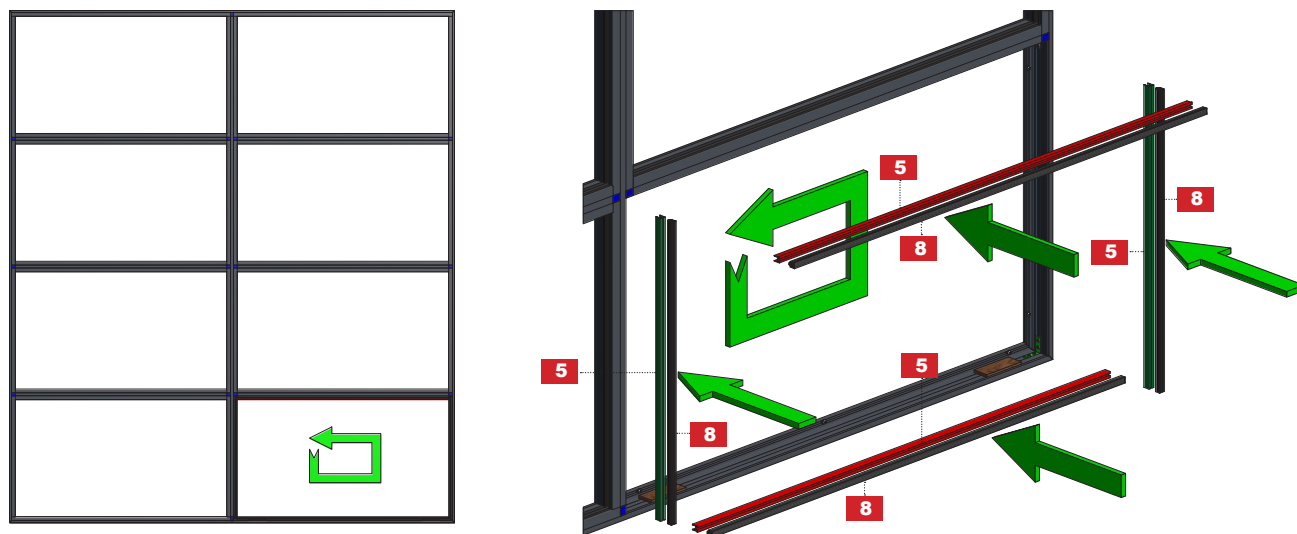

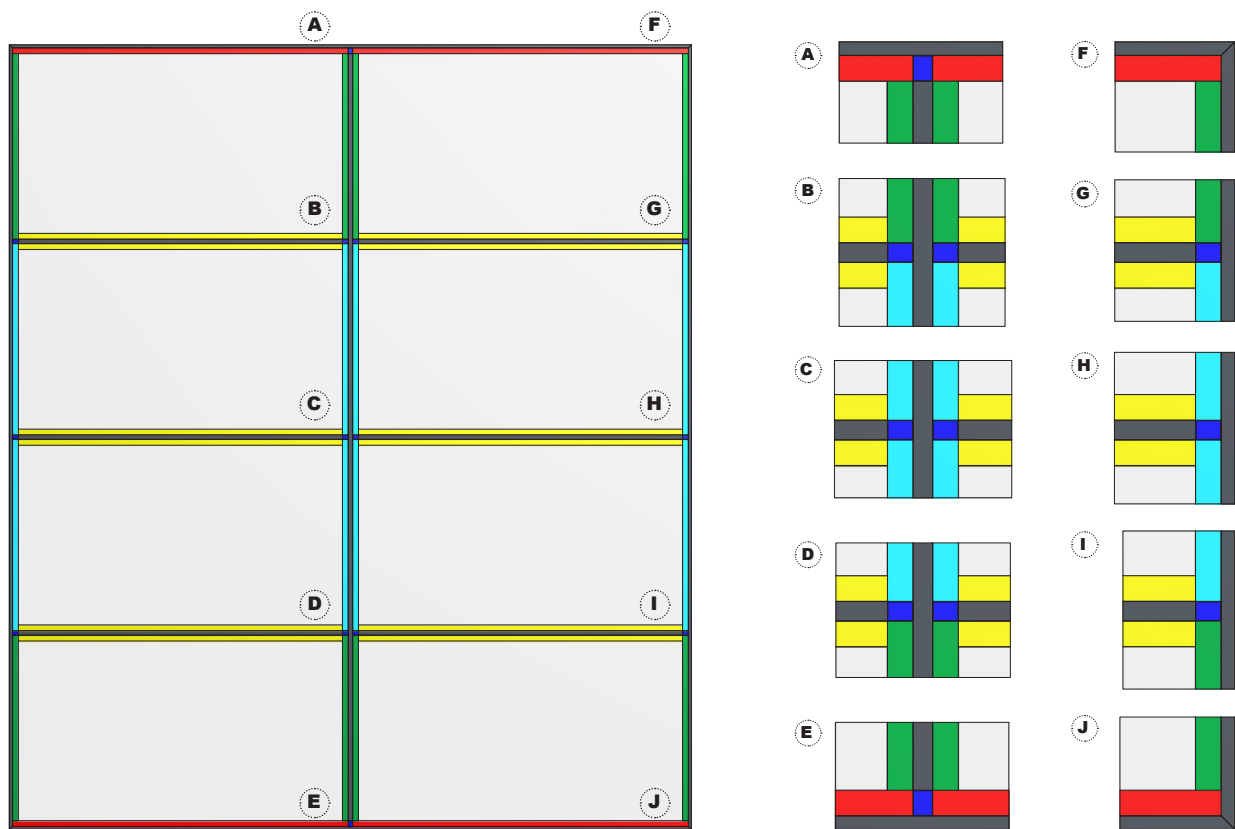FCLPDXX **2** AND GLASS INSTALLATION.


STEP 1: CLIP THE FCLPDXX* **2** INTO THE PROFIL **1**.

STEP 2: INSERT THE GASKET **11** IN BETWEEN.

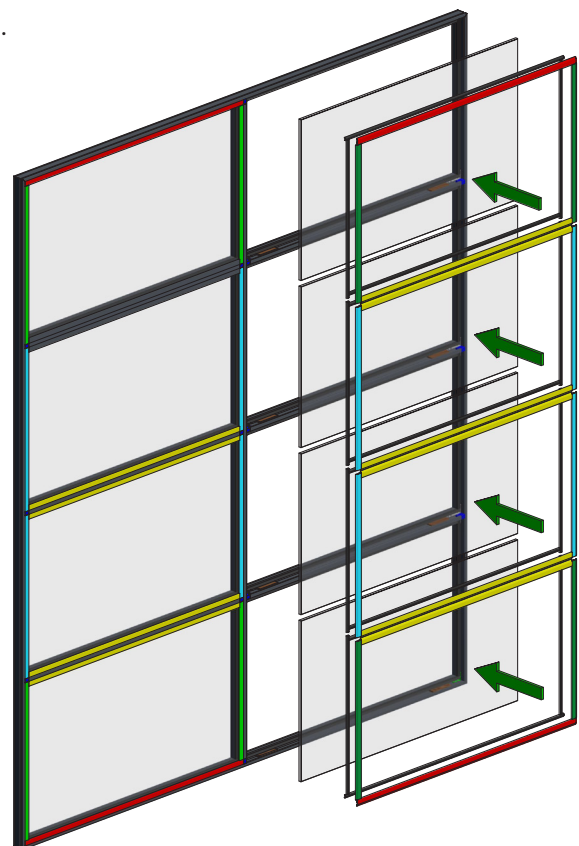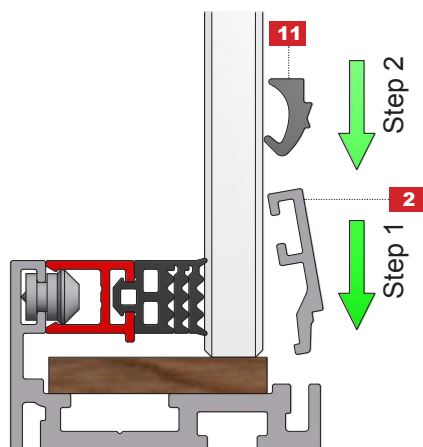



*...XX means different colours available, please see ITEMS

INSTALLATION WITH DOOR FRAMES

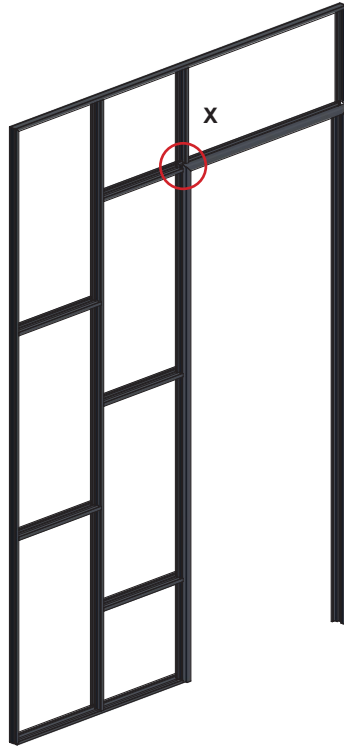


X DOOR CONNECTION

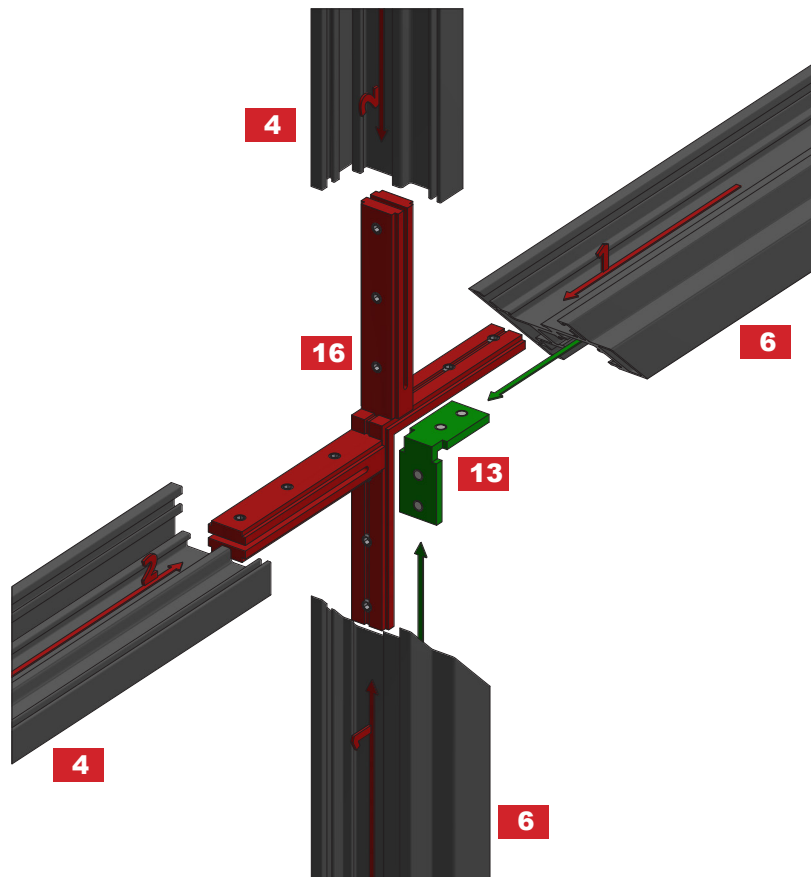


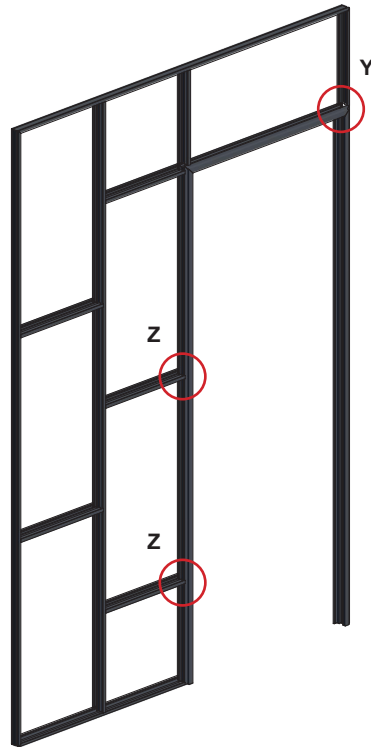

Y DOOR CONNECTION

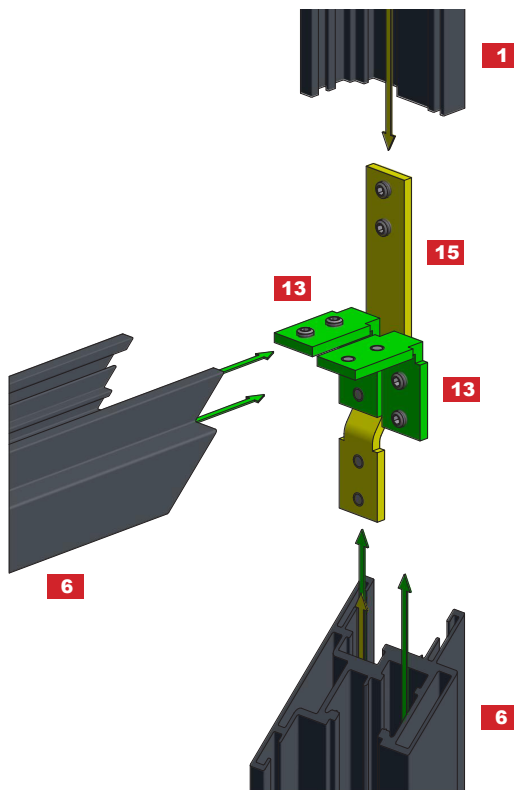

Z DOOR CONNECTION

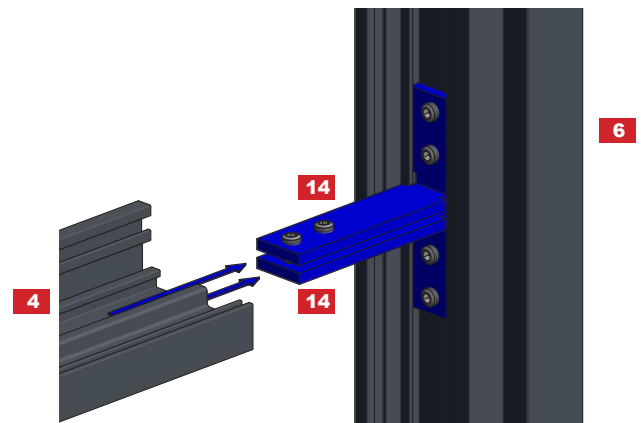

DOOR HINGE ASSEMBLY



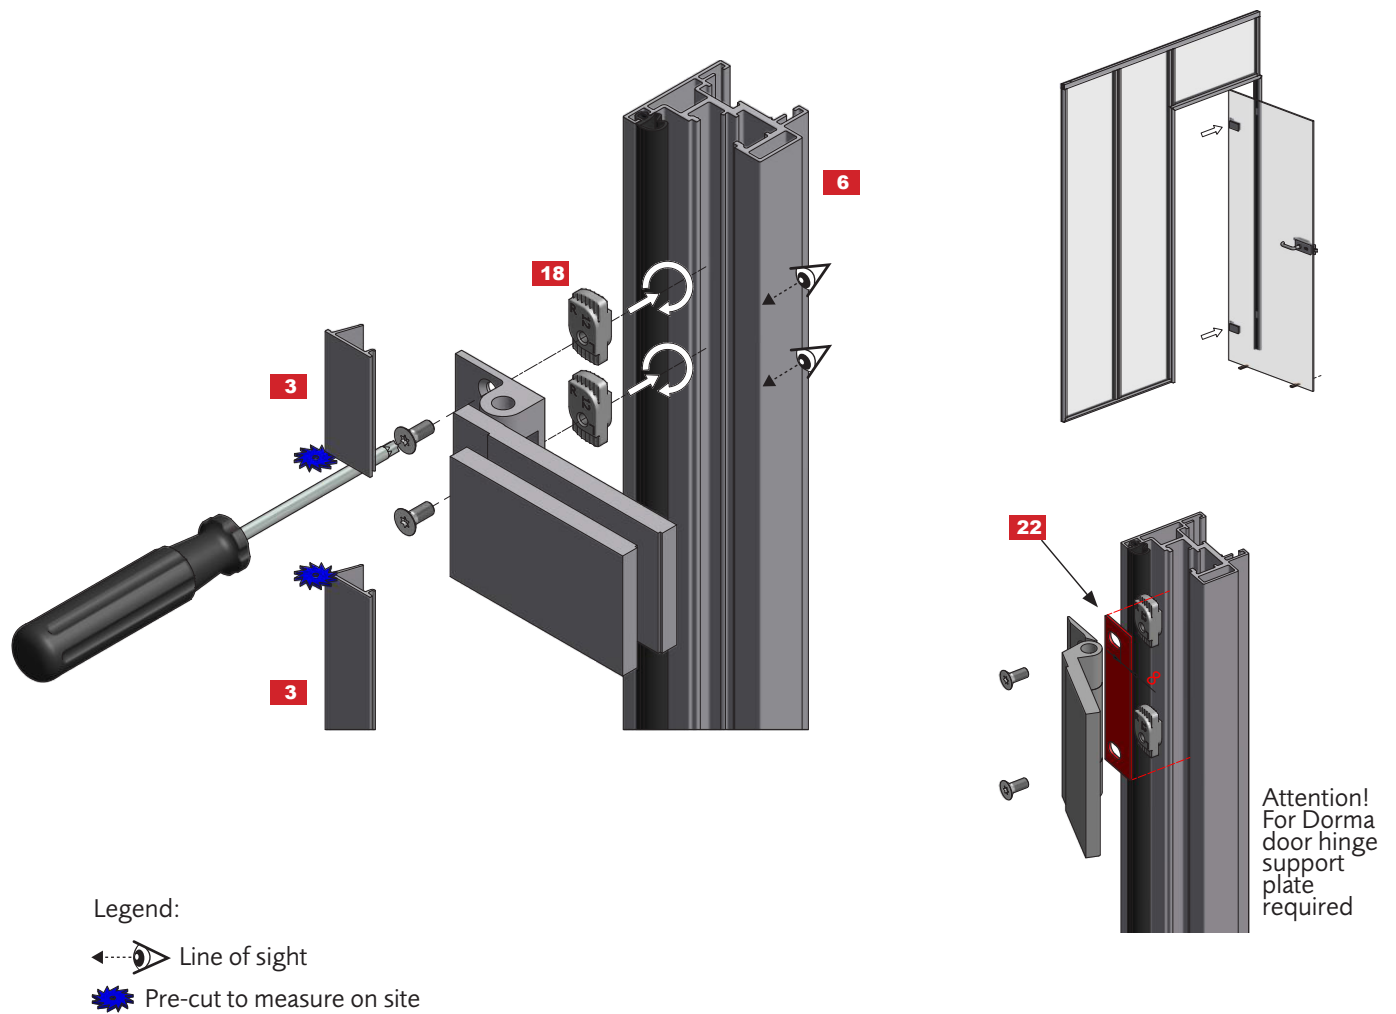



Table	Strike plate		Door hinge	
Glass thickness	3/8"	1/2"	3/8"	1/2"
LH	H4	H3	H1	H3
RH	H3	H4	H2	H4

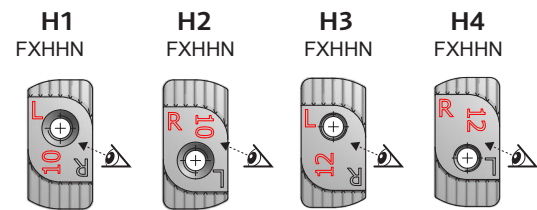


H1 DIN L10

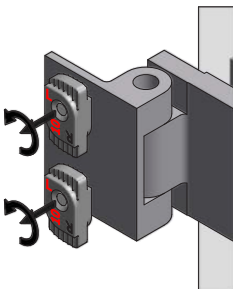


H2 DIN R10

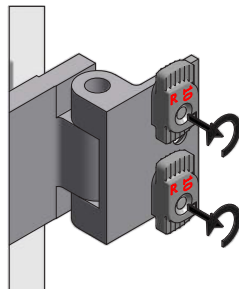


H3 DIN L12

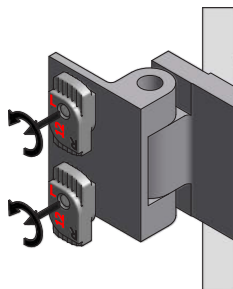

H4 DIN R12

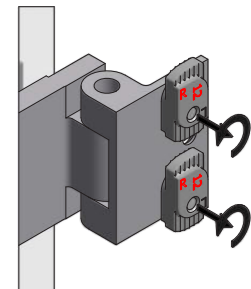


DOOR STRIKE ASSEMBLY

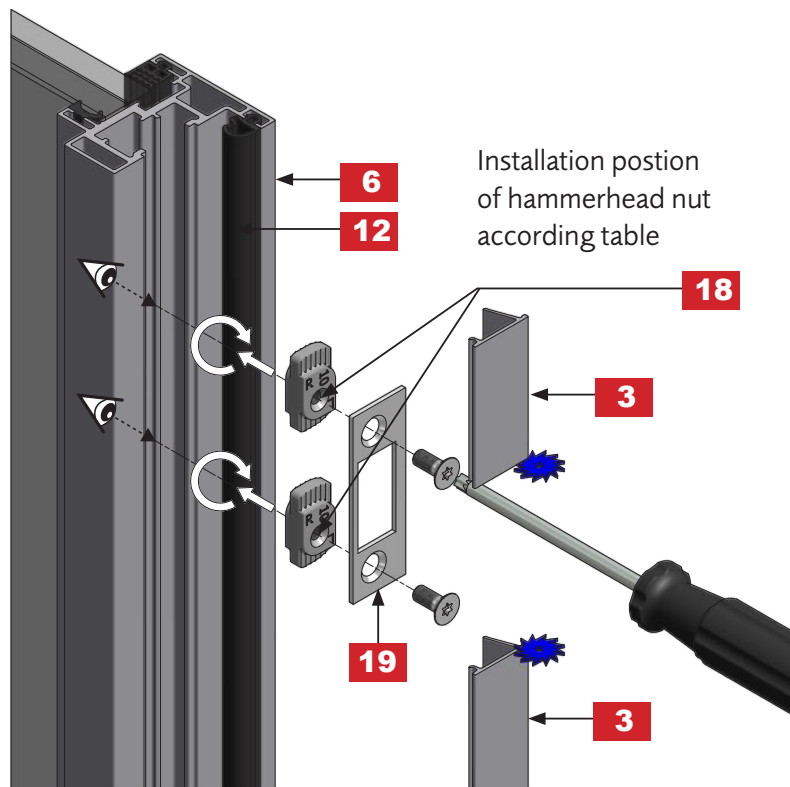


Mounting position Striking plate

Glass thickness 3/8'

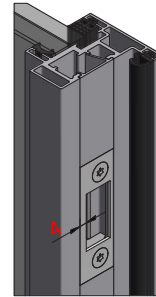

Glass thickness 1/2'

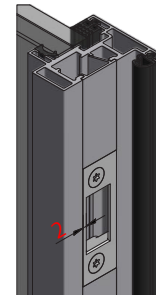


Legend:

Line of sight


Pre-cut to measure on site

Table	Strike plate		Door hinge	
	3/8'	1/2'	3/8'	1/2'
LH	H4	H3	H1	H3
RH	H3	H4	H2	H4

H1
FXHHN




H2
FXHHN




H3
FXHHN




H4
FXHHN




H4 DIN L10

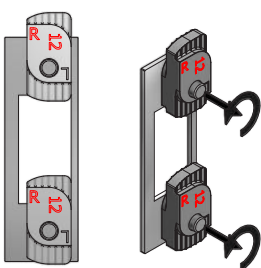

H3 DIN R10

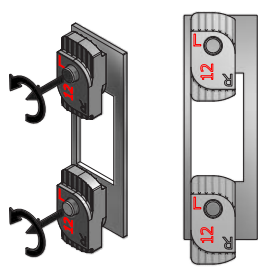

H3 DIN L12

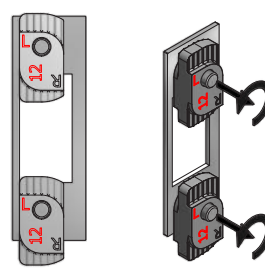

H4 DIN R12

